

# PEB383 Evaluation Board Release Notes (3.3V/Universal)

---

Thank you for purchasing the 3.3V/Universal version of the PEB383 evaluation board.

To assist with your testing of the board's features and functions, we have included a copy of the *PEB383 Evaluation Board User Manual*. For more PEB383 support resources, please see the Support section of the IDT website.


If you have any technical questions about the PEB383 evaluation board, please contact IDT Technical Support at [http://www.idt.com/?id=12&source=support\\_menu](http://www.idt.com/?id=12&source=support_menu).

## Important Instructions


1. This evaluation board is configured for 3.3V or Universal PCI plug-in cards only.

The plug-in cards can only be connected with their faceplate oriented the same way as the evaluation board faceplate (see the Correct diagram below).

### Correct

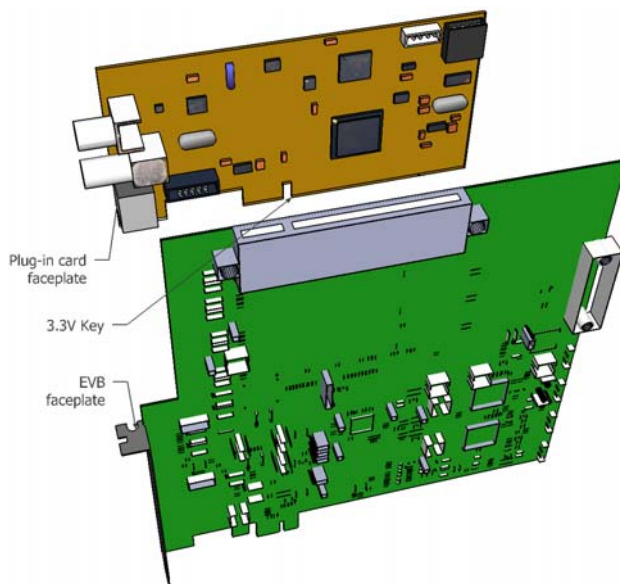

### Incorrect

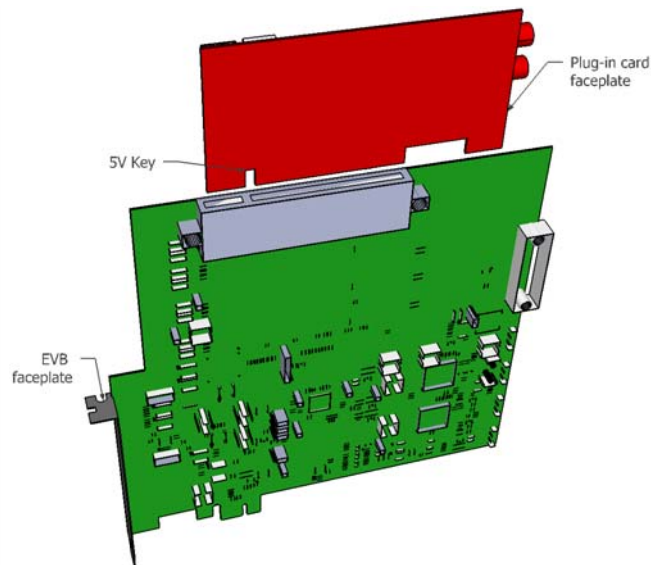

2. Do not use a keying adaptor to connect a 5V keyed card on the evaluation board unless the evaluation board has been modified for 5V operation (see the following diagram).

If you need to use the evaluation board with 5V keyed plug-in cards, please contact IDT Technical Support at [http://www.idt.com/?id=12&source=support\\_menu](http://www.idt.com/?id=12&source=support_menu).

### Incorrect

