


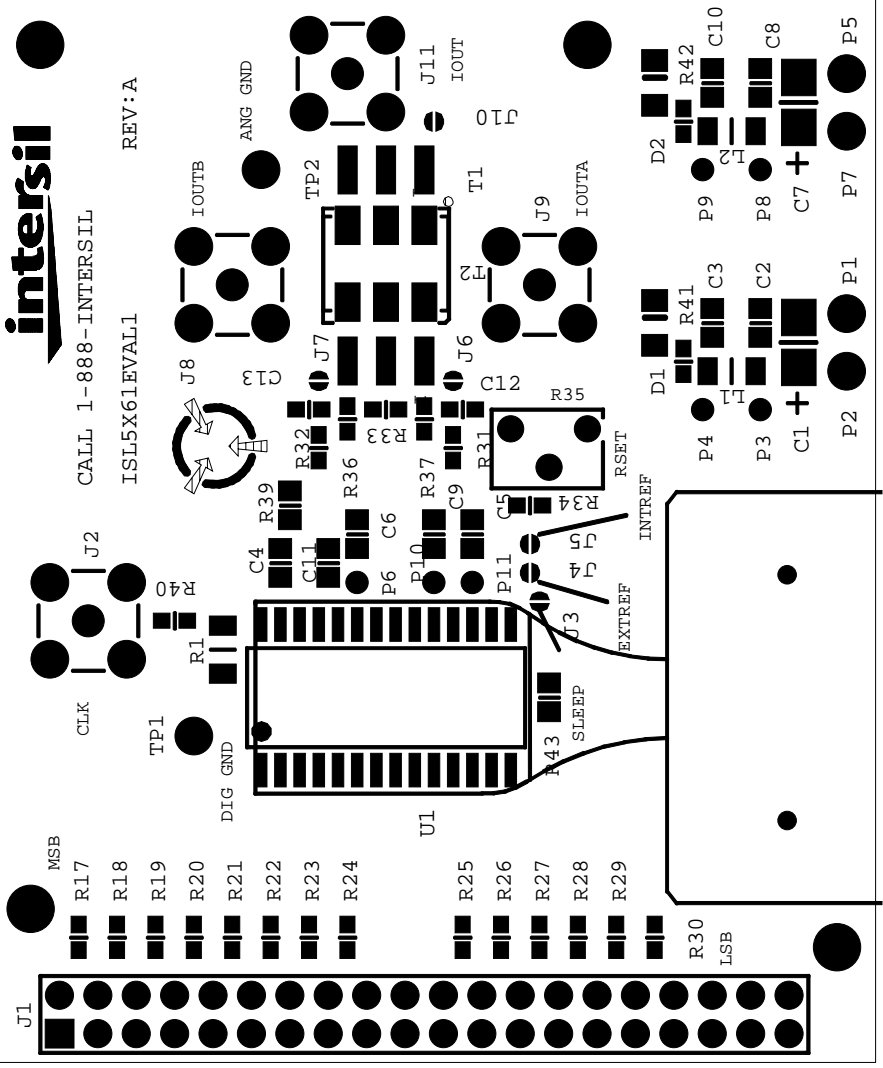

CALL 1-888-INTERSIL

REV:A

ISL5X61EVAL1



J1

MSB

R17

R18

R19

R20

R21

R22

R23

R24

R25

R26

R27

R28

R29

R30

LSB

CLK

J2

TP1

R1

R40

DIG GND

C4

R39

C11

R32

R36

C6

P6

C10

P10

R37

C9

R31

P11

C5

R35

SLEEP

J3

EXTREF

INTREF

J8

IOUTB

C10

TP2

J7

R32

R36

C6

P6

C10

P10

R37

C9

R31

P11

C5

R35

J9

IOUTA

J6

C12

T1

ANG GND

J11

IOUT

OLP

D1

R41

C3

P4

P3

C2

C1

P2

D2

R42

C10

P9

P8

C7

P7

P5

