

## RX Family

### Renesas Sensor Control Modules Firmware Integration Technology

#### Introduction

This application note explains the sensor control modules for HS300x and HS400x (Renesas high performance relative humidity and temperature sensor), FS2012, FS3000 and FS1015 (Renesas High Performance Flow Sensor Module), ZMOD4410, ZMOD4450, ZMOD4510, and RRH46410 (Digital Gas Sensors), RRH62000 (All-in-One Integrated Sensor), OB1203 (Heart Rate, Blood Oxygen Concentration, Pulse Oximetry, Proximity, Light and Color Sensor) and I2C communication middleware for Renesas sensors using Firmware Integration Technology (FIT).

These control modules acquire the sensor data using the I2C bus control FIT module (IIC FIT Module). And calculate relative humidity value [%RH] and temperature value [°C] for HS300x and HS400x, flow value [SLPM(Standard Litter Per Minute) or SCCM(Standard Cubic Centimeter per Minute)] for FS2012, air velocity value [m/sec] for FS3000 and FS1015, environmental gas value for ZMOD4410, ZMOD4450, ZMOD4510 and RRH46410, air quality parameters value (particulate matter, total volatile organic compounds, Indoor Air Quality Index, estimated carbon dioxide concentration, temperature and relative humidity) for RRH62000 and light/proximity/PPG value for OB1203.

Hereinafter, the modules described in this application note is abbreviated as following,

- Sensor Control module for FS1015: FS1015 FIT module (Note 1)
- Sensor Control module for FS2012: FS2012 FIT module (Note 1)
- Sensor Control module for FS3000: FS3000 FIT module (Note 1)
- Sensor Control module for HS300x: HS300x FIT module
- Sensor Control module for HS400x: HS400x FIT module
- Sensor Control module for OB1203: OB1203 FIT module
- Sensor Control module for RRH46410: RRH46410 FIT module (Note 2)
- Sensor Control module for RRH62000: RRH62000 FIT module
- Sensor Control module for ZMOD4410, ZMOD4450 and ZMOD4510: ZMOD4XXX FIT module (Note 2)
- I2C Communication Middleware module: COMMS FIT module

Note 1: Each Sensor Control module uses a "rm\_fsxxx\_api.h" file. Each module has its own header file.

Therefore, when using the following sensors in user system, please select one of the following:

FS1015 sensor and FS1015 FIT module  
 FS2012 sensor and FS2012 FIT module  
 FS3000 sensor and FS3000 FIT module.

For details of header files, refer to "2.5 Header Files".

Note 2: Each Sensor Control module uses a "rm\_zmod4xxx\_api.h" file. Each module has its own header file.

Therefore, when using the following sensors in user system, please select one of the following:

ZMOD4410, ZMOD4450 and ZMOD4510 sensors and ZMOD4XXX FIT module  
 RRH46410 sensor and RRH46410 FIT module

For details of header files, refer to "2.5 Header Files".

## Target Device

- **Sensors:**

- Renesas Electronics HS300x and HS400x High Performance Relative Humidity and Temperature Sensors (HS300x sensor and HS400x sensor)
- Renesas Electronics FS2012, FS3000 and FS1015 Renesas High Performance Flow Sensors (FS2012 sensor, FS3000 sensor and FS1015 sensor)
- Renesas Electronics OB1203 Heart Rate, Blood Oxygen Concentration, Pulse Oximetry, Proximity, Light and Color Sensor (OB1203 sensor)
- Renesas Electronics RRH46410 Firmware Configurable Air Quality (AQ) Module with Embedded Artificial Intelligence (AI) (RRH46410 sensor)
- Renesas Electronics RRH62000 All-in-One Integrated Sensor Module for PM2.5, RHT, TVOC, and eCO2 Detection (RRH62000 sensor)
- Renesas Electronics Digital Gas Sensors ZMOD4410 (ZMOD4410 Indoor Air Quality Platform), ZMOD4450 (ZMOD4450 Refrigeration Air Quality Sensor Platform) and ZMOD4510 (ZMOD4510 Outdoor Air Quality Platform)

- **RX Family MCUs:**

MCUs supported the following IIC FIT module

- I2C Bus Interface (RIIC) Module (RIIC FIT Module)
- Simple I2C Module (SCI\_IIC FIT Module) using Serial Communication Interface (SCI)

When using this application note with other Renesas MCUs, careful evaluation is recommended after making modifications to comply with the alternate MCU.

## Target Compiler

- Renesas Electronics CC-RX

**Terminology/Abbreviation****Table 1-1 Terminology/Abbreviation Lists**

<b>Terminology/Abbreviation</b>	<b>Description</b>
ACK	Acknowledge
COMMS FIT Module	Indicates communication driver interface function layer module.
FS1015 FIT Module	Indicates FS1015 Sensor control module.
FS1015 Sensor	Indicates FS1015 Air Velocity Sensor Module.
FS2012 FIT Module	Indicates FS2012 Sensor control module.
FS2012 Sensor	Indicates FS2012 High Performance Flow Sensor Module.
FS3000 FIT Module	Indicates FS3000 Sensor control module.
FS3000 Sensor	Indicates FS3000 Air Velocity Sensor Module.
HS300x FIT Module	Indicates HS300x Sensor control module.
HS300x Sensor	Indicates HS300x Relative Humidity and Temperature Sensor.
HS400x FIT Module	Indicates HS400x Sensor control module.
HS400x Sensor	Indicates HS400x Relative Humidity and Temperature Sensor.
IIC FIT Module (I2C Bus Control FIT Module)	Indicates RIIC FIT Module or/and SCI_IIC FIT Module.
NACK	Not Acknowledge
OB1203 FIT Module	Indicates OB1203 Sensor control module.
OB1203 Sensor	Indicates Heart Rate, Blood Oxygen Concentration, Pulse Oximetry, Proximity, Light and Color Sensor
ReST	Repeated Start Condition
RRH46410 FIT Module	Indicates RRH46410 Sensor control module.
RRH46410 Sensor	Indicates RRH46410 Firmware Configurable Air Quality (AQ) Module with Embedded Artificial Intelligence (AI)
RRH62000 FIT Module	Indicates RRH62000 Sensor control module.
RRH62000 Sensor	Indicates RRH62000 All-in-One Integrated Sensor Module for PM2.5, RHT, TVOC, and eCO2 Detection
Sensor FIT Module	Indicates Sensor Control module.
SP	Stop Condition
ST	Start Condition
ZMOD4410 Sensor	Indicates Digital Gas Sensor ZMOD4410 (Indoor Air Quality Platform)
ZMOD4450 Sensor	Indicates Digital Gas Sensor ZMOD4450 (Refrigeration Air Quality Platform)
ZMOD4510 Sensor	Indicates Digital Gas Sensor ZMOD4510 (Outdoor Air Quality Platform)
ZMOD4XXX FIT Module	Indicates ZMOD4410, ZMOD4510 and ZMOD 4510 Sensor control module.

## Reference Documents

- Renesas Electronics HS300x Datasheet (August 8, 2021) (R36DS0010EU0701)
- Renesas Electronics HS400x Datasheet (June 22, 2022) (R36DS0022EU0102)
- Renesas Electronics FS2012 Series Datasheet (August 24, 2018)
- Renesas Electronics FS3000 Series Datasheet (May 31, 2022)
- Renesas Electronics FS1015 Series Datasheet (June 2, 2022)
- Renesas Electronics OB1203 Datasheet (January 12, 2021)
- Renesas Electronics RRH46410 Datasheet (Feb 16, 2024)
- Renesas Electronics RRH62000 Datasheet (Sep 26, 2024)
- Renesas Electronics ZMOD4410 Datasheet (March 10, 2023)
- Renesas Electronics ZMOD4510 Datasheet (May 30, 2024)
- Renesas Electronics ZMOD4450 Datasheet (June 30, 2021)
- RX Family I2C Bus Interface (RIIC) Module Using Firmware Integration Technology (R01AN1692)
- RX Family Simple I2C Module Using Firmware Integration Technology (R01AN1691)
- RX65N User's Manual: The latest version can be downloaded from the Renesas Electronics website.
- Technical Update/Technical News  
The latest information can be downloaded from the Renesas Electronics website.
- RX Family Compiler CC-RX User's Manual (R20UT3248)  
The latest versions can be downloaded from the Renesas Electronics website.

## Trademarks

- Pmod™ is a trademark of Digilent Inc.
- FreeRTOS™ is a trademark of Amazon Web Services, Inc.

## Contents

1.	Overview of Renesas Sensor Control Modules .....	10
1.1	Outline of FS1015 FIT Module .....	12
1.2	Outline of FS2012 FIT Module .....	12
1.3	Outline of FS3000 FIT Module .....	12
1.4	Outline of HS300x FIT Module .....	12
1.5	Outline of HS400x FIT Module .....	13
1.6	Outline of OB1203 FIT Module.....	13
1.7	Outline of RRH46410 FIT Module .....	14
1.8	Outline of RRH62000 FIT Module .....	14
1.9	Outline of ZMOD4XXX FIT Module .....	15
1.10	Outline of COMMS FIT Module .....	15
1.11	How to Combine Sensor Control Modules and RX IIC FIT Modules .....	16
1.12	Operating Test Environment .....	17
1.13	Notes/Restrictions .....	17
2.	API Information .....	18
2.1	Hardware Requirements .....	18
2.2	Software Requirements.....	18
2.3	Supported Toolchains .....	18
2.4	Usage of Interrupt Vector .....	18
2.5	Header Files .....	18
2.6	Integer Types.....	18
2.7	Configuration Overview .....	19
2.7.1	FS1015 FIT Module Configuration (r_fs1015_rx_config.h).....	19
2.7.2	FS2012 FIT Module Configuration (r_fs2012_rx_config.h).....	20
2.7.3	FS3000 FIT Module Configuration (r_fs3000_rx_config.h).....	21
2.7.4	HS300x FIT Module Configuration (r_hs3000_rx_config.h).....	22
2.7.5	HS400x FIT Module Configuration (r_hs4000_rx_config.h).....	23
2.7.6	OB1203 FIT Module Configuration (r_ob1203_rx_config.h).....	24
2.7.7	RRH46410 FIT Module Configuration (r_rrh46410_rx_config.h).....	30
2.7.8	RRH62000 FIT Module Configuration (r_rrh62000_rx_config.h).....	31
2.7.9	ZMOD4XXX FIT Module Configuration (r_zmod4xxx_rx_config.h).....	32
2.7.10	COMMS FIT Module Configuration (r_comms_i2c_rx_config.h).....	34
2.8	Code Size .....	35
2.9	Parameters .....	37
2.9.1	Configuration Structure and Control Structure of FS1015 FIT Module .....	37
2.9.2	Configuration Structure and Control Structure of FS2012 FIT Module .....	38
2.9.3	Configuration Structure and Control Structure of FS3000 FIT Module .....	39
2.9.4	Configuration Structure and Control Structure of HS300x FIT Module.....	40
2.9.5	Configuration Structure and Control Structure of HS400x FIT Module.....	41

2.9.6	Configuration Structure and Control Structure of OB1203 FIT Module .....	42
2.9.7	Configuration Structure and Control Structure of RRH46410 FIT Module.....	43
2.9.8	Configuration Structure and Control Structure of RRH62000 FIT Module.....	44
2.9.9	Configuration Structure and Control Structure of ZMOD4xxx FIT Module .....	45
2.9.10	Configuration Structure and Control Structure of COMMS FIT Module.....	46
2.10	Return Values.....	47
2.11	Adding the FIT Module to Your Project .....	48
3.	FS1015 API Functions.....	49
3.1	RM_FS1015_Open() .....	49
3.2	RM_FS1015_Close().....	50
3.3	RM_FS1015_Read() .....	51
3.4	RM_FS1015_DataCalculate() .....	52
3.5	fs1015_user_callback() .....	54
3.6	Usage Example of FS1015 FIT Module .....	54
4.	FS2012 API Functions.....	55
4.1	RM_FS2012_Open() .....	55
4.2	RM_FS2012_Close().....	56
4.3	RM_FS2012_Read() .....	57
4.4	RM_FS2012_DataCalculate() .....	58
4.5	fs2012_user_callback() .....	60
4.6	Usage Example of FS2012 FIT Module .....	60
5.	FS3000 API Functions.....	61
5.1	RM_FS3000_Open() .....	61
5.2	RM_FS3000_Close().....	62
5.3	RM_FS3000_Read() .....	63
5.4	RM_FS3000_DataCalculate() .....	64
5.5	fs3000_user_callback() .....	66
5.6	Usage Example of FS3000 FIT Module .....	66
6.	HS300x API Functions .....	67
6.1	RM_HS300X_Open() .....	67
6.2	RM_HS300X_Close().....	68
6.3	RM_HS300X_MeasurementStart() .....	68
6.4	RM_HS300X_Read() .....	69
6.5	RM_HS300X_DataCalculate() .....	70
6.6	RM_HS300X_ProgrammingModeEnter().....	72
6.7	RM_HS300X_ResolutionChange() .....	73
6.8	RM_HS300X_SensorIdGet().....	75
6.9	RM_HS300X_ProgrammingModeEixt() .....	76
6.10	hs300x_user_callback() .....	77

6.11	Usage Example of HS300x FIT Module.....	77
7.	HS400x API Functions .....	78
7.1	RM_HS400X_Open() .....	78
7.2	RM_HS400X_Close().....	79
7.3	RM_HS400X_MeasurementStart() .....	80
7.4	RM_HS400X_MeasurementStop() .....	81
7.5	RM_HS400X_Read() .....	82
7.6	RM_HS400X_DataCalculate() .....	83
7.7	hs400x_user_callback() .....	85
7.8	Usage Example of HS400x FIT Module.....	85
8.	OB1203 API Functions .....	86
8.1	RM_OB1203_Open() .....	86
8.2	RM_OB1203_Close() .....	87
8.3	RM_OB1203_MeasurementStart().....	88
8.4	RM_OB1203_MeasurementStop().....	88
8.5	RM_OB1203_LightRead().....	89
8.6	RM_OB1203_LightDataCalculate().....	90
8.7	RM_OB1203_ProxRead() .....	91
8.8	RM_OB1203_ProxDDataCalculate() .....	92
8.9	RM_OB1203_PpgRead() .....	93
8.10	RM_OB1203_PpgDataCalculate() .....	94
8.11	RM_OB1203_DeviceStatusGet() .....	95
8.12	RM_OB1203_DeviceInterruptCfgSet().....	96
8.13	RM_OB1203_GainSet() .....	97
8.14	RM_OB1203_LedCurrentSet().....	98
8.15	RM_OB1203_FifoInfoGet() .....	99
8.16	ob1203_user_xxx_callback().....	100
8.17	Usage Example of OB1203 FIT Module .....	100
9.	RRH46410 API Functions .....	101
9.1	RM_RRH46410_Open().....	101
9.2	RM_RRH46410_Close() .....	102
9.3	RM_RRH46410_MeasurementStart().....	103
9.4	RM_RRH46410_MeasurementStop() .....	103
9.5	RM_RRH46410_Read() .....	104
9.6	RM_RRH46410_Iaq2ndGenDataCalculate() .....	105
9.7	RM_RRH46410_PbaqDataCalculate() .....	106
9.8	RM_RRH46410_TemperatureAndHumiditySet().....	107
9.9	rrh46410_user_xxx_callback() .....	108
9.10	Usage Example of RRH46410 FIT Module.....	108

10. RRH62000 API Functions .....	109
10.1 RM_RRH62000_Open() .....	109
10.2 RM_RRH62000_Close() .....	110
10.3 RM_RRH62000_StatusCheck() .....	111
10.4 RM_RRH62000_Read() .....	112
10.5 RM_RRH62000_DataCalculate() .....	113
10.6 RM_RRH62000_FirmwareVersionGet() .....	115
10.7 RM_RRH62000_AlgorithmVersionGet() .....	116
10.8 rrh62000_user_i2c_callback() .....	117
10.9 Usage Example of RRH62000 FIT Module .....	117
11. ZMOD4XXX API Functions .....	118
11.1 RM_ZMOD4XXX_Open() .....	118
11.2 RM_ZMOD4XXX_Close() .....	119
11.3 RM_ZMOD4XXX_MeasurementStart() .....	120
11.4 RM_ZMOD4XXX_MeasurementStop() .....	120
11.5 RM_ZMOD4XXX_StatusCheck() .....	121
11.6 RM_ZMOD4XXX_Read() .....	122
11.7 RM_ZMOD4XXX_Iaq1stGenDataCalculate() .....	123
11.8 RM_ZMOD4XXX_Iaq2ndGenDataCalculate() .....	124
11.9 RM_ZMOD4XXX_OdorDataCalculate() .....	125
11.10 RM_ZMOD4XXX_SulfurOdorDataCalculate() .....	126
11.11 RM_ZMOD4XXX_Oaq2ndGenDataCalculate() .....	127
11.12 RM_ZMOD4XXX_RaqDataCalculate() .....	128
11.13 RM_ZMOD4XXX_RellaqDataCalculate() .....	129
11.14 RM_ZMOD4XXX_PbaqDataCalculate() .....	130
11.15 RM_ZMOD4XXX_No2O3DataCalculate() .....	131
11.16 RM_ZMOD4XXX_TemperatureAndHumiditySet() .....	132
11.17 RM_ZMOD4XXX_DeviceErrorCheck() .....	133
11.18 zmod4xxx_user_xxx_callback() .....	134
11.19 Usage Example of ZMOD4XXX FIT Module .....	134
12. COMMS API Functions .....	135
12.1 RM_COMMS_I2C_Open() .....	135
12.2 RM_COMMS_I2C_Close() .....	137
12.3 RM_COMMS_I2C_Read() .....	138
12.4 RM_COMMS_I2C_Write() .....	139
12.5 RM_COMMS_I2C_WriteRead() .....	140
Revision History .....	141
General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products	142



Notice..... 143


Corporate Headquarters ..... 143

Contact information..... 143

Trademarks..... 143

### 1. Overview of Renesas Sensor Control Modules

The Renesas sensor control modules described in this application note are a hardware abstraction layer of Renesas sensors. This hardware abstraction layer includes sensor API and communication middleware for various Renesas sensors. The software architecture of Renesas sensor hardware abstraction layer is shown below “Figure 1-1 Renesas Sensor Software Architecture”.

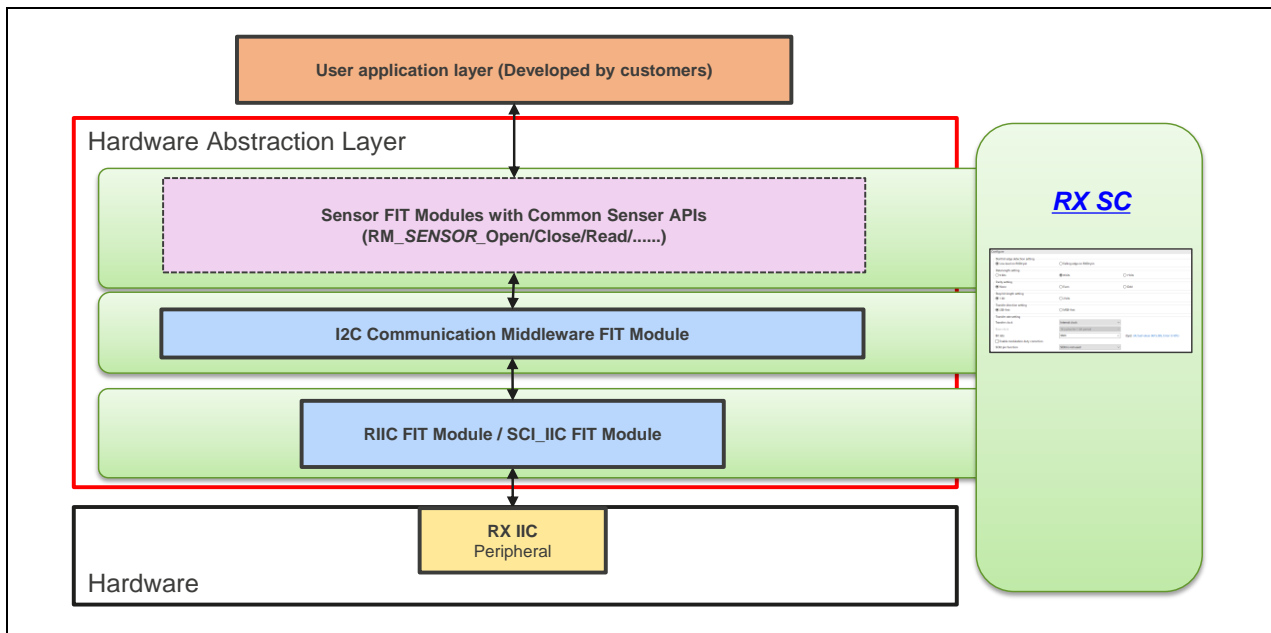

**Figure 1-1 Renesas Sensor Software Architecture**

The hardware abstraction layer has three layers, “Sensor FIT Modules with Common Sensor APIs”, “I2C Communication Middleware” and “RX IIC FIT module (RIIC FIT Module and SCI\_IIC FIT Module)”.

The sensor APIs of the following Sensor Control modules are provided as “Sensor FIT modules”.

Sensors Type	Sensor FIT Module (Sensor Control Module) Name
FS1015	FS1015 FIT module
FS2012	FS2012 FIT module
FS3000	FS3000 FIT module
HS300x	HS300x FIT module
HS400x	HS400x FIT module
OB1203	OB1203 FIT module
RRH46410	RRH46410 FIT module
RRH62000	RRH62000 FIT module
ZMOD4410, ZMOD4450, ZMOD4510	ZMOD4XXX FIT module

The I2C Communication Middleware are provided as “COMMS FIT module”.

These Sensor FIT modules provide a method to receive sensor data of each sensor connected to the I2C bus of RX family MCUs via “COMMS FIT module”.

Table 1-1 shows the available Sensors.

Table 1-2 shows the available IIC FIT modules.

**Table 1-1 Available Sensors**

Available Sensors	Reference Datasheet
FS1015 Air Velocity Sensor Module	Refer to " <a href="#">Reference Documents</a> "
FS2012 High Performance Flow Sensor Module	
FS3000 Air Velocity Sensor Module	
HS300x High Performance Relative Humidity and Temperature Sensor	
HS400x High Performance Relative Humidity and Temperature Sensor	
OB1203 Heart Rate, Blood Oxygen Concentration, Pulse Oximetry, Proximity, Light and Color Sensor	
RRH46410 Firmware Configurable Air Quality (AQ) Module with Embedded Artificial Intelligence (AI)	
RRH62000 All-in-One Integrated Sensor Module for PM2.5, RHT, TVOC, and eCO2 Detection	
ZMOD4410 Digital Gas Sensor (ZMOD4410 Indoor Air Quality Platform)	
ZMOD4450 Digital Gas Sensor (ZMOD4450 Refrigeration Air Quality Sensor Platform)	
ZMOD4510 Digital Gas Sensor (ZMOD4510 Outdoor Air Quality Platform)	

**Table 1-2 Available IIC FIT Modules**

Available IIC FIT Modules	Reference Application Notes
RIIC FIT Module	I2C Bus Interface (RIIC) Module Using Firmware Integration Technology (R01AN1692)
SCI_IIC FIT Module	Simple I2C Module Using Firmware Integration Technology (R01AN1691)

## 1.1 Outline of FS1015 FIT Module

The following lists the FS1015 FIT module API functions.

**Table 1-3 FS1015 FIT Module API Functions**

Function	Description
RM_FS1015_Open()	This function opens and configures the FS1015 FIT module.
RM_FS1015_Close()	This function disables specified FS1015 control block.
RM_FS1015_Read()	This function reads ADC data from FS1015.
RM_FS1015_DataCalculate()	This function calculates air velocity value [m/sec] from ADC data.
fs1015_user_callback()	This is a callback function registered with Smart Configurator by user.

## 1.2 Outline of FS2012 FIT Module

The following lists the FS2012 FIT module API functions.

**Table 1-4 FS2012 FIT Module API Functions**

Function	Description
RM_FS2012_Open()	This function opens and configures the FS2012 FIT module.
RM_FS2012_Close()	This function disables specified FS2012 control block.
RM_FS2012_Read()	This function reads ADC data from FS2012.
RM_FS2012_DataCalculate()	This function calculates flow value [SLPM or SCCM] from ADC data.
fs2012_user_callback()	This is a callback function registered with Smart Configurator by user.

## 1.3 Outline of FS3000 FIT Module

The following lists the FS3000 FIT module API functions.

**Table 1-5 FS3000 FIT Module API Functions**

Function	Description
RM_FS3000_Open()	This function opens and configures the FS3000 FIT module.
RM_FS3000_Close()	This function disables specified FS3000 control block.
RM_FS3000_Read()	This function reads ADC data from FS3000.
RM_FS3000_DataCalculate()	This function calculates air velocity value [m/sec] from ADC data.
fs3000_user_callback()	This is a callback function registered with Smart Configurator by user.

## 1.4 Outline of HS300x FIT Module

The following lists the HS300x FIT module API functions.

**Table 1-6 HS300x FIT Module API Functions**

Function	Description
RM_HS300X_Open()	This function opens and configures the HS300x FIT module.
RM_HS300X_Close()	This function disables specified HS300x control block.
RM_HS300X_MeasurementStart()	This function starts a measurement.
RM_HS300X_Read()	This function reads ADC data from HS300x sensor.
RM_HS300X_DataCalculate()	This function calculates humidity [%RH] and temperature [Celsius] from ADC data.
RM_HS300X_ProgrammingModeEnter()	This function places the HS300x into programming mode.
RM_HS300X_ResolutionChange()	This function changes the HS300x resolution.
RM_HS300X_SensorIdGet()	This function obtains the sensor ID of HS300x.
RM_HS300X_ProgrammingModeExit()	This function exits the HS300x programming mode.
hs300x_user_callback()	This is a callback function registered with Smart Configurator by user.

## 1.5 Outline of HS400x FIT Module

The following lists the HS400x FIT module API functions.

**Table 1-7 HS400x FIT Module API Functions**

Function	Description
RM_HS400X_Open()	This function opens and configures the HS400x FIT module.
RM_HS400X_Close()	This function disables specified HS400x control block.
RM_HS400X_MeasurementStart()	This function starts a measurement.
RM_HS400X_MeasurementStop()	This function stops a periodic measurement.
RM_HS400X_Read()	This function reads ADC data from HS400x sensor.
RM_HS400X_DataCalculate()	This function calculates humidity [%RH] and temperature [Celsius] from ADC data.
hs400x_user_callback()	This is a callback function registered with Smart Configurator by user.

## 1.6 Outline of OB1203 FIT Module

The following lists the OB1203 FIT module API functions.

**Table 1-8 OB1203 FIT Module API Functions**

Function	Description
RM_OB1203_Open()	This function opens and configures the OB1203 FIT module.
RM_OB1203_Close()	This function disables specified OB1203 control block.
RM_OB1203_MeasurementStart()	This function starts a measurement.
RM_OB1203_MeasurementStop()	This function stops a measurement.
RM_OB1203_LightRead()	This function reads ADC data for Light from OB1203 sensor.
RM_Ob1203_LightDataCalculate()	This function calculates Light values from ADC data.
RM_OB1203_ProxRead()	This function reads ADC data for Proximity from OB1203 sensor.
RM_OB1203_ProxDDataCalculate()	This function calculates Proximity values from ADC data.
RM_OB1203_PpgRead()	This function reads ADC data for PPG from OB1203 sensor.
RM_OB1203_PpgDataCalculate()	This function calculates PPG values from ADC data.
RM_OB1203_DeviceStatusGet()	This function gets device status.
RM_OB1203_DeviceInterruptCfgSet()	This function configures new device interrupts.
RM_OB1203_GainSet()	This function configures a new gain.
RM_OB1203_LedCurrentSet()	This function configures new currents.
RM_OB1203_FifoInfoGet()	This function gets PPG FIFO information.
ob1203_user_xxx_callback()	This is a callback function registered with Smart Configurator by user.

## 1.7 Outline of RRH46410 FIT Module

The following lists the RRH46410 FIT module API functions.

**Table 1-9 RRH46410 FIT Module API Functions**

Function	Description
RM_RRH46410_Open()	This function opens and configures the RRH46410 FIT module.
RM_RRH46410_Close()	This function disables specified RRH46410 control block.
RM_RRH46410_MeasurementStart()	This function starts a measurement.
RM_RRH46410_MeasurementStop()	This function stops a measurement.
RM_RRH46410_Read()	This function reads measurement data from RRH46410.
RM_RRH46410_Iaq2ndGenDataCalculate()	This function calculates IAQ (Indoor Air Quality) 2 <sup>nd</sup> Gen values from measurement data.
RM_RRH46410_PbaqDataCalculate()	This function calculates PBAQ values from measurement data.
RM_RRH46410_TemperatureAndHumiditySet()	This function sets humidity to RRH46410 sensor. Temperature is unsupported.
rrh46410_user_xxx_callback()	This is a callback function registered with Smart Configurator by user.

## 1.8 Outline of RRH62000 FIT Module

The following lists the RRH62000 FIT module API functions.

**Table 1-10 RRH62000 FIT Module API Functions**

Function	Description
RM_RRH62000_Open()	This function opens and configures the RRH62000 FIT module.
RM_RRH62000_Close()	This function disables specified RRH62000 control block.
RM_RRH62000_Read()	This function reads measurement data from RRH62000.
RM_RRH62000_DataCalculate()	This function calculates air quality values from measurement data.
RM_RRH62000_StatusCheck()	This function reads status of sensor.
RM_RRH62000_FirmwareVersionGet()	This function reads firmware version of sensor.
RM_RRH62000_AlgorithmVersionGet()	This function reads algorithm version of sensor.
rrh62000_user_i2c_callback()	This is a callback function registered with Smart Configurator by user.

## 1.9 Outline of ZMOD4XXX FIT Module

The following lists the ZMOD4XXX FIT module API functions.

**Table 1-11 ZMOD4XXX FIT Module API Functions**

Function	Description
RM_ZMOD4XXX_Open()	This function opens and configures the ZMOD4XXX FIT module.
RM_ZMOD4XXX_Close()	This function disables specified ZMOD4XXX control block.
RM_ZMOD4XXX_MeasurementStart()	This function starts a measurement.
RM_ZMOD4XXX_MeasurementStop()	This function stops a measurement.
RM_ZMOD4XXX_StatusCheck()	This function reads status of ZMOD4410 or ZMOD4510 sensor.
RM_ZMOD4XXX_Read()	This function reads ADC data from ZMOD4410 or ZMOD4510 sensor.
RM_ZMOD4XXX_iaq1stGenDataCalculate()	This function calculates IAQ (Indoor Air Quality) 1 <sup>st</sup> Gen. values from ADC data.
RM_ZMOD4XXX_iaq2ndGenDataCalculate()	This function calculates IAQ (Indoor Air Quality) 2 <sup>nd</sup> Gen. values from ADC data.
RM_ZMOD4XXX_OdorDataCalculate()	This function calculates Odor values from ADC data.
RM_ZMOD4XXX_SulfurOdorDataCalculate()	This function calculates Sulfur Odor values from ADC data.
RM_ZMOD4XXX_Oaq2ndGenDataCalculate()	This function calculates OAQ 2 <sup>nd</sup> Gen. values from ADC data.
RM_ZMOD4XXX_RaqDataCalculate()	This function calculates RAQ values from ADC data.
RM_ZMOD4XXX_RellaqDataCalculate()	This function calculates Rel IAQ (Indoor Air Quality) values from ADC data.
RM_ZMOD4XXX_PbaqDataCalculate()	This function calculates PBAQ values from ADC data.
RM_ZMOD4XXX_No2O3DataCalculate()	This function calculates NO2 O3 values from ADC data.
RM_ZMOD4XXX_TemperatureAndHumiditySet()	This function sets temperature and humidity to ZMOD4410 or ZMOD4510 sensor.
RM_ZMOD4XXX_DeviceErrorCheck()	This function checks for device errors such as unexpected resets
zmod4xxx_user_xxx_callback()	This is a callback function registered with Smart Configurator by user.

## 1.10 Outline of COMMS FIT Module

The following lists the COMMS FIT module API functions.

**Table 1-12 COMMS FIT Module API Functions**

Function	Description
RM_COMMS_I2C_Open()	The function opens and configures the COMMS FIT module.
RM_COMMS_I2C_Close()	This function disables specified COMMS FIT module.
RM_COMMS_I2C_Read()	The function performs a read from I2C device.
RM_COMMS_I2C_Write()	The function performs a write from the I2C device.
RM_COMMS_I2C_WriteRead()	The function performs a write to, then a read from the I2C device.

### 1.11 How to Combine Sensor Control Modules and RX IIC FIT Modules

Sensor FIT module and COMMS FIT module can control simultaneously multiple sensors on any channel of any I2C bus.


However, the sensors using same slave address cannot be connected to the same channel of I2C bus.

Figure 1-2 shows the relationship of Sensor FIT modules and COMMS FIT module, RX IIC FIT modules and the I2C devices.

The COMMS FIT module is a driver interface function layer to absorb the difference between the Sensor FIT modules and RX IIC FIT modules.

The initialization processing of these FIT modules opens the module and sets control structure values according to configurations set by user. The initialization of I2C bus need to be done in user application in advanced of above initialization. Depending on sensor connection to I2C bus in user system, the R\_RIIC\_Open() of RIIC FIT module or R\_SCI\_IIC\_Open() of SCI\_IIC FIT module is used for initialization of I2C bus.

For the configuration related to these FIT modules, refer to "2.7 Configuration Overview".

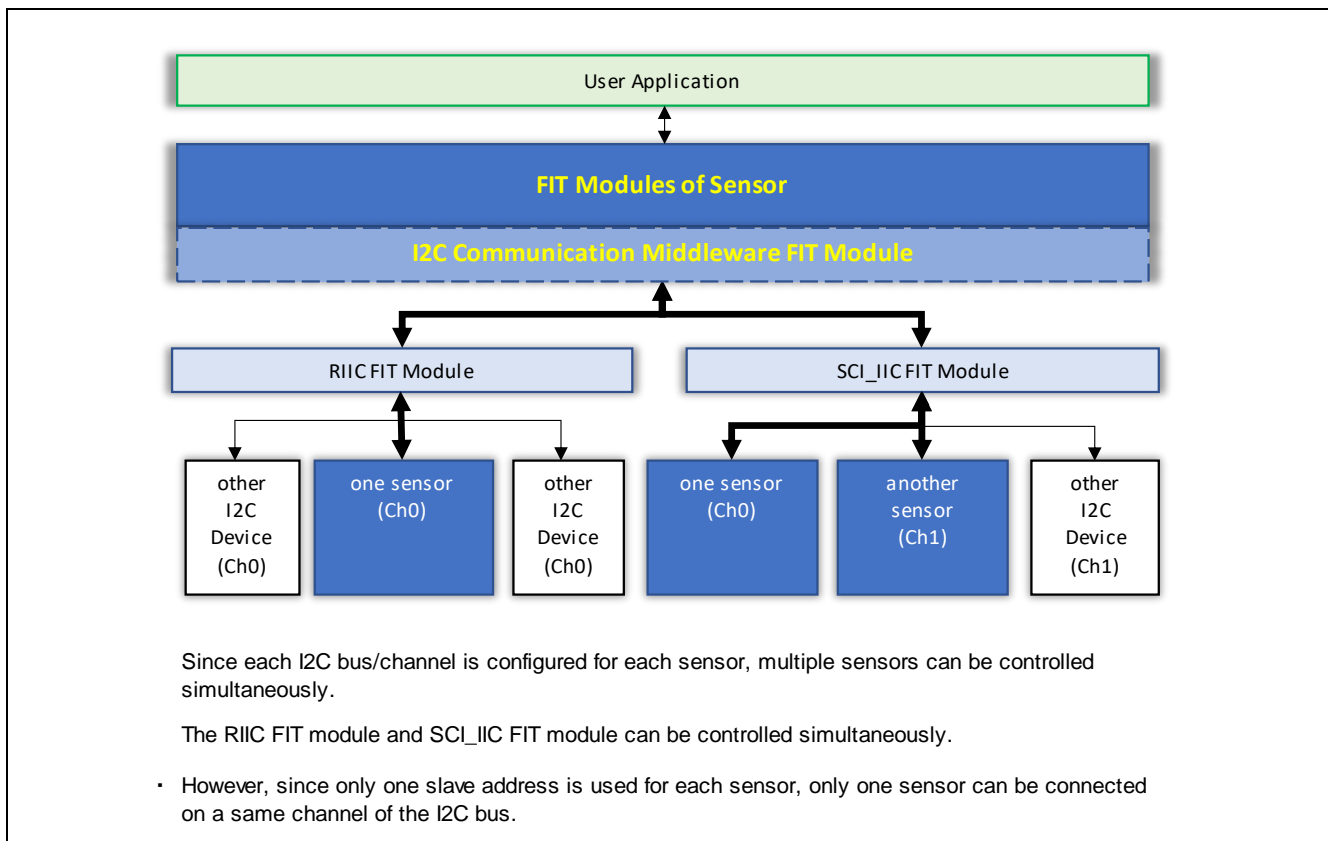

**Figure 1-2 Example of Combination of Sensor FIT Modules and IIC FIT Modules**



## 1.12 Operating Test Environment

This section describes for detailed the operating test environments of these FIT modules.

**Table 1-13 Operation Test Environment**

Item	Contents
Integrated Development Environment	Renesas Electronics e2 studio 2024-07 or later
C Compiler	Renesas Electronics CC-RX V.3.03.00 or higher Compiler options: The integrated development environment default settings are used, with the following option added. -lang = c99
Endian Order	Little-endian
Module Version	r_riic_rx Ver.2.49 or higher r_sci_iic_rx Ver.2.49 or higher
Sensor Board Used	Vertical Mount Air Velocity Sensor Pmod Board (US082-FS1015EVZ) Gas Mass Flow Sensor Pmod Board (US082-FS2012EVZ) Air Velocity Sensor Pmod Board (US082-FS3000EVZ) Relative Humidity Sensor Pmod Board (US082-HS3001EVZ) Relative Humidity Sensor Pmod Board (QCIOT-HS4001POCZ) Pulse Oximetry, Proximity, Light, and Color Sensor Pmod Board (US082-OB1203EVZ) RRH46410 Sensor Pmod Board RRH62000 Sensor Pmod Board TVOC and Indoor Air Quality Sensor Pmod Board (US082-ZMOD4410EVZ) Refrigeration Air Quality Sensor Pmod Board (US082-ZMOD4450EVZ) Outdoor Air Quality Sensor Pmod Board (US082-ZMOD4510EVZ) Interposer Board for Pmod Type2/3 to 6A (US082-INTERPEVZ)

## 1.13 Notes/Restrictions

- The operation by single master control has been confirmed. The operation by multi-master control is unconfirmed. When using it in multi-master control, evaluate it sufficiently.
- Operation has been confirmed only when the data endian is little endian.
- For the notes and restrictions of the IIC FIT modules, refer to each application note.
- For maximum numbers of RRH46410 and RRH62000 sensors, only one sensor can be configured in the user system. Refer to “2.7.7 RRH46410 FIT Module Configuration (r\_rrh46410\_rx\_config.h)” or “2.7.8 RRH62000 FIT Module Configuration (r\_rrh62000\_rx\_config.h)”.

## 2. API Information

### 2.1 Hardware Requirements

The MCU used must support one or both of the following functions.

- I2C Bus Interface (RIIC)
- Serial Communication Interface (SCI): Simple I2C bus mode

### 2.2 Software Requirements

The FIT modules are dependent upon the following packages:

- Board Support Package Module (r\_bsp) Ver.6.21 or higher
- RIIC FIT Module (r\_riic\_rx) Ver.2.49 or higher
- SCI\_IIC FIT Module (r\_sci\_iic\_rx) Ver.2.49 or higher

### 2.3 Supported Toolchains

The FIT modules are tested and work with the following toolchain:

- Renesas RX Toolchain v.3.03.00 or higher

### 2.4 Usage of Interrupt Vector

The FIT modules do not use interrupts. However, the IIC FIT modules to be used use interrupts. Refer to each application note for detail information.

### 2.5 Header Files

All API calls and their supporting interface definitions are located as follows.

Sensor FIT Module	Header Files		
FS1015 FIT Module	r_fs1015_if.h	rm_fsxxx_api.h (Note 1)	rm_fs1015.h
FS2012 FIT Module	r_fs2012_if.h		rm_fs2012.h
FS3000 FIT Module	r_fs3000_if.h		rm_fs3000.h
HS300x FIT Module	r_hs300x_if.h	rm_hs300x_api.h	rm_hs300x.h
HS400x FIT Module	r_hs400x_if.h	rm_hs400x_api.h	rm_hs400x.h
OB1203 FIT Module	r_ob1203_if.h	rm_ob1203_api.h	rm_ob1203.h
RRH46410 FIT Module	r_rrh46410_if.h	rm_zmod4xxx_api.h (Note 2)	rm_rrh46410.h
RRH62000 FIT Module	r_rrh62000_if.h	rm_air_sensor_api.h	rm_rrh62000.h
ZMOD4XXX FIT Module	r_zmod4xxx_if.h	rm_zmod4xxx_api.h (Note 2)	rm_zmod4xxx.h
COMMS FIT Module	r_comms_i2c_if.h	rm_comms_api.h	rm_comms_i2c.h

Note 1: Although the file names are the same, the versions may differ due to revisions.

However, the header files are **identical** on Aug 26, 2024, it is possible to include different modules at the same time.

Note 2: Although the file names are the same, the versions may differ due to revisions.

The header files for ZMOD4XXX FIT module V1.40 and RRH46410 FIT module V1.00 are **identical**, it is possible to include the modules at the same time.

### 2.6 Integer Types

The projects for these FIT modules use ANSI C99. These types are defined instdint.h.

## 2.7 Configuration Overview

The configuration options in these FIT modules are specified in

r\_fs1015\_rx\_config.h and rm\_fs1015\_instance.c for FS1015 FIT module,  
 r\_fs2012\_rx\_config.h and rm\_fs2012\_instance.c for FS2012 FIT module,  
 r\_fs3000\_rx\_config.h and rm\_fs3000\_instance.c for FS3000 FIT module,  
 r\_hs300x\_rx\_config.h and rm\_hs300x\_instance.c for HS300x FIT module,  
 r\_hs400x\_rx\_config.h and rm\_hs400x\_instance.c for HS400x FIT module,  
 r\_ob1203\_rx\_config.h and rm\_ob1203\_instance.c for OB1203 FIT module,  
 r\_rrh46410\_rx\_config.h and rm\_rrh46410\_instance.c for RRH46410 FIT module,  
 r\_rrh62000\_rx\_config.h and rm\_rrh62000\_instance.c for RRH62000 FIT module,  
 r\_zmod4xxx\_rx\_config.h and rm\_zmod4xxx\_instance.c for ZMOD4XXX FIT module,  
 r\_comms\_i2c\_rx\_config.h and rm\_comms\_i2c\_rx\_instance.c.

It is also necessary to set the IIC FIT modules to be used. Refer to each application note for detail information.

### 2.7.1 FS1015 FIT Module Configuration (r\_fs1015\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_FS1015_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_FS1015_CFG_DEVICE_NUM_MAX	Specify maximum numbers of FS1015 sensors. Selection: 1 - 2 Default: 1
RM_FS1015_CFG_DEVICE_TYPE	Specify device type of FS1015 Sensor. (Note 2) Selection: FS1015-1005 Default: FS1015-1005
RM_FS1015_CFG_DEVICE(x)_COMMS_INSTANCE ("x" = 0-1)	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(y) (y: 0 - 15) Default: I2C Communication Device(x) (When Device0 is selected, set "g_comms_i2c_device0")
RM_FS1015_CFG_DEVICE(x)_CALLBACK ("x" = 0-1)	Specify user callback function name. Selection: None (Need user to input) Default: fs1015_user_callback(x)

Note 1: Do not set same "I2C Communication Device(y)" number for sensor device 0 and sensor device 1. The "y" = 0-15.

Note 2: FS1015-1005 is a 0-7.23 m/sec air velocity range device, FS1015-1015 is a 0-15 m/sec air velocity range device. Refer to FS1015 datasheet for detail information. This FIT module only supports FS1015-1005 currently.

### 2.7.2 FS2012 FIT Module Configuration (r\_fs2012\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_FS2012_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_FS2012_CFG_DEVICE_NUM_MAX	Specify maximum numbers of FS2012 sensors. Selection: 1 - 2 Default: 1
RM_FS2012_CFG_DEVICE_TYPE	Specify device type of FS2012 Sensor. (Note 2) Selection: FS2012-1020-NG FS2012-1100-NG Default: FS2012-1020-NG
RM_FS2012_CFG_DEVICE(x)_COMMS_INSTANCE ("x" = 0-1)	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(y) (y: 0 - 15) Default: I2C Communication Device(x) (When Device0 is selected, set "g_comms_i2c_device0")
RM_FS2012_CFG_DEVICE(x)_CALLBACK ("x" = 0-1)	Specify user callback function name. Selection: None (Need user to input) Default: fs2012_user_callback(x)

Note 1: Do not set same "I2C Communication Device(y)" number for sensor device 0 and sensor device 1. The "y" = 0-15.

Note 2: FS2012-1020-NG is 0 to 2 SLPM (Standard Liter Per Minute) calibrated gas flow sensor mounted on a circuit board with a flow housing, FS2012-1100-NG is 0 to 10 SLPM (Standard Liter Per Minute) calibrated gas flow sensor mounted on a circuit board with a flow housing. This FIT module only supports FS2012-1020-NG and FS2012-1100-NG currently.

### 2.7.3 FS3000 FIT Module Configuration (r\_fs3000\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_FS3000_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_FS3000_CFG_DEVICE_NUM_MAX	Specify maximum numbers of FS3000 sensors. Selection: 1 - 2 Default: 1
RM_FS3000_CFG_DEVICE_TYPE	Specify device type of FS3000 Sensor. (Note 2) Selection: FS3000-1005 Default: FS3000-1005
RM_FS3000_CFG_DEVICE(x)_COMMS_INSTANCE ("x" = 0-1)	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(y) (y: 0 - 15) Default: I2C Communication Device(x) (When Device0 is selected, set "g_comms_i2c_device0")
RM_FS3000_CFG_DEVICE(x)_CALLBACK ("x" = 0-1)	Specify user callback function name. Selection: None (Need user to input) Default: fs3000_user_callback(x)

Note 1: Do not set same "I2C Communication Device(y)" number for sensor device 0 and sensor device 1. The "y" = 0-15.

Note 2: FS3000-1005 is a 0-7.23 m/sec air velocity range device, FS3000-1015 is a 0-15 m/sec air velocity range device. Refer to FS3000 datasheet for detail information. This FIT module only supports FS3000-1005 currently.

### 2.7.4 HS300x FIT Module Configuration (r\_hs3000\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_HS300X_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_HS300X_CFG_DEVICE_NUM_MAX	Specify maximum numbers of HS300x sensors. Selection: 1 - 2 Default: 1
RM_HS300X_CFG_DATA_BOTH_HUMIDITY_TEMPERATURE	Specify HS300x sensor data type. Selection: Humidity only Both humidity and temperature Default: Both humidity and temperature
RM_HS300X_CFG_PROGRAMMING_MODE	Specify programming mode on or off. Selection: Disabled (0) Enabled (1) Default: Disabled (0)
RM_HS300X_CFG_DEVICE(x)_COMMS_INSTANCE ("x" = 0-1)	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(y) (y: 0 - 15) Default: I2C Communication Device(x) (When Device0 is selected, set "g_comms_i2c_device0")
RM_HS300X_CFG_DEVICE(x)_CALLBACK ("x" = 0-1)	Specify user callback function name. Selection: None (Need user to input.) Default: hs300x_user_callback(x)

Note 1: Do not set same "I2C Communication Device(y)" number for sensor device 0 and sensor device 1.  
The "y" = 0-15.

### 2.7.5 HS400x FIT Module Configuration (r\_hs4000\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_HS400X_CFG_ PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_HS400X_CFG_ DEVICE_NUM_MAX	Specify maximum numbers of HS400x sensors. Selection: 1 - 2 Default: 1
RM_HS400X_CFG_ MEASUREMENT_TYPE	Specify HS400x sensor measurement type. Selection: Hold Measurement No-Hold Measurement Periodic Measurement Default: No-Hold Measurement
RM_HS400X_CFG_ DATA_BOTH_HUMIDITY_ TEMPERATURE	Specify HS400x sensor data type. Selection: Temperature only Both humidity and temperature Default: Both humidity and temperature
RM_HS400X_CFG_ DEVICE(x)_COMMS_INSTANCE ("x" = 0-1)	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(y) (y: 0 - 15) Default: I2C Communication Device(x) (When Device0 is selected, set "g_comms_i2c_device0")
RM_HS400X_CFG_ DEVICE(x)_TEMPERATURE_ RESOLUTION ("x" = 0-1)	Specify HS400x sensor temperature resolution. Selection: 8-bit 10-bit 12-bit 14-bit Default: 14-bit
RM_HS400X_CFG_ DEVICE(x)_HUMIDITY_ RESOLUTION ("x" = 0-1)	Specify HS400x sensor humidity resolution. Selection: 8-bit 10-bit 12-bit 14-bit Default: 14-bit
RM_HS400X_CFG_ DEVICE(x)_PERIODIC_ MEASUREMENT_ FREQUENCY ("x" = 0-1)	Specify HS400x sensor frequency for periodic measurement. Selection: 0.4Hz 1Hz 2Hz Default: 1Hz
RM_HS400X_CFG_ DEVICE(x)_CALLBACK ("x" = 0-1)	Specify user callback function name. Selection: None (Need user to input.) Default: hs400x_user_i2c_callback(x)

Note 1: Do not set same "I2C Communication Device(y)" number for sensor device 0 and sensor device 1.  
The "y" = 0-15.

### 2.7.6 OB1203 FIT Module Configuration (r\_ob1203\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration	Description (Smart Configurator Display)
RM_OB1203_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_OB1203_CFG_DEVICE_NUM_MAX	Specify maximum numbers of OB1203 sensors. Selection: 1 - 2 Default: 1
RM_OB1203_CFG_DEVICE(x)_COMMS_INSTANCE ("x" = 0-1)	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(y) (y: 0 - 15) Default: I2C Communication Device(x) (When Device0 is selected, set "g_comms_i2c_device0")
RM_OB1203_CFG_DEVICE(x)_COMMS_I2C_CALLBACK ("x" = 0-1)	Specify user I2C callback function name. Selection: None (Need user to input.) Default: ob1203_user_i2c_callback(x)
RM_OB1203_CFG_DEVICE(x)_IRQ_ENABLE ("x" = 0-1)	Enable IRQ Selection: Enabled Disabled Default: Disabled
RM_OB1203_CFG_DEVICE(x)_IRQ_CALLBACK ("x" = 0-1)	Specify user IRQ callback function name. Selection: None (Need user to input.) Default: ob1203_user_irq_callback(x)
RM_OB1203_CFG_DEVICE(x)_IRQ_NUMBER ("x" = 0-1)	Specify IRQ number Selection: IRQ_NUM_0 - IRQ_NUM_15 Default: IRQ_NUM_0
RM_OB1203_CFG_DEVICE(x)_IRQ_TRIGGER ("x" = 0-1)	Specify IRQ trigger. Selection: IRQ_TRIG_LOWLEV IRQ_TRIG_FALLING IRQ_TRIG_RISING IRQ_TRIG_BOTH_EDGE Default: IRQ_TRIG_RISING
RM_OB1203_CFG_DEVICE(x)_IRQ_PRIORITY ("x" = 0-1)	Specify IRQ interrupt priority. Selection: IRQ_PRI_0 - IRQ_PRI_15 Default: IRQ_PRI_10
RM_OB1203_CFG_DEVICE(x)_SEMAPHORE_TIMEOUT ("x" = 0-1)	Specify the semaphore timeout (RTOS only). Default: 0xFFFFFFFF
RM_OB1203_CFG_DEVICE(x)_SENSOR_MODE ("x" = 0-1)	Specify the sensor mode. Selection: Not selected Light Sensor mode Proximity Sensor mode Light Proximity Sensor mode PPG Sensor mode Default: Not selected



RM_OB1203_CFG_ DEVICE(x)_LIGHT_PROX_ DEVICE_INTERRUPT ("x" = 0-1)	Specify the operation mode using device interrupt for Light Proximity mode. Selection: Light mode interrupt Proximity mode interrupt Default: Light mode interrupt
RM_OB1203_CFG_ DEVICE(x)_PPG_PROX_GAIN ("x" = 0-1)	Specify the gain for Proximity and PPG modes. Selection: 1 1.5 2 4 Default: 1
RM_OB1203_CFG_ DEVICE(x)_LED_ORDER ("x" = 0-1)	Specify the LED order for Proximity and PPG mode. Selection: IR LED first, Red LED second Red LED first, IR LED second Default: IR LED first, Red LED second
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ SENSOR_MODE ("x" = 0-1)	Specify the sensor mode for Light mode. Selection: LS mode CS mode Default: LS mode
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ INTERRUPT_TYPE ("x" = 0-1)	Specify the interrupt type for Light mode. Selection: Threshold Variation Default: Threshold
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ INTERRUPT_SOURCE ("x" = 0-1)	Specify the interrupt source for Light mode. Selection: Clear channel Green channel Red channel (CS mode only) Blue channel (CS mode only) Default: Clear channel
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ INTERRUPT_PERSIST ("x" = 0-1)	Specify the number of similar consecutive interrupt events that must occur before the interrupt is asserted (4bits) for Light mode. Min = 0x0 and Max = 0xF Selection: None (Need user to input) Default: 0x02
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ SLEEP_AFTER_INTERRUPT ("x" = 0-1)	Enable the sleep after interrupt for Light mode. Selection: Enabled Disabled Default: Disabled
RM_OB1203_CFG_ DEVICE(x)_LIGHT_GAIN ("x" = 0-1)	Specify the gain for Light mode. Selection: 1 3 6 Default: 1
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ UPPER_THRESHOLD ("x" = 0-1)	Specify the upper threshold value (20bits) for Light mode. Min = 0x00000 and Max = 0xFFFFF. Selection: None (Need user to input) Default: 0x00CCC
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ LOWER_THRESHOLD ("x" = 0-1)	Specify the lower threshold value (20bits) for Light mode. Min = 0x00000 and Max = 0xFFFFF. Selection: None (Need user to input) Default: 0x00000
RM_OB1203_CFG_ DEVICE(x)_LIGHT_ VARIANCE_THRESHOLD ("x" = 0-1)	Specify variance threshold for Light mode. Selection: +/- 8 counts +/- 16 counts +/- 32 counts +/- 64 counts +/- 128 counts +/- 256 counts +/- 512 counts +/- 1024 counts Default: +/- 128 counts

RM_OB1203_CFG_ DEVICE(x)_LIGHT_ RESOLUTION_PERIOD ("x" = 0-1)	Specify resolution and measurement period for Light mode. Selection: Resolution:13 bits. Measurement Period:25ms Resolution:13 bits. Measurement Period:50ms Resolution:13 bits. Measurement Period:100ms Resolution:13 bits. Measurement Period:200ms Resolution:13 bits. Measurement Period:500ms Resolution:13 bits. Measurement Period:1000ms Resolution:13 bits. Measurement Period:2000ms Resolution:16 bits. Measurement Period:25ms Resolution:16 bits. Measurement Period:50ms Resolution:16 bits. Measurement Period:100ms Resolution:16 bits. Measurement Period:200ms Resolution:16 bits. Measurement Period:500ms Resolution:16 bits. Measurement Period:1000ms Resolution:16 bits. Measurement Period:2000ms Resolution:17 bits. Measurement Period:50ms Resolution:17 bits. Measurement Period:100ms Resolution:17 bits. Measurement Period:200ms Resolution:17 bits. Measurement Period:500ms Resolution:17 bits. Measurement Period:1000ms Resolution:17 bits. Measurement Period:2000ms Resolution:18 bits. Measurement Period:100ms Resolution:18 bits. Measurement Period:200ms Resolution:18 bits. Measurement Period:500ms Resolution:18 bits. Measurement Period:1000ms Resolution:18 bits. Measurement Period:2000ms Resolution:19 bits. Measurement Period:200ms Resolution:19 bits. Measurement Period:500ms Resolution:19 bits. Measurement Period:1000ms Resolution:19 bits. Measurement Period:2000ms Resolution:20 bits. Measurement Period:500ms Resolution:20 bits. Measurement Period:1000ms Resolution:20 bits. Measurement Period:2000ms Default: Resolution:18 bits. Measurement Period:100ms
RM_OB1203_CFG_ DEVICE(x)_PROX_ INTERRUPT_TYPE ("x" = 0-1)	Specify the interrupt type for Proximity mode. Selection: Normal Logic Default: Normal
RM_OB1203_CFG_ DEVICE(x)_PROX_ INTERRUPT_PERSIST ("x" = 0-1)	Specify the number of similar consecutive interrupt events that must occur before the interrupt is asserted (4bits) for Proximity mode. Min = 0x0 and Max = 0xF Selection: None (Need user to input) Default: 0x02
RM_OB1203_CFG_ DEVICE(x)_PROX_ SLEEP_AFTER_INTERRUPT ("x" = 0-1)	Enable the sleep after interrupt for Proximity mode. Selection: Enabled Disabled Default: Disabled
RM_OB1203_CFG_ DEVICE(x)_PROX_ LED_CURRENT ("x" = 0-1)	Specify the current of LED (10bits) for Proximity mode. Min = 0x000 and Max = 0x3FF Selection: None (Need user to input.) Default: 0x100
RM_OB1203_CFG_ DEVICE(x)_PROX_ ANA_CAN ("x" = 0-1)	Enable the LED analog cancellation for Proximity mode. Selection: Disabled Enabled (50% offset of the full-scale value) Default: Disabled
RM_OB1203_CFG_ DEVICE(x)_PROX_ DIG_CAN ("x" = 0-1)	Specify the LED digital cancellation (16bits) of Proximity mode. Min = 0x0000 and Max = 0xFFFF Selection: None (Need user to input.) Default: 0x100

RM_OB1203_CFG_DEVICE(x)_PROX_NUM_LED_PULSES ("x" = 0-1)	Specify the number of LED pulses for Proximity mode. Selection: 1 pulse 2 pulses 4 pulses 8 pulses 16 pulses 32 pulses Default: 8 pulses
RM_OB1203_CFG_DEVICE(x)_PROX_UPPER_THRESHOLD ("x" = 0-1)	Specify the upper threshold value (16bits) for Proximity mode. Min = 0x0000 and Max = 0xFFFF Selection: None (Need user to input) Default: 0x00600
RM_OB1203_CFG_DEVICE(x)_PROX_LOWER_THRESHOLD ("x" = 0-1)	Specify the lower threshold value (16bits) for Proximity mode. Min = 0x0000 and Max = 0xFFFF Selection: None (Need user to input) Default: 0x00000
RM_OB1203_CFG_DEVICE(x)_PROX_WIDTH_PERIOD ("x" = 0-1)	Specify the pulse width and measurement period for Proximity mode. Selection: Pulse width:26us. Measurement Period:3.125ms. (Expect for the number 32 of LED pulses) Pulse width:26us. Measurement Period:6.25ms. Pulse width:26us. Measurement Period:12.5ms Pulse width:26us. Measurement Period:25ms Pulse width:26us. Measurement Period:50ms Pulse width:26us. Measurement Period:100ms Pulse width:26us. Measurement Period:200ms Pulse width:26us. Measurement Period:400ms Pulse width:42us. Measurement Period:3.125ms. (Expect for the number 32 of LED pulses) Pulse width:42us. Measurement Period:6.25ms Pulse width:42us. Measurement Period:12.5ms Pulse width:42us. Measurement Period:25ms Pulse width:42us. Measurement Period:50ms Pulse width:42us. Measurement Period:100ms Pulse width:42us. Measurement Period:200ms Pulse width:42us. Measurement Period:400ms Pulse width:71us. Measurement Period:3.125ms. (Except for the number 16 and 32 of LED pulses) Pulse width:71us. Measurement Period:6.25ms. (Expect for the number 32 of LED pulses) Pulse width:71us. Measurement Period:12.5ms Pulse width:71us. Measurement Period:25ms Pulse width:71us. Measurement Period:50ms Pulse width:71us. Measurement Period:100ms Pulse width:71us. Measurement Period:200ms Pulse width:71us. Measurement Period:400ms Default: Pulse width:42us. Measurement Period:100ms
RM_OB1203_CFG_DEVICE(x)_PROX_MOVING_AVERAGE ("x" = 0-1)	Enable the moving average for Proximity mode. Selection: Disabled Enabled Default: Disabled
RM_OB1203_CFG_DEVICE(x)_PROX_HYSTERESIS ("x" = 0-1)	Specify the hysteresis value (7bits) for Proximity mode. Min = 0x00 and Max = 0x7F. Selection: None (Need user to input) Default: 0x00
RM_OB1203_CFG_DEVICE(x)_PPG_SENSOR_MODE ("x" = 0-1)	Specify the sensor mode for PPG mode. Selection: PPG1 mode PPG2 mode Default: PPG2 mode

RM_OB1203_CFG_ DEVICE(x)_PPG_ INTERRUPT_TYPE ("x" = 0-1)	Specify the interrupt type for PPG mode. Selection:Data FIFO Almost Full Default: Data
RM_OB1203_CFG_ DEVICE(x)_PPG_ IR_LED_CURRENT ("x" = 0-1)	Specify the current of IR LED (10bits) for PPG mode. Min = 0x000 and Max = 0x3FF Selection:None (Need user to input) Default: 0x366
RM_OB1203_CFG_ DEVICE(x)_PPG_ RED_LED_CURRENT ("x" = 0-1)	Specify the current of Red LED (9bits) for PPG mode. Min = 0x000 and Max = 0x1FF Selection:None (Need user to input) Default: 0x1B3
RM_OB1203_CFG_ DEVICE(x)_PPG_ POWER_SAVE_MODE ("x" = 0-1)	Enable the power save mode for PPG mode. Selection:Disabled Enabled Default: Disabled
RM_OB1203_CFG_ DEVICE(x)_PPG_ IR_LED_ANA_CAN ("x" = 0-1)	Enable the IR LED analog cancellation for PPG mode. Selection:Disabled Enabled (50% offset of the full-scale value) Default: Disabled
RM_OB1203_CFG_ DEVICE(x)_PPG_ RED_LED_ANA_CAN ("x" = 0-1)	Enable the red LED analog cancellation for PPG mode. Selection:Disabled Enabled (50% offset of the full-scale value) Default: Disabled
RM_OB1203_CFG_ DEVICE(x)_PPG_ NUM_AVERAGED_ SAMPLES ("x" = 0-1)	Specify the number of averaged PPG samples for PPG mode. Selection:1 (No averaging) 2 consecutives samples are averaged 4 consecutives samples are averaged 8 consecutives samples are averaged 16 consecutives samples are averaged 32 consecutives samples are averaged Default: 8 consecutives samples are averaged
RM_OB1203_CFG_ DEVICE(x)_PPG_ WIDTH_PERIOD ("x" = 0-1)	Specify the pulse width and measurement period for PPG mode Selection:Pulse width:130us. Measurement Period:0.3125ms. (PPG1 mode only) Pulse width:130us. Measurement Period:0.625ms Pulse width:130us. Measurement Period:1ms Pulse width:130us. Measurement Period:1.25ms Pulse width:130us. Measurement Period:2.5ms Pulse width:130us. Measurement Period:5ms Pulse width:130us. Measurement Period:10ms Pulse width:130us. Measurement Period:20ms Pulse width:247us. Measurement Period:0.625ms. (PPG1 mode only) Pulse width:247us. Measurement Period:1ms Pulse width:247us. Measurement Period:1.25ms Pulse width:247us. Measurement Period:2.5ms Pulse width:247us. Measurement Period:5ms Pulse width:247us. Measurement Period:10ms Pulse width:247us. Measurement Period:20ms Pulse width:481us. Measurement Period:1ms. (PPG1 mode only) Pulse width:481us. Measurement Period:1.25ms. (PPG1 mode only) Pulse width:481us. Measurement Period:2.5ms Pulse width:481us. Measurement Period:5ms. Pulse width:481us. Measurement Period:10ms Pulse width:481us. Measurement Period:20ms Pulse width:949us. Measurement Period:2.5ms. (PPG1 mode only) Pulse width:949us. Measurement Period:5ms Pulse width:949us. Measurement Period:10ms Pulse width:949us. Measurement Period:20ms Default: Pulse width:130us. Measurement Period:1.25ms

RM_OB1203_CFG_ DEVICE(x)_PPG_ FIFO_ROLLOVER ("x" = 0-1)	Enable the FIFO rollover for PPG mode. Selection: Disabled Enabled Default: Disabled
RM_OB1203_CFG_ DEVICE(x)_PPG_ FIFO_EMPTY_NUM ("x" = 0-1)	Specify the number of empty FIFO words when the FIFO almost full interrupt is issued (4bits). Min = 0x0 and Max = 0xF Selection: None (Need user to input.) Default: 0xC

Note 1: Do not set same "I2C Communication Device(y)" number for sensor device 0 and sensor device 1.  
The "y" = 0-15.

### 2.7.7 RRH46410 FIT Module Configuration (r\_rrh46410\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_RRH46410_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_RRH46410_CFG_DEVICE_NUM_MAX	Specify maximum numbers of RRH46410 sensors. Selection: 1 Default: 1
RM_RRH46410_CFG_DEVICE0_OPERATION_MODE	Specify operation mode of RRH46410 sensors. Selection: Not selected IAQ 2nd Gen. IAQ 2nd Gen. Ultra-Low Power PBAQ. Default: Not selected
RM_RRH46410_CFG_DEVICE0_COMMS_INSTANCE	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(x) (x: 0 - 15) Default: I2C Communication Device0 (When Device0 is selected, set "g_comms_i2c_device0")
RM_RRH46410_CFG_DEVICE0_COMMS_I2C_CALLBACK	Specify user I2C callback function name. Selection: None (Need user to input.) Default: rrh46410_user_i2c_callback0
RM_RRH46410_CFG_DEVICE0_IRQ_ENABLE	Enable IRQ. Selection: Enabled Disabled Default: Disabled
RM_RRH46410_CFG_DEVICE0_IRQ_CALLBACK	Specify user IRQ callback function name. Selection: None (Need user to input.) Default: rrh46410_user_irq_callback0
RM_RRH46410_CFG_DEVICE0_IRQ_NUMBER	Specify IRQ number. Selection: IRQ_NUM_0 - IRQ_NUM_15 Default: IRQ_NUM_0
RM_RRH46410_CFG_DEVICE0_IRQ_TRIGGER	Specify IRQ trigger. Selection: IRQ_TRIG_LOWLEV IRQ_TRIG_FALLING IRQ_TRIG_RISING IRQ_TRIG_BOTH_EDGE Default: IRQ_TRIG_FALLING
RM_RRH46410_CFG_DEVICE0_IRQ_PRIORITY	Specify IRQ interrupt priority. Selection: IRQ_PRI_0 - IRQ_PRI_15 Default: IRQ_PRI_2

Note 1: Be sure to specify a valid communication line number.

### 2.7.8 RRH62000 FIT Module Configuration (r\_rrh62000\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_RRH62000_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_RRH62000_CFG_DEVICE_NUM_MAX	Specify maximum numbers of RRH62000 sensors. Selection: 1 Default: 1
RM_RRH62000_CFG_DEVICE0_MOVING_AVERAGE	Specify the number of moving average (times) for RRH62000 Sensor device. Min = 1 and Max = 60. Default: 10
RM_RRH62000_CFG_DEVICE0_FAN_SPEED	Specify the fan speed control (%) for RRH62000 Sensor device. Min = 60 and Max = 100. Default: 86
RM_RRH62000_CFG_DEVICE0_COMMS_INSTANCE	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(x) (x: 0 - 15) Default I2C Communication Device0 (When Device0 is selected, set "g_comms_i2c_device0")
RM_RRH62000_CFG_DEVICE0_COMMS_I2C_CALLBACK	Specify user I2C callback function name. Selection: None (Need user to input.) Default: rrh62000_user_i2c_callback0

Note 1: Be sure to specify a valid communication line number.

### 2.7.9 ZMOD4XXX FIT Module Configuration (r\_zmod4xxx\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

**Do not include both NO2O3 Lib and IAQ2nd Lib at a project at the same time using the ZMOD4XXX FIT module V1.40 or higher.**

Note: INT signal on the following boards is inverted.

US082-ZMOD4410EVZ  
US082-ZMOD4450EVZ  
US082-ZMOD4510EVZ

Configuration Options	Description (Smart Configurator Display)
RM_ZMOD4XXX_CFG_ PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
RM_ZMOD4XXX_CFG_ DEVICE_NUM_MAX	Specify maximum numbers of ZMOD4XXX sensors. Selection: 1 - 2 Default: 1
RM_ZMOD4XXX_CFG_ DEVICE(x)_OPERATION_MODE ("x" = 0-1)	Specify operation mode of ZMOD4410, ZMOD4450 and ZMOD4510 sensors. (Note 2) Selection: Not selected IAQ 1st Gen. (Continuous) IAQ 1st Gen. (Low Power) IAQ 2nd Gen. Odor Sulfur-based Odor OAQ 2nd Gen. IAQ 2nd Gen. Ultra-Low Power RAQ Rel IAQ. Rel IAQ. Ultra-Low Power PBAQ. NO2 O3 Default: Not selected
RM_ZMOD4XXX_CFG_ DEVICE(x)_COMMS_INSTANCE ("x" = 0-1)	Specify using communication line instance. (Note 1) Selection: I2C Communication Device(y) (y: 0 - 15) Default: I2C Communication Device(x) (When Device0 is selected, set "g_comms_i2c_device0")
RM_ZMOD4XXX_CFG_ DEVICE(x)_COMMS_I2C_ CALLBACK ("x" = 0-1)	Specify I2C callback function name. Selection: None (Need user to input.) Default: zmod4xxx_user_i2c_callback(x)
RM_ZMOD4XXX_CFG_ DEVICE(x)_IRQ_ENABLE ("x" = 0-1)	Enable IRQ. Selection: Enabled Disabled Default: Disabled
RM_ZMOD4XXX_CFG_ DEVICE(x)_IRQ_CALLBACK ("x" = 0-1)	Specify IRQ callback function name. Selection: None (Need user to input.) Default: zmod4xxx_user_irq_callback(x)
RM_ZMOD4XXX_CFG_ DEVICE(x)_IRQ_NUMBER ("x" = 0-1)	Specify IRQ number. Selection: IRQ_NUM_0 - IRQ_NUM_15 Default: IRQ_NUM_0




RM_ZMOD4XXX_CFG_DEVICE(x)_IRQ_TRIGGER ("x" = 0-1)	Specify IRQ trigger. Selection: IRQ_TRIG_LOWLEV IRQ_TRIG_FALLING IRQ_TRIG_RISING IRQ_TRIG_BOTH_EDGE Default:  IRQ_TRIG_RISING
RM_ZMOD4XXX_CFG_DEVICE(x)_IRQ_PRIORITY ("x" = 0-1)	Specify IRQ interrupt priority Selection: IRQ_PRI_0 - IRQ_PRI_15 Default:  IRQ_PRI_2

Note 1: Do not set same "I2C Communication Device(y)" number for sensor device 0 and sensor device 1. The "y" = 0-15.

Note 2: When creating a project using "GCC for Renesas RX" toolchain with the "Make the double data type 64-bits wide" of "Additional CPU Option" is enabled, the library files for this option are needed to set by user itself.

The library files are attached in sub folders under ".\r\_zmod4xxx\_rx\lib\" in ZMOD4XXX FIT module. "\_64bits" is added in the name of these library files.

Replace the library file name with "\*\_64bits" file name in following figure of "Settings" of "C/C++ Build" in properties of the project after generating the code.

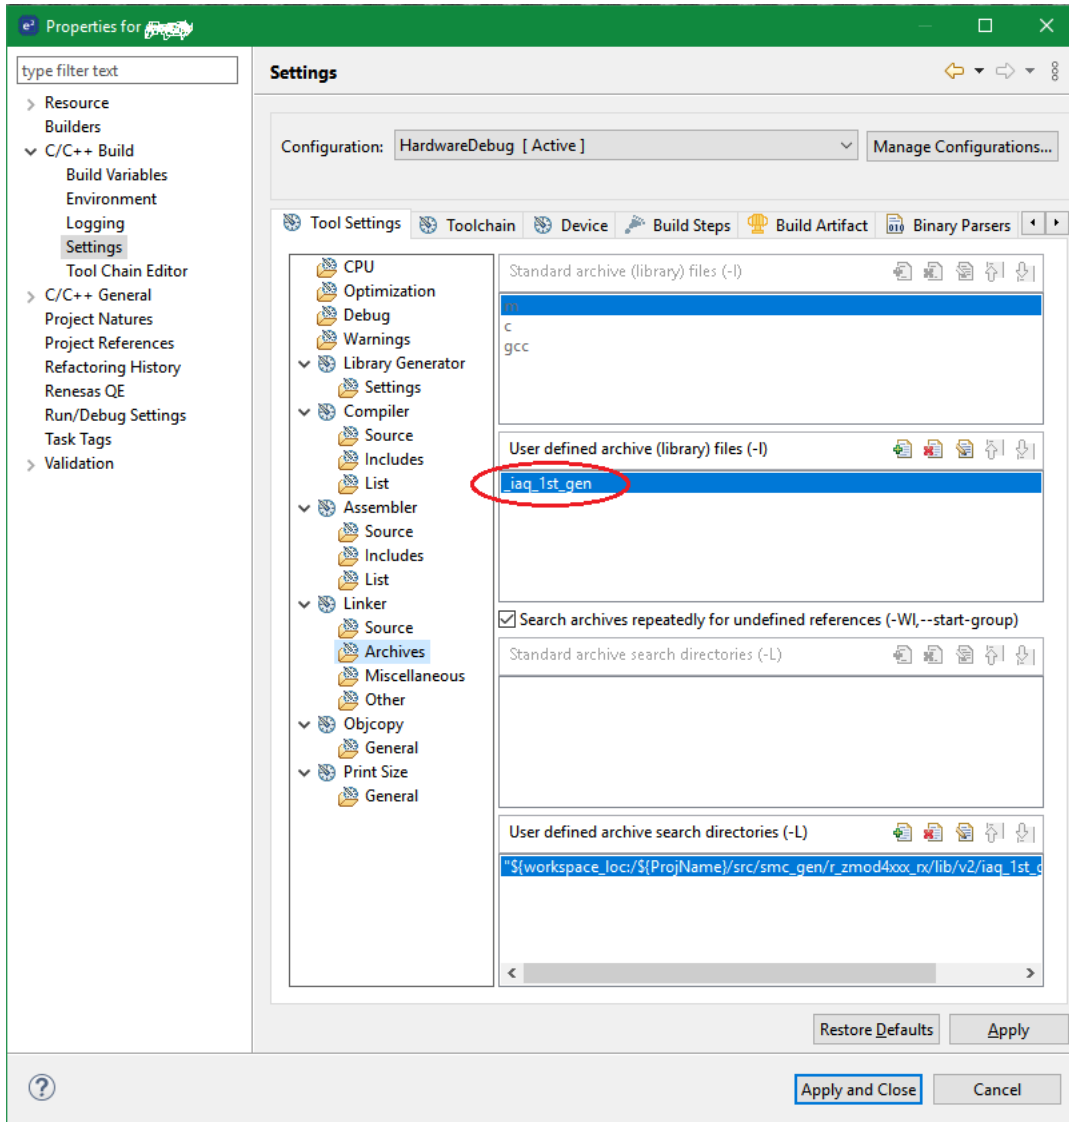

### 2.7.10 COMMS FIT Module Configuration (r\_comms\_i2c\_rx\_config.h)

The following explains the option names and setting values of this FIT module. The configuration settings shown in the following table are set on Smart Configurator.

Configuration Options	Description (Smart Configurator Display)
RM_COMMS_I2C_CFG_PARAM_CHECKING_ENABLE	Specify whether to include code for API parameter checking. Selection: BSP Enabled Disabled Default: BSP
COMMS_I2C_CFG_BUS_NUM_MAX	Set the numbers (max.) of I2C buses. Selection: Unused, 1-16 Default: 1
COMMS_I2C_CFG_DEVICE_NUM_MAX	Set the numbers (max.) of I2C devices. Selection: Unused, 1-16 Default: 1
COMMS_I2C_CFG_RTOS_BLOCKING_SUPPORT_ENABLE	Specify blocking operation of RTOS project. Selection: Enabled Disabled Default: Enabled
COMMS_I2C_CFG_RTOS_BUS_LOCK_SUPPORT_ENABLE	Specify bus locked operation of RTOS project. Selection: Enabled Disabled Default: Enabled
COMMS_I2C_CFG_BUS(x)_DRIVER_TYPE ("x" = 0-15)	Specify the driver type of I2C bus. Selection: Not selected RX FIT RIIC RX FIT SCI IIC Default: Not selected
COMMS_I2C_CFG_BUS(x)_DRIVER_CH ("x" = 0-15)	Specify the channel number of the IIC driver. Selection: None Default: 0 (Need user to input)
COMMS_I2C_CFG_BUS(x)_TIMEOUT ("x" = 0-15)	Specify the bus timeout of RTOS project. Selection: None Default: 0xFFFFFFFF (Need user to input)
COMMS_I2C_CFG_DEVICE(x)_BUS_CH ("x" = 0-15)	Specify the channel number of the I2C bus. Selection: I2C Shared Bus(x) (x: 0 -15) Default: I2C Shared Bus0
COMMS_I2C_CFG_DEVICE(x)_SLAVE_ADDR ("x" = 0-15)	Specify the slave address of the I2C device. Selection: None Default: 0x00 (Need user to input)
COMMS_I2C_CFG_DEVICE(x)_ADDR_MODE ("x" = 0-15)	Specify the slave address mode of the I2C device. Only support 7-bit address mode. Selection: 7-bit address mode Default: 7-bit address mode
COMMS_I2C_CFG_DEVICE(x)_CALLBACK ("x" = 0-15)	Specify Callback function of the I2C device. Selection: None Default: comms_i2c_user_callback(x) (Need user to input)
COMMS_I2C_CFG_DEVICE(x)_BLOCKING_TIMEOUT ("x" = 0-15)	Specify the blocking timeout of RTOS project. Selection: None Default: 0xFFFFFFFF (Need user to input)

## 2.8 Code Size

Typical code sizes associated with this FIT module are listed below.

The ROM (code and constants) and RAM (global data) sizes are determined by the build-time configuration options described in “2.7 Configuration Overview” and compiler version, compile options.

The values in the table below are confirmed under the following conditions.

- Module Version: r\_riic\_rx Ver.2.49 and r\_sci\_iic\_rx Ver.2.49
- Compiler: Renesas Electronics CC-RX
- Compile Options:
  - The option of “-lang = c99” is added to the default settings.
  - The compiler option default values.
    - optimization level: 2
    - optimization type: for size
    - data endianness: little-endian

OS	MCU	FIT Module	Area	Size [Bytes]	Condition	
Non	RX65N	FS1015 V1.00	ROM	497	Compiler Version: V3.06.00	
			RAM	20		
		FS2012 V1.03	ROM	292	Compiler Version: V3.06.00	
			RAM	20		
		FS3000 V1.00	ROM	501	Compiler Version: V3.06.00	
			RAM	20		
		HS300x V1.23	ROM	459	Programming mode disabled Compiler Version: V3.06.00	
			RAM	32		
		HS400x V1.01	ROM	1,033	Periodic Measurement is selected. (Note 1) Compiler Version: V3.06.00	
			RAM	52		
		OB1203 V1.01	ROM	2,932	Light Proximity sensor mode is selected. (Note 1) Compiler Version: V3.06.00	
			RAM	256		
		RRH46410 V1.00	ROM	1,223	IAQ 2nd Gen. is selected. (Note 1) Compiler Version: V3.06.00	
			RAM	72		
		RRH62000 V1.00	ROM	1,127	Compiler Version: V3.06.00	
			RAM	106		
		ZMOD 4XXX V1.40	ZMOD 4410	ROM	6,273	ZMOD4410 IAQ 2nd Gen. is selected. (Note 1) Compiler Version: V3.06.00
				RAM	545	
			ZMOD 4450	ROM	3,138	ZMOD4450 RAQ is selected. (Note 1) Compiler Version: V3.06.00
				RAM	366	
			ZMOD 4510	ROM	11,884	ZMOD4510 NO2 O3 is selected. (Note 1) Compiler Version: V3.06.00
				RAM	470	
		COMMS V1.22	ROM	878	When using one device. Compiler Version: V3.06.00	
			RAM	73		

Note 1: The code size depends on the selected operation mode.

OS	MCU	FIT Module	Area	Size [Bytes]	Condition	
FreeRTOS	RX65N	FS1015 V1.00	ROM	497	Compiler Version: V3.06.00	
			RAM	20		
		FS2012 V1.03	ROM	292	Compiler Version: V3.06.00	
			RAM	20		
		FS3000 V1.00	ROM	501	Compiler Version: V3.06.00	
			RAM	20		
		HS300x V1.23	ROM	459	Programming mode disabled	
			RAM	32	Compiler Version: V3.06.00	
		HS400x V1.01	ROM	1,033	Periodic Measurement is selected. (Note 1)	
			RAM	52	Compiler Version: V3.06.00	
		OB1203 V1.01	ROM	2,9467	Light Proximity sensor mode is selected. (Note 1)	
			RAM	412	Compiler Version: V3.06.00	
		RRH46410 V1.00	ROM	1,223	IAQ 2nd Gen. is selected. (Note 1)	
			RAM	72	Compiler Version: V3.06.00	
		RRH62000 V1.00	ROM	1,127	Compiler Version: V3.06.00	
			RAM	106		
		ZMOD 4410	ZMOD 4410	ROM	6,273	ZMOD4410 IAQ 2nd Gen. is selected. (Note 1)
				RAM	545	Compiler Version: V3.06.00
		V1.40	ZMOD 4450	ROM	3,138	ZMOD4450 RAQ is selected. (Note 1)
				RAM	366	Compiler Version: V3.06.00
	ZMOD 4510	ROM	11,884	ZMOD4510 NO2 O3 is selected. (Note 1)		
		RAM	470	Compiler Version: V3.06.00		
COMMS V1.22		ROM	1,155	When using one device.		
		RAM	105	Compiler Version: V3.06.00		

Note 1: The code size depends on the selected operation mode.

## 2.9 Parameters

The API function arguments are shown below.

The structures of “configuration structure” and “control structure” are used as parameters type. These structures are described along with the API function prototype declaration.

The configuration structure is used for the initial configuration of each Sensor FIT module and COMMS FIT module during the module open API call. The configuration structure is used purely as an input into each module.

The control structure is used as a unique identifier for each module instance of each Sensor FIT module and COMMS FIT module. It contains memory required by the module. Elements in the control structure are owned by the associated module and must not be modified by the application. The user allocates storage for a control structure, often as a global variable, then sends a pointer to it into the module open API call for the module.

### 2.9.1 Configuration Structure and Control Structure of FS1015 FIT Module

#### (1) Configuration Struct `rm_fsxxxx_cfg_t`

Refer to “2.9.3(1) Configuration Struct `rm_fsxxxx_cfg_t`”.

#### (2) Control Struct `rm_fs1015_ctrl_t`

This is FS1015 FIT module control block and allocates an instance specific control block to pass into the FS1015 API calls. This structure is implemented as “`rm_fs1015_instance_ctrl_t`” located in “`rm_fs1015.h`” file.

*/\*\* FS1015 Control Block \*/*

```
typedef struct rm_fs1015_instance_ctrl
```

```
{
    uint32_t          open;                ///< Open flag
    rm_fsxxxx_cfg_t  const * p_cfg;        ///< Pointer to FS1015 Configuration
    rm_comms_instance_t const * p_comms_i2c_instance; ///< Pointer of I2C Communications Middleware instance
    void const       * p_context;         ///< Pointer to the user-provided context
```

*/\* Pointer to callback and optional working memory \*/*

```
void (* p_callback)(rm_fsxxxx_callback_args_t * p_args);
} rm_fs1015_instance_ctrl_t;
```

## 2.9.2 Configuration Structure and Control Structure of FS2012 FIT Module

### (1) Configuration Struct `rm_fsxxxx_cfg_t`

Refer to “2.9.3(1) Configuration Struct `rm_fsxxxx_cfg_t`”.

### (2) Control Struct `rm_fs2012_ctrl_t`

This is FS2012 FIT module control block and allocates an instance specific control block to pass into the FS2012 API calls. This structure is implemented as “`rm_fs2012_instance_ctrl_t`” located in “`rm_fs2012.h`” file.

```
/** FS2012 Control Block */
```

```
typedef struct rm_fs2012_instance_ctrl
```

```
{
```

```
    uint32_t          open;           ///< Open flag
```

```
    rm_fsxxxx_cfg_t  const * p_cfg;   ///< Pointer to FS2012 Configuration
```

```
    rm_comms_instance_t const * p_comms_i2c_instance; ///< Pointer of I2C Communications Middleware instance structure
```

```
    void const * p_context;          ///< Pointer to the user-provided context
```

```
    /* Pointer to callback and optional working memory */
```

```
    void (* p_callback)(rm_fsxxxx_callback_args_t * p_args);
```

```
} rm_fs2012_instance_ctrl_t;
```

### 2.9.3 Configuration Structure and Control Structure of FS3000 FIT Module

#### (1) Configuration Struct `rm_fsxxxx_cfg_t`

This structure is located in "rm\_fsxxxx\_api.h" file.

```

/** FSXXXX Configuration */
typedef struct st_rm_fsxxxx_cfg
{
    rm_comms_instance_t const * p_instance;    ///< Pointer to Communications Middleware instance
    void const * p_context;                   ///< Pointer to the user-provided context
    void const * p_extend;                   ///< Pointer to extended configuration by instance of interface
    void (* p_callback)(rm_fsxxxx_callback_args_t * p_args);    ///< Pointer to callback function
} rm_fsxxxx_cfg_t;

```

#### (2) Control Struct `rm_fs3000_ctrl_t`

This is FS3000 FIT module control block and allocates an instance specific control block to pass into the FS3000 API calls. This structure is implemented as "rm\_fs3000\_instance\_ctrl\_t" located in "rm\_fs3000.h" file.

```

/** FS3000 Control Block */
typedef struct rm_fs3000_instance_ctrl
{
    uint32_t open;                            ///< Open flag
    rm_fsxxxx_cfg_t const * p_cfg;            ///< Pointer to FS3000 Configuration
    rm_comms_instance_t const * p_comms_i2c_instance;    ///< Pointer of I2C Communications Middleware instance
    structure
    void const * p_context;                   ///< Pointer to the user-provided context

    /* Pointer to callback and optional working memory */
    void (* p_callback)(rm_fsxxxx_callback_args_t * p_args);
} rm_fs3000_instance_ctrl_t;

```

## 2.9.4 Configuration Structure and Control Structure of HS300x FIT Module

### (1) Configuration Struct `rm_hs300x_cfg_t`

This structure is located in "rm\_hs300x\_api.h" file.

```
/** HS300X Configuration */
typedef struct st_rm_hs300x_cfg
{
    rm_comms_instance_t const * p_instance; ///< Pointer to Communications Middleware instance
    void const * p_context;                ///< Pointer to the user-provided context
    void const * p_extend;                 ///< Pointer to extended configuration by instance of interface
    void (* p_callback)(rm_hs300x_callback_args_t * p_args); ///< Pointer to callback function
} rm_hs300x_cfg_t;
```

### (2) Control Struct `rm_hs300x_ctrl_t`

This is HS300x FIT module control block and allocates an instance specific control block to pass into the HS300x API calls. This structure is implemented as "rm\_hs300x\_instance\_ctrl\_t" located in "rm\_hs300x.h" file.

```
/** HS300x Control Block */
typedef struct rm_hs300x_instance_ctrl
{
    uint32_t open;                ///< Open flag
    rm_hs300x_cfg_t const * p_cfg;    ///< Pointer to HS300X Configuration
    rm_comms_instance_t const * p_comms_i2c_instance; ///< Pointer of I2C Communications Middleware instance structure
    void const * p_context;          ///< Pointer to the user-provided context
    rm_hs300x_programmng_mode_params_t programming_mode; ///< Programming mode flag
    uint8_t buf[3];                ///< Buffer for I2C communications

    /* Pointer to callback and optional working memory */
    void (* p_callback)(rm_hs300x_callback_args_t * p_args);
} rm_hs300x_instance_ctrl_t;
```



## 2.9.5 Configuration Structure and Control Structure of HS400x FIT Module

### (1) Configuration Struct `rm_hs400x_cfg_t`

This structure is located in “`rm_hs400x_api.h`” file.

```

/** HS400X Configuration */
typedef struct st_rm_hs400x_cfg
{
    rm_hs400x_temperature_resolution_t const    temperature_resolution;    ///< Resolution for temperature
    rm_hs400x_humidity_resolution_t const      humidity_resolution;        ///< Resolution for humidity
    rm_hs400x_periodic_measurement_frequency_t const    frequency;    ///< Frequency for periodic
    measurement
    rm_comms_instance_t const    * p_comms_instance;    ///< Pointer to Communications Middleware instance
    void const    * p_context;    ///< Pointer to the user-provided context
    void const    * p_extend;    ///< Pointer to extended configuration by instance of interface
    void (* p_comms_callback)(rm_hs400x_callback_args_t * p_args);    ///< Pointer to callback function
} rm_hs400x_cfg_t;

```

### (2) Control Struct `rm_hs400x_ctrl_t`

This is HS400x FIT module control block and allocates an instance specific control block to pass into the HS400x API calls. This structure is implemented as “`rm_hs400x_instance_ctrl_t`” located in “`rm_hs400x.h`” file.

```

/** HS400x Control Block */
typedef struct rm_hs400x_instance_ctrl
{
    uint32_t    open;    ///< Open flag
    rm_hs400x_cfg_t const    * p_cfg;    ///< Pointer to HS400X Configuration
    rm_comms_instance_t const    * p_comms_i2c_instance;    ///< Pointer of I2C Communications Middleware instance
    structure
    void const    * p_context;    ///< Pointer to the user-provided context
    rm_hs400x_init_process_params_t    init_process_params;    ///< For the initialization process
    uint8_t    resolution_register;    ///< Register for temperature and humidity measurement resolution settings
    uint8_t    periodic_measurement_register[2];    ///< Register for periodic measurement settings
    volatile bool    periodic_measurement_stop;    ///< Flag for stop of periodic measurement
    volatile bool    no_hold_measurement_read;    ///< Flag for data read of No-Hold measurement
    uint8_t    write_buf[18];    ///< Buffer for data write

    /* Pointer to callback and optional working memory */
    void (* p_comms_callback)(rm_hs400x_callback_args_t * p_args);
} rm_hs400x_instance_ctrl_t;

```

## 2.9.6 Configuration Structure and Control Structure of OB1203 FIT Module

### (1) Configuration Struct `rm_ob1203_cfg_t`

This structure is located in "rm\_ob1203\_api.h" file.

```

/** OB1203 configuration block */
typedef struct st_rm_ob1203_cfg
{
    #if BSP_CFG_RTOS
        rm_ob1203_semaphore_t const * p_semaphore; ///< The semaphore to wait for callback. This is used for
        another data read/write after a communication
    #endif
        uint32_t semaphore_timeout; ///< timeout for callback.
        rm_comms_instance_t const * p_comms_instance; ///< Pointer to Communications Middleware instance.
        void const * p_irq_instance; ///< Pointer to IRQ instance.
        void const * p_context; ///< Pointer to the user-provided context.
        void const * p_extend; ///< Pointer to extended configuration by instance of interface.
        void (* p_comms_callback)(rm_ob1203_callback_args_t * p_args); ///< I2C Communications callback
        void (* p_irq_callback)(rm_ob1203_callback_args_t * p_args); ///< IRQ callback
} rm_ob1203_cfg_t;

```

### (2) Control Struct `rm_ob1203_ctrl_t`

This is OB1203 FIT module control block and allocates an instance specific control block to pass into the OB1203 API calls. This structure is implemented as "rm\_ob1203\_instance\_ctrl\_t" located in "rm\_ob1203.h" file.

```

/** OB1203 control block */
typedef struct st_rm_ob1203_instance_ctrl
{
    uint32_t open; ///< Open flag
    rm_ob1203_cfg_t const * p_cfg; ///< Pointer of configuration block
    uint8_t buf[8]; ///< Buffer for I2C communications
    rm_ob1203_init_process_params_t init_process_params; ///< For the initialization process.
    uint8_t register_address; ///< Register address to access
    volatile rm_ob1203_device_status_t * p_device_status; ///< Pointer to device status
    volatile rm_ob1203_fifo_info_t * p_fifo_info; ///< Pointer to FIFO information structure.
    volatile bool fifo_reset; ///< Flag for FIFO reset for PPG mode
    volatile bool prox_gain_update; ///< Flag for gain update for Proximity mode
    volatile bool interrupt_bits_clear; / ///< Flag for clearing interrupt bits.
    rm_comms_instance_t const * p_comms_i2c_instance; ///< Pointer of I2C Communications Middleware instance
    structure
    rm_ob1203_mode_extended_cfg_t * p_mode; ///< Pointer of OB1203 operation mode extended configuration
    void const * p_irq_instance; ///< Pointer to IRQ instance.
    void const * p_context; ///< Pointer to the user-provided context

    /* Pointer to callback and optional working memory */
    void (* p_comms_callback)(rm_ob1203_callback_args_t * p_args); ///< I2C Communications callback
    void (* p_irq_callback)(rm_ob1203_callback_args_t * p_args); ///< IRQ callback
} rm_ob1203_instance_ctrl_t;

```

## 2.9.7 Configuration Structure and Control Structure of RRH46410 FIT Module

### (1) Configuration Struct `rm_zmod4xxx_cfg_t`

This structure is located in “`rm_zmod4xxx_api.h`” file.

Refer to “2.9.9(1) Configuration Struct `rm_zmod4xxx_cfg_t`”.

### (2) Control Struct `rm_zmod4xxx_ctrl_t`

This is RRH46410 FIT module control block and allocates an instance specific control block to pass into the RRH46410 API calls. This structure is implemented as “`rm_rrh46410_instance_ctrl_t`” located in “`rm_rrh46410.h`” file.

*/\*\* RRH46410 control block \*/*

```
typedef struct st_rm_rrh46410_instance_ctrl
```

```
{
```

```
    uint32_t open; //< Open flag
    uint8_t write_buf[RM_RRH46410_MAX_I2C_BUF_SIZE]; //< Write buffer for I2C communications
    uint8_t read_buf[RM_RRH46410_MAX_I2C_BUF_SIZE]; //< Read buffer for I2C communications
    uint8_t * p_read_data //< Pointer to read data. This is used for checking error code and checksum in callback
    uint8_t read_bytes //< Read bytes. This is used for checking error code and checksum in callback
    volatile uint8_t prev_sample_id; //< Previous sample ID. This is used for checking if sensor is in stabilization
    volatile int16_t warmup_counts //< Counts for warning up. This is used for checking if sensor is in stabilization
    volatile rm_zmod4xxx_event_t event; //< Callback event
    rm_rrh46410_init_process_params_t init_process_params; //< For the initialization process
    rm_zmod4xxx_cfg_t const * p_cfg; //< Pointer of configuration block
    rm_comms_instance_t const * p_comms_i2c_instance; //< Pointer of I2C Communications Middleware instance
    structure
    void const * p_irq_instance; //< Pointer to IRQ instance
    void const * p_context; //< Pointer to the user-provided context
```

*/\* Pointer to callback and optional working memory \*/*

```
void (* p_comms_callback)(rm_zmod4xxx_callback_args_t * p_args); //< I2C Communications callback
```

```
void (* p_irq_callback)(rm_zmod4xxx_callback_args_t * p_args); //< IRQ callback
```

```
} rm_rrh46410_instance_ctrl_t;
```

## 2.9.8 Configuration Structure and Control Structure of RRH62000 FIT Module

### (1) Configuration Struct `rm_air_sensor_cfg_t`

This structure is located in "rm\_air\_sensor\_api.h" file.

```
/** AIR SENSOR configuration block */
typedef struct st_rm_air_sensor_cfg
{
    rm_comms_instance_t const * p_comms_instance; ///< Pointer to Communications Middleware instance.
    void const * p_context; ///< Pointer to the user-provided context.
    void const * p_extend; ///< Pointer to extended configuration by instance of interface.
    void (* p_comms_callback)(rm_air_sensor_callback_args_t * p_args); ///< I2C Communications callback
} rm_air_sensor_cfg_t;
```

### (2) Control Struct `rm_air_sensor_ctrl_t`

This is RRH62000 FIT module control block and allocates an instance specific control block to pass into the RRH62000 API calls. This structure is implemented as "rm\_rrh62000\_instance\_ctrl\_t" located in "rm\_rrh62000.h" file.

```
/** RRH62000 control block */
typedef struct st_rm_rrh62000_instance_ctrl
{
    uint32_t open; ///< Open flag
    uint8_t write_buf[2]; ///< Write buffer for I2C communications
    uint8_t read_buf[2]; ///< Read buffer for I2C communications
    uint8_t * p_read_data; ///< Pointer to read data. This is used for checking error code and checksum in callback
    uint8_t read_bytes; ///< Read bytes. This is used for checking error code and checksum in callback
    volatile rm_air_sensor_event_t event; ///< Callback event
    rm_rrh62000_status_params_t status; ///< Status parameter for arriving new measurement results
    rm_rrh62000_status_params_t cleaning_status; ///< Status parameter for ZMOD cleaning
    rm_rrh62000_init_process_params_t init_process_params; ///< For the initialization process.
    rm_air_sensor_cfg_t const * p_cfg; ///< Pointer of configuration block
    rm_comms_instance_t const * p_comms_i2c_instance; ///< Pointer of I2C Communications
    Middleware instance structure
    void const * p_context; ///< Pointer to the user-provided context

    /* Pointer to callback and optional working memory */
    void (* p_comms_callback)(rm_air_sensor_callback_args_t * p_args); ///< I2C Communications callback
} rm_rrh62000_instance_ctrl_t;
```

## 2.9.9 Configuration Structure and Control Structure of ZMOD4xxx FIT Module

### (1) Configuration Struct `rm_zmod4xxx_cfg_t`

This structure is located in "rm\_zmod4xxx\_api.h" file.

```
/** ZMOD4XXX configuration block */
typedef struct st_rm_zmod4xxx_cfg
{
    rm_comms_instance_t const * p_comms_instance;    ///< Pointer to Communications Middleware instance
    void const * p_irq_instance;                    ///< Pointer to IRQ instance
    void const * p_context;                          ///< Pointer to the user-provided context
    void const * p_extend;                           ///< Pointer to extended configuration by instance of interface
    void (* p_comms_callback)(rm_zmod4xxx_callback_args_t * p_args);    ///< I2C Communications callback
    void (* p_irq_callback)(rm_zmod4xxx_callback_args_t * p_args);      ///< IRQ callback
} rm_zmod4xxx_cfg_t;
```

### (2) Control Struct `rm_zmod4xxx_ctrl_t`

This is ZMOD4XXX FIT module control block and allocates an instance specific control block to pass into the ZMOD4XXX API calls. This structure is implemented as "rm\_zmod4xxx\_instance\_ctrl\_t" located in "rm\_zmod4xxx.h" file.

```
/** ZMOD4XXX control block */
typedef struct st_rm_zmod4xxx_instance_ctrl
{
    uint32_t open;                                  ///< Open flag
    uint8_t buf[RM_ZMOD4XXX_MAX_I2C_BUF_SIZE];     ///< Buffer for I2C communications
    uint8_t register_address;                       ///< Register address to access
    rm_zmod4xxx_status_params_t status;            ///< Status parameter
    volatile bool dev_err_check;                   ///< Flag for checking device error
    volatile rm_zmod4xxx_event_t event;            ///< Callback event
    rm_zmod4xxx_init_process_params_t init_process_params;    ///< For the initialization process
    rm_zmod4xxx_cfg_t const * p_cfg;                ///< Pointer of configuration block
    rm_comms_instance_t const * p_comms_i2c_instance;    ///< Pointer of I2C Communications Middleware instance structure
    rm_zmod4xxx_lib_extended_cfg_t * p_zmod4xxx_lib;    ///< Pointer of ZMOD4XXX Lib extended configuration
    void const * p_irq_instance;                    ///< Pointer to IRQ instance
    void const * p_context;                          ///< Pointer to the user-provided context

    /* Pointer to callback and optional working memory */
    void (* p_comms_callback)(rm_zmod4xxx_callback_args_t * p_args);    ///< I2C Communications callback
    void (* p_irq_callback)(rm_zmod4xxx_callback_args_t * p_args);      ///< IRQ callback
} rm_zmod4xxx_instance_ctrl_t;
```

## 2.9.10 Configuration Structure and Control Structure of COMMS FIT Module

### (1) Configuration Struct `rm_comms_cfg_t`

This structure is located in "rm\_comms\_api.h" file.

/\*\* Communications middleware configuration block \*/

```
typedef struct st_rm_comms_cfg
```

```
{
```

```
    uint32_t        semaphore_timeout;    ///< timeout for callback.
```

```
    void (* p_callback)(rm_comms_callback_args_t * p_args);    ///< Pointer to callback function, mostly used if
using non-blocking functionality.
```

```
    void const     * p_lower_level_cfg;    ///< Pointer to lower level driver configuration structure.
```

```
    void const     * p_extend;            ///< Pointer to extended configuration by instance of interface.
```

```
    void const     * p_context;          ///< Pointer to the user-provided context
```

```
} rm_comms_cfg_t;
```

### (2) Control Struct `rm_comms_ctrl_t`

This is COMMS FIT module control block and allocates an instance specific control block to pass into the COMMS API calls. This structure is implemented as "rm\_comms\_i2c\_instance\_ctrl\_t" located in "rm\_comms\_i2c.h" file.

/\*\* Communications middleware control structure. \*/

```
typedef struct st_rm_comms_i2c_instance_ctrl
```

```
{
```

```
    rm_comms_cfg_t const    * p_cfg;            ///< middleware configuration.
```

```
    rm_comms_i2c_bus_extended_cfg_t * p_bus;    ///< Bus using this device;
```

```
    void                    * p_lower_level_cfg; ///< Used to reconfigure I2C driver
```

```
    uint32_t                open;              ///< Open flag.
```

```
    uint32_t                transfer_data_bytes; ///< Size of transfer data.
```

```
    uint8_t                 * p_transfer_data;  ///< Pointer to transfer data buffer.
```

```
    /* Pointer to callback and optional working memory */
```

```
    void (* p_callback)(rm_comms_callback_args_t * p_args);
```

```
    void const                * p_context;      ///< Pointer to the user-provided context
```

```
} rm_comms_i2c_instance_ctrl_t;
```

## 2.10 Return Values

The API function return values are shown below.

This enumeration is listed in `fsp_common_api.h` which is included in RX BSP (Board Support Package Module) Ver.6.21 or higher.

```
typedef enum e_fsp_err
{
    FSP_SUCCESS = 0,

    FSP_ERR_ASSERTION           = 1,    ///< A critical assertion has failed
    FSP_ERR_INVALID_POINTER    = 2,    ///< Pointer points to invalid memory location
    FSP_ERR_INVALID_ARGUMENT   = 3,    ///< Invalid input parameter
    FSP_ERR_INVALID_CHANNEL    = 4,    ///< Selected channel does not exist
    FSP_ERR_INVALID_MODE       = 5,    ///< Unsupported or incorrect mode
    FSP_ERR_UNSUPPORTED        = 6,    ///< Selected mode not supported by this API
    FSP_ERR_NOT_OPEN           = 7,    ///< Requested channel is not configured or API not open
    FSP_ERR_IN_USE             = 8,    ///< Channel/peripheral is running/busy
    FSP_ERR_OUT_OF_MEMORY      = 9,    ///< Allocate more memory in the driver's cfg.h
    FSP_ERR_HW_LOCKED         = 10,   ///< Hardware is locked
    FSP_ERR_IRQ_BSP_DISABLED   = 11,   ///< IRQ not enabled in BSP
    FSP_ERR_OVERFLOW          = 12,   ///< Hardware overflow
    FSP_ERR_UNDERFLOW         = 13,   ///< Hardware underflow
    FSP_ERR_ALREADY_OPEN      = 14,   ///< Requested channel is already open in a different configuration
    FSP_ERR_APPROXIMATION     = 15,   ///< Could not set value to exact result
    FSP_ERR_CLAMPED           = 16,   ///< Value had to be limited for some reason
    FSP_ERR_INVALID_RATE      = 17,   ///< Selected rate could not be met
    FSP_ERR_ABORTED           = 18,   ///< An operation was aborted
    FSP_ERR_NOT_ENABLED       = 19,   ///< Requested operation is not enabled
    FSP_ERR_TIMEOUT           = 20,   ///< Timeout error
    FSP_ERR_INVALID_BLOCKS    = 21,   ///< Invalid number of blocks supplied
    FSP_ERR_INVALID_ADDRESS   = 22,   ///< Invalid address supplied
    FSP_ERR_INVALID_SIZE      = 23,   ///< Invalid size/length supplied for operation
    FSP_ERR_WRITE_FAILED      = 24,   ///< Write operation failed
    FSP_ERR_ERASE_FAILED      = 25,   ///< Erase operation failed
    FSP_ERR_INVALID_CALL      = 26,   ///< Invalid function call is made
    FSP_ERR_INVALID_HW_CONDITION = 27, ///< Detected hardware is in invalid condition
    FSP_ERR_INVALID_FACTORY_FLASH = 28, ///< Factory flash is not available on this MCU
    FSP_ERR_INVALID_STATE     = 30,   ///< API or command not valid in the current state
    FSP_ERR_NOT_ERASED        = 31,   ///< Erase verification failed
    FSP_ERR_SECTOR_RELEASE_FAILED = 32, ///< Sector release failed
    FSP_ERR_NOT_INITIALIZED   = 33,   ///< Required initialization not complete
    FSP_ERR_NOT_FOUND         = 34,   ///< The requested item could not be found
    FSP_ERR_NO_CALLBACK_MEMORY = 35,   ///< Non-secure callback memory not provided for non-secure callback
    FSP_ERR_BUFFER_EMPTY      = 36,   ///< No data available in buffer

    /* Start of RTOS only error codes */
    FSP_ERR_INTERNAL          = 100,   ///< Internal error
    FSP_ERR_WAIT_ABORTED     = 101,   ///< Wait aborted

    /* Start of Sensor specific */
    FSP_ERR_SENSOR_INVALID_DATA = 0x30000, ///< Data is invalid.
    FSP_ERR_SENSOR_IN_STABILIZATION = 0x30001, ///< Sensor is stabilizing.
    FSP_ERR_SENSOR_MEASUREMENT_NOT_FINISHED = 0x30002, ///< Measurement is not finished.

    /* Start of COMMS specific */
    FSP_ERR_COMMS_BUS_NOT_OPEN = 0x40000, ///< Bus is not open.
} fsp_err_t;
```

## 2.11 Adding the FIT Module to Your Project

This module must be added to each project in which it is used. Renesas recommends using “Smart Configurator” described in (1) or (3). However, “Smart Configurator” only supports some RX devices. Please use the methods of (2) or (4) for unsupported RX devices.

### (1) Adding the FIT Module to Your Project Using “Smart Configurator” in e<sup>2</sup> studio

By using the “Smart Configurator” in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)” for details.

### (2) Adding the FIT Module to Your Project Using “FIT Configurator” in e<sup>2</sup> studio

By using the “FIT Configurator” in e<sup>2</sup> studio, the FIT module is automatically added to your project. Refer to “Adding Firmware Integration Technology Modules to Projects (R01AN1723)” for details.

### (3) Adding the FIT Module to Your Project Using “Smart Configurator” on CS+

By using the “Smart Configurator Standalone version” in CS+, the FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)” for details.

### (4) Adding the FIT Module to Your Project in CS+

In CS+, please manually add the FIT module to your project. Refer to “Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)” for details.

If you use Smart Configurator, both RIIC FIT module and SCI\_IIC FIT module will be added. Manually remove the unnecessary FIT module.



### 3. FS1015 API Functions

#### 3.1 RM\_FS1015\_Open()

This function opens and configures the FS1015 FIT module. This function must be called before calling any other FS1015 API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_FS1015_Open (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_cfg_t const * const p_cfg
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.1(2) Control Struct `rm_fs1015_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.1(1) Configuration Struct `rm_fsxxxx_cfg_t`.

#### Return Values

FSP\_SUCCESS FS1015 successfully configured.

FSP\_ERR\_ASSERTION Null pointer, or one or more configuration options is invalid.

FSP\_ERR\_ALREADY\_OPEN Module is already open. This module can only be opened once.

#### Properties

Prototyped in `rm_fs1015.h`

#### Description

This function opens and configures the FS1015 FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_ctrl->p_cfg`” in “`p_ctrl`” structure.

This function does configurations by setting the members of “`p_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets callback and context.
- Sets an open flag.

This function calls an open API of COMMS FIT module to open communication middleware after all above initializations are done.

#### Special Notes

None

### 3.2 RM\_FS1015\_Close()

This function disables specified FS1015 control block.

#### Format

```
fsp_err_t RM_FS1015_Close (rm_fsxxxx_ctrl_t * const p_ctrl)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.1(2) Control Struct `rm_fs1015_ctrl_t`.

#### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

#### Properties

Prototyped in `rm_fs1015.h`

#### Description

This function calls a close API of COMMS FIT module to close communication middleware.

This function clears an open flag after all above are done.

#### Special Notes

None

### 3.3 RM\_FS1015\_Read()

This function reads ADC data from FS1015 sensor.

#### Format

```
fsp_err_t RM_FS1015_Read (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_raw_data_t  * const p_raw_data
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.1(2) Control Struct `rm_fs1015_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from FS1015 sensor

*/\*\* FSXXXX raw data \*/*

```
typedef struct st_rm_fsxxxx_raw_data
{
    uint8_t      adc_data[5];
} rm_fsxxxx_raw_data_t;
```

#### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.

#### Properties

Prototyped in `rm_fs1015.h`

#### Description

This function reads ADC data from FS1015 sensor.

The read API of COMMS FIT module is called in this function.

The ADC data read from FS1015 sensor is stored in “`p_raw_data`” structure. The read data length is 3 bytes according to FS1015 datasheet.

The detail information is described in “Digital Output Measurements” of FS1015 Series Datasheet.

#### Special Notes

None

### 3.4 RM\_FS1015\_DataCalculate()

This function calculates air velocity value [m/sec] from ADC data.

#### Format

```
fsp_err_t RM_FS1015_DataCalculate (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_raw_data_t * const p_raw_data,
    rm_fsxxxx_data_t     * const p_fs1015_data
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.1(2) Control Struct `rm_fs1015_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from FS1015 sensor

*/\*\* FSXXXX raw data \*/*

```
typedef struct st_rm_fsxxxx_raw_data
```

```
{
    uint8_t      adc_data[5];
} rm_fsxxxx_raw_data_t;
```

*p\_fs1015\_data*

Pointer to FS1015 sensor measurement results data structure

*\*\* FSXXXX data block \*/*

```
typedef struct st_rm_fsxxxx_data
```

```
{
    rm_fsxxxx_sensor_data_t  flow;
    uint32_t                 count;
} rm_fsxxxx_data_t;
```

The “`rm_fsxxxx_sensor_data_t`” structure is defined as following.

*/\*\* FSXXXX sensor data block \*/*

```
typedef struct st_rm_fsxxxx_sensor_data
```

```
{
    int16_t      integer_part;
    int16_t      decimal_part;    ///< To two decimal places
} rm_fsxxxx_sensor_data_t;
```

#### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_SENSOR_INVALID_DATA	Data is invalid.

#### Properties

Prototyped in `rm_fs1015.h`

#### Description

This function calculates the air velocity value [m/sec] from the ADC data stored in “`rm_fsxxxx_raw_data_t p_raw_data`” and stores the calculated results to “`rm_fsxxxx_data_t p_fs1015_data`” structure.

This function calculates the air velocity value [m/sec] from the count value.

The relationships between Air velocity and Count value are as follows.

- FS1015-1005

Air Velocity (meter/sec)	Analog Output (Volt)	Digital Output (Counts)
0	0.5	409
1.07	1.118	915
2.01	1.858	1522
3	2.522	2066
3.97	3.08	2523
4.96	3.55	2908
5.98	3.075	3256
6.99	4.361	3572
7.23	4.5	3686

The detail information is described in “Flow Output Curve” of FS1015 Series Datasheet.

### Special Notes

None

### 3.5 fs1015\_user\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is fs1015\_user\_callback0, fs1015\_user\_callback1.

#### Format

```
void fs1015_user_callback0(rm_fsxxxx_callback_args_t * p_args)
void fs1015_user_callback1(rm_fsxxxx_callback_args_t * p_args)
```

#### Parameters

*p\_args*

```
/** FSXXXX callback parameter definition */
typedef struct st_rm_fsxxxx_callback_args
{
    void const          * p_context;
    rm_fsxxxx_event_t   event;
} rm_fsxxxx_callback_args_t;
```

#### Return Values

None

#### Properties

Prototyped in rm\_fs1015\_instance.c

#### Description

None

#### Special Notes

None

### 3.6 Usage Example of FS1015 FIT Module

Refer to a sample code included in Application Note “RA Family, RX Family, RL78 Family, RZ Family FS1015 Sample Software Manual (R01AN6049)”.

## 4. FS2012 API Functions

### 4.1 RM\_FS2012\_Open()

This function opens and configures the FS2012 FIT module. This function must be called before calling any other FS2012 API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_FS2012_Open (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_cfg_t const * const p_cfg
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.2(2)Control Struct `rm_fs2012_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.2(1)Configuration Struct `rm_fsxxxx_cfg_t`.

#### Return Values

FSP\_SUCCESS FS2012 successfully configured.

FSP\_ERR\_ASSERTION Null pointer, or one or more configuration options is invalid.

FSP\_ERR\_ALREADY\_OPEN Module is already open. This module can only be opened once.

#### Properties

Prototyped in `rm_fs2012.h`

#### Description

This function opens and configures the FS2012 FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_ctrl->p_cfg`” in “`p_ctrl`” structure.

This function does configurations by setting the members of “`p_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets callback and context.
- Sets an open flag.

This function calls an open API of COMMS FIT module to open communication middleware after all above initializations are done.

#### Special Notes

None

## 4.2 RM\_FS2012\_Close()

This function disables specified FS2012 control block.

### Format

```
fsp_err_t RM_FS2012_Close (rm_fsxxxx_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.2(2)Control Struct rm\_fs2012\_ctrl\_t.

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_fs2012.h

### Description

This function calls a close API of COMMS FIT module to close communication middleware.

This function clears an open flag after all above are done.

### Special Notes

None



### 4.3 RM\_FS2012\_Read()

This function reads ADC data from FS2012 sensor.

#### Format

```
fsp_err_t RM_FS2012_Read (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_raw_data_t  * const p_raw_data
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.2(2)Control Struct `rm_fs2012_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from FS2012 sensor

*/\*\* FSXXXX raw data \*/*

```
typedef struct st_rm_fsxxxx_raw_data
```

```
{
    uint8_t      adc_data[5];
} rm_fsxxxx_raw_data_t;
```

#### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.

#### Properties

Prototyped in `rm_fs2012.h`

#### Description

This function reads ADC data from FS2012 sensor.

The read API of COMMS FIT module is called in this function.

The ADC data read from FS2012 sensor is stored in “`p_raw_data`” structure. The read data length is 2 bytes according to FS2012 datasheet.

The detail information is described in “7. I2C Sensor Interface” of FS2012 Series Datasheet.

#### Special Notes

None

## 4.4 RM\_FS2012\_DataCalculate()

This function calculates flow value [SLPM or SCCM] from ADC data.

### Format

```
fsp_err_t RM_FS2012_DataCalculate (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_raw_data_t  * const p_raw_data,
    rm_fsxxxx_data_t      * const p_fs2012_data
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.2(2)Control Struct rm\_fs2012\_ctrl\_t.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from FS2012 sensor

*/\*\* FSXXXX raw data \*/*

```
typedef struct st_rm_fsxxxx_raw_data
```

```
{
    uint8_t    adc_data[5];
} rm_fsxxxx_raw_data_t;
```

*p\_fs2012\_data*

Pointer to FS2012 sensor measurement results data structure

*\*\* FSXXXX data block \*/*

```
typedef struct st_rm_fsxxxx_data
```

```
{
    rm_fsxxxx_sensor_data_t    flow;
    uint32_t                    count;
} rm_fsxxxx_data_t;
```

The rm\_fsxxxx\_sensor\_data\_t structure is defined as following.

*/\*\* FSXXXX sensor data block \*/*

```
typedef struct st_rm_fsxxxx_sensor_data
```

```
{
    int16_t    integer_part;
    int16_t    decimal_part;    ///< To two decimal places
} rm_fsxxxx_sensor_data_t;
```

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_fs2012.h

### Description

This function calculates the flow value [SLPM or SCCM] from the ADC data stored in “rm\_fsxxxx\_raw\_data\_t p\_raw\_data” and stores the calculated results to “rm\_fsxxxx\_data\_t p\_fs2012\_data” structure.

This function calculates the flow value [SLPM or SCCM] from the count value according to the following.

The entire output of the FS2012 is 2 bytes. The flow rate for gas and liquid parts is calculated as follows:

Output Data:

- Number of bytes to read out: 2
- First returned byte: MSB
- Second returned byte: LSB

Gas Part Configurations (FS2012-1020-NG and FS2012-1100-NG)

- Conversion to SLPM (Standard liter er minute)
- Flow in SLPM = [(MSB << 8) + LSB] / 1000

The detail information is described in “8. Calculating Flow Sensor Output” of FS2012 Series Datasheet.

**Special Notes**

None

## 4.5 fs2012\_user\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is fs2012\_user\_callback0, fs2012\_user\_callback1.

### Format

```
void fs2012_user_callback0(rm_fsxxxx_callback_args_t * p_args)
void fs2012_user_callback1(rm_fsxxxx_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** FSXXXX callback parameter definition */
typedef struct st_rm_fsxxxx_callback_args
{
    void const          * p_context;
    rm_fsxxxx_event_t   event;
} rm_fsxxxx_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in rm\_fs2012\_instance.c

### Description

None

### Special Notes

None

## 4.6 Usage Example of FS2012 FIT Module

Refer to a sample code included in Application Note “RA Family, RX Family, RL78 Family, RZ Family FS2012 Sample Software Manual (R01AN6047)”.

## 5. FS3000 API Functions

### 5.1 RM\_FS3000\_Open()

This function opens and configures the FS3000 FIT module. This function must be called before calling any other FS3000 API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_FS3000_Open (  
    rm_fsxxxx_ctrl_t      * const p_ctrl,  
    rm_fsxxxx_cfg_t const * const p_cfg  
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.3(2) Control Struct `rm_fs3000_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.3(1) Configuration Struct `rm_fsxxxx_cfg_t`.

#### Return Values

FSP\_SUCCESS FS3000 successfully configured.

FSP\_ERR\_ASSERTION Null pointer, or one or more configuration options is invalid.

FSP\_ERR\_ALREADY\_OPEN Module is already open. This module can only be opened once.

#### Properties

Prototyped in `rm_fs3000.h`

#### Description

This function opens and configures the FS3000 FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_ctrl->p_cfg`” in “`p_ctrl`” structure.

This function does configurations by setting the members of “`p_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets callback and context.
- Sets an open flag.

This function calls an open API of COMMS FIT module to open communication middleware after all above initializations are done.

#### Special Notes

None

## 5.2 RM\_FS3000\_Close()

This function disables specified FS3000 control block.

### Format

```
fsp_err_t RM_FS3000_Close (rm_fsxxxx_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.3(2) Control Struct `rm_fs3000_ctrl_t`.

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in `rm_fs3000.h`

### Description

This function calls a close API of COMMS FIT module to close communication middleware.

This function clears an open flag after all above are done.

### Special Notes

None

### 5.3 RM\_FS3000\_Read()

This function reads ADC data from FS3000 sensor.

#### Format

```
fsp_err_t RM_FS3000_Read (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_raw_data_t  * const p_raw_data
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.3(2) Control Struct `rm_fs3000_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from FS3000 sensor

*/\*\* FSXXXX raw data \*/*

```
typedef struct st_rm_fsxxxx_raw_data
{
    uint8_t    adc_data[5];
} rm_fsxxxx_raw_data_t;
```

#### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.

#### Properties

Prototyped in `rm_fs3000.h`

#### Description

This function reads ADC data from FS3000 sensor.

The read API of COMMS FIT module is called in this function.

The ADC data read from FS3000 sensor is stored in “`p_raw_data`” structure. The read data length is 5 bytes according to FS3000 datasheet.

The detail information is described in “5.2. Digital Output Measurements” of FS3000 Series Datasheet.

#### Special Notes

None

## 5.4 RM\_FS3000\_DataCalculate()

This function calculates air velocity value [m/sec] from ADC data.

### Format

```
fsp_err_t RM_FS3000_DataCalculate (
    rm_fsxxxx_ctrl_t      * const p_ctrl,
    rm_fsxxxx_raw_data_t * const p_raw_data,
    rm_fsxxxx_data_t     * const p_fs3000_data
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.3(2) Control Struct `rm_fs3000_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from FS3000 sensor

*/\*\* FSXXXX raw data \*/*

`typedef struct st_rm_fsxxxx_raw_data`

```
{
    uint8_t    adc_data[5];
} rm_fsxxxx_raw_data_t;
```

*p\_fs3000\_data*

Pointer to FS3000 sensor measurement results data structure

*/\*\* FSXXXX data block \*/*

`typedef struct st_rm_fsxxxx_data`

```
{
    rm_fsxxxx_sensor_data_t    flow;
    uint32_t                   count;
} rm_fsxxxx_data_t;
```

The `fsxxxx_sensor_data_t` structure is defined as following.

*/\*\* FSXXXX sensor data block \*/*

`typedef struct st_rm_fsxxxx_sensor_data`

```
{
    int16_t    integer_part;
    int16_t    decimal_part;    ///< To two decimal places
} rm_fsxxxx_sensor_data_t;
```

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_SENSOR_INVALID_DATA	Data is invalid.

### Properties

Prototyped in `rm_fs3000.h`

### Description

This function calculates the air velocity value [m/sec] from the ADC data stored in “`rm_fsxxxx_raw_data_t p_raw_data`” and stores the calculated results to “`rm_fsxxxx_data_t p_fs3000_data`” structure.



This function calculates the air velocity value [m/sec] from the count value.

The relationships between Air velocity and Count value are as follows.

- FS3000-1005

Air Velocity (m/sec)	Output (Count)
0	409
1.07	915
2.01	1522
3.00	2066
3.97	2523
4.96	2908
5.98	3256
6.99	3572
7.23	3686

The detail information is described in “4. Typical Flow Graphs” of FS3000 Series Datasheet.

**Special Notes**

None

## 5.5 fs3000\_user\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is fs3000\_user\_callback0, fs3000\_user\_callback1.

### Format

```
void fs3000_user_callback0(rm_fsxxxx_callback_args_t * p_args)
void fs3000_user_callback1(rm_fsxxxx_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** FSXXXX callback parameter definition */
typedef struct st_rm_fsxxxx_callback_args
{
    void const          * p_context;
    rm_fsxxxx_event_t  event;
} rm_fsxxxx_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in rm\_fs3000\_instance.c

### Description

None

### Special Notes

None

## 5.6 Usage Example of FS3000 FIT Module

Refer to a sample code included in Application Note “RA Family, RX Family, RL78 Family, RZ Family FS3000 Sample Software Manual (R01AN5898)”.

## 6. HS300x API Functions

### 6.1 RM\_HS300X\_Open()

This function opens and configures the HS300x FIT module. This function must be called before calling any other HS300x API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_HS300X_Open (  
    rm_hs300x_ctrl_t * const p_ctrl,  
    rm_hs300x_cfg_t const * const p_cfg  
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.4(2) Control Struct `rm_hs300x_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.4(1) Configuration Struct `rm_hs300x_cfg_t`.

#### Return Values

FSP\_SUCCESS HS300x successfully configured.

FSP\_ERR\_ASSERTION Null pointer, or one or more configuration options is invalid.

FSP\_ERR\_ALREADY\_OPEN Module is already open. This module can only be opened once.

#### Properties

Prototyped in `rm_hs300x.h`

#### Description

This function opens and configures the HS300x FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_ctrl->p_cfg`” in “`p_ctrl`” structure.

This function does configurations by setting the members of “`p_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets callback and context.
- Sets an open flag.

This function calls an open API of COMMS FIT module to open communication middleware after all above initializations are done.

#### Special Notes

None

## 6.2 RM\_HS300X\_Close()

This function disables specified HS300x control block.

### Format

```
fsp_err_t RM_HS300X_Close (rm_hs300x_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct rm\_hs300x\_ctrl\_t.

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_hs300x.h

### Description

This function calls a close API of COMMS FIT module to close communication middleware.

This function clears an open flag after all above are done.

### Special Notes

None

## 6.3 RM\_HS300X\_MeasurementStart()

This function starts a measurement.

### Format

```
fsp_err_t RM_HS300X_MeasurementStart (rm_hs300x_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct rm\_hs300x\_ctrl\_t.

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_hs300x.h

### Description

This function sends the slave address to HS300x sensor and start a measurement.

The function should be called when start a measurement and when measurement data is stale data.

The write API of COMMS FIT module is called in this function to send the slave address to HS300x sensor.

### Special Notes

None

## 6.4 RM\_HS300X\_Read()

This function reads ADC data from HS300x sensor.

### Format

```
fsp_err_t RM_HS300X_Read (
    rm_hs300x_ctrl_t      * const p_ctrl,
    rm_hs300x_raw_data_t * const p_raw_data
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct `rm_hs300x_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from HS300x sensor

*/\*\* HS300X raw data \*/*

```
typedef struct st_rm_hs300x_raw_data
```

```
{
    uint8_t    humidity[2];    ///< Upper 2 bits of 0th element are data status
    uint8_t    temperature[2]; ///< Lower 2 bits of 1st element are mask
} rm_hs300x_raw_data_t;
```

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options are invalid.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in `rm_hs300x.h`

### Description

This function reads ADC data from HS300x sensor.

The read API of COMMS FIT module is called in this function.

The ADC data read from HS300x sensor is stored in “`p_raw_data`” structure. The read data length is defined according to GUI configuration setting as 4 bytes (both humidity and temperature) or 2 bytes (humidity only).

### Special Notes

None

## 6.5 RM\_HS300X\_DataCalculate()

This function calculates humidity [%RH] and temperature [Celsius] from ADC data.

### Format

```
fsp_err_t RM_HS300X_DataCalculate (
    rm_hs300x_ctrl_t      * const p_ctrl,
    rm_hs300x_raw_data_t * const p_raw_data,
    rm_hs300x_data_t     * const p_hs300x_data
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct `rm_hs300x_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from HS300x sensor

*/\*\* HS300X raw data \*/*

```
typedef struct st_rm_hs300x_raw_data
```

```
{
    uint8_t    humidity[2];    ///< Upper 2 bits of 0th element are data status
    uint8_t    temperature[2]; ///< Lower 2 bits of 1st element are mask
} rm_hs300x_raw_data_t;
```

*p\_hs300x\_data*

Pointer to HS300x sensor measurement results data structure

*/\*\* HS300X data block \*/*

```
typedef struct st_rm_hs300x_data
```

```
{
    rm_hs300x_sensor_data_t    humidity;
    rm_hs300x_sensor_data_t    temperature;
} rm_hs300x_data_t;
```

The `rm_hs300x_sensor_data_t` structure is defined as following.

*/\*\* HS300X sensor data block \*/*

```
typedef struct st_rm_hs300x_sensor_data
```

```
{
    int16_t    integer_part;
    int16_t    decimal_part;    ///< To two decimal places
} rm_hs300x_sensor_data_t;
```

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_SENSOR_INVALID_DATA	Data is invalid.

### Properties

Prototyped in `rm_hs300x.h`

### Description

This function calculates the relative humidity value [%RH] and temperature value in degrees Celsius [°C] from the ADC data stored in “`p_raw_data`” and stores the calculated results to “`p_hs300x_data`” structure.

The status of raw data is shown in the upper 2 bits of `p_raw_data->humidity[0]`. The raw data is invalid (e.g., stale data) if the status bits do not equal “0b00”. This function checks the status calculating. This function will skip calculation if the raw data is invalid.

The calculation method is based on the following formula given in the HS300x Datasheet. The temperature [°C] range is -40 to +125.

$$\text{Humidity [\%RH]} = \left( \frac{\text{Humidity [13:0]}}{2^{14} - 1} \right) * 100$$

$$\text{Temperature [}^{\circ}\text{C]} = \left( \frac{\text{Temperature [15:2]}}{2^{14} - 1} \right) * 165 - 40$$

User application needs to combine the “integer\_part” and “decimal\_part” of “p\_hs300x\_data” structure to a float number for humidity and temperature usage.

**Special Notes**

None

## 6.6 RM\_HS300X\_ProgrammingModeEnter()

This function sends commands to place the HS300x into programming mode.

### Format

```
fsp_err_t RM_HS300X_ProgrammingModeEnter (rm_hs300x_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct `rm_hs300x_ctrl_t`.

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_UNSUPPORTED	Programming mode is not supported.

### Properties


Prototyped in `rm_hs300x.h`

### Description

This function sends a sequence of commands shown in the below figure to place the HS300x into programming mode.

This function must be called within 10ms after applying power to the sensor (HS300x).

Request for measurement data transfer

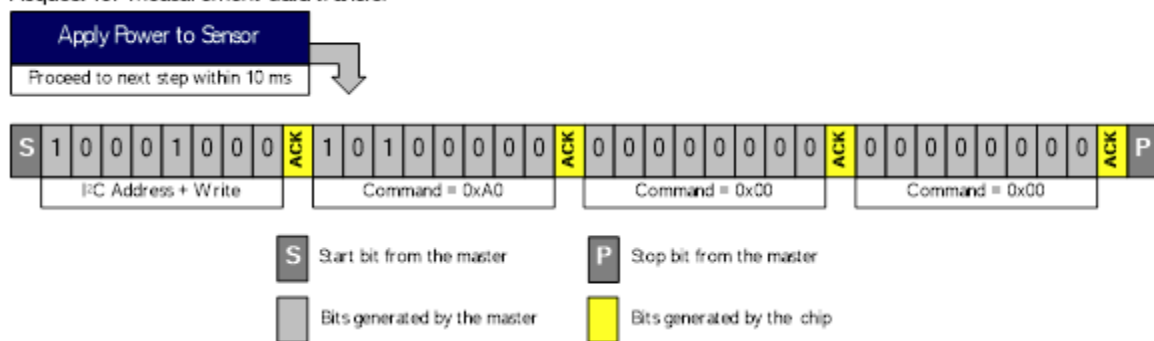

The sequence of commands is that the master must send the I2C address and a "Write" bit followed by the command 0xA0|0x00|0x00. The detail information is described in "6.8 Accessing the Non-volatile Memory" of HS300x Datasheet.

### Special Notes

This function must be called within 10ms after applying power to the HS300x sensor.

This function performs for blocking.



## 6.7 RM\_HS300X\_ResolutionChange()

This function sends commands to change the HS300x resolution.

### Format

```
fsp_err_t RM_HS300X_ResolutionChange (
    rm_hs300x_ctrl_t          * const p_ctrl,
    rm_hs300x_data_type_t const data_type,
    rm_hs300x_resolution_t const resolution
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct `rm_hs300x_ctrl_t`.

*data\_type*

Data type of HS300x.

*/\*\* Data type of HS300X \*/*

```
typedef enum e_rm_hs300x_data_type
```

```
{
    RM_HS300X_HUMIDITY_DATA      = 0,
    RM_HS300X_TEMPERATURE_DATA,
} rm_hs300x_data_type_t;
```

*resolution*

Resolution of HS300x

*/\*\* Resolution type of HS300X \*/*

```
typedef enum e_rm_hs300x_resolution
```

```
{
    RM_HS300X_RESOLUTION_8BIT    = 0x00,
    RM_HS300X_RESOLUTION_10BIT   = 0x04,
    RM_HS300X_RESOLUTION_12BIT   = 0x08,
    RM_HS300X_RESOLUTION_14BIT   = 0x0C,
} rm_hs300x_resolution_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_INVALID_MODE	Module is not the programming mode.
FSP_ERR_ABORTED	Communication is aborted.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_UNSUPPORTED	Programming mode is not supported.

### Properties

Prototyped in `rm_hs300x.h`

**Description**

This function changes measurement resolutions of the HS300x to 8, 10, 12, or 14-bits by writing to the non-volatile memory. The procedure to change or set the resolution is shown in the below figure.


**Step 1**

Write the register address



**Step 2**

Read the register contents




**Step 3**

Change bits [11:10] of the register to the desired resolution setting, *without changing the other bits*

**Step 4**

Write the register contents back



The detail information is described in “6.9 Setting the Measurement Resolution” of HS300x Datasheet.

**Special Notes**

This function must be called after calling the RM\_HS300X\_ProgrammingModeEnter function.

This function performs for blocking.

## 6.8 RM\_HS300X\_SensorIdGet()

This function obtains the sensor ID of HS300x.

### Format

```
fsp_err_t RM_HS300X_SensorIdGet (  
    rm_hs300x_ctrl_t * const p_ctrl,  
    uint32_t * const p_sensor_id  
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct `rm_hs300x_ctrl_t`.

*p\_sensor\_id*

Pointer to Sensor ID

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_INVALID_MODE	Module is not the programming mode.
FSP_ERR_ABORTED	Communication is aborted.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_UNSUPPORTED	Programming mode is not supported.

### Properties

Prototyped in `rm_hs300x.h`

### Description

This function writes ID registers address 0x1E and 0x1F then reads the ID numbers.

The detail information is described in “6.10 Reading the HS300x ID Number” of HS300x Datasheet.

### Special Notes

This function must be called after calling the `RM_HS300X_ProgrammingModeEnter` function.

This function performs for blocking.

## 6.9 RM\_HS300X\_ProgrammingModeExit()

This function sends commands to exit the HS300x programming mode.

### Format

```
fsp_err_t RM_HS300X_ProgrammingModeExit (rm_hs300x_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.4(2) Control Struct rm\_hs300x\_ctrl\_t.

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_INVALID_MODE	Module is not entering the programming mode.
FSP_ERR_UNSUPPORTED	Programming mode is not supported.

### Properties

Prototyped in rm\_hs300x.h

### Description

This function sends the I2C address and a Write bit, followed by the command: 0x80|0x00|0x00 to exit from programming mode, return to normal sensor operation and perform measurements.

The detail information is described in “6.8 Accessing the Non-volatile Memory” of HS300x Datasheet.

### Special Notes

This function must be called within 10ms after applying power to the HS300x sensor.

This function performs for blocking.

## 6.10 hs300x\_user\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is hs300x\_user\_callback0, hs300x\_user\_callback1.

### Format

```
void hs300x_user_callback0(rm_hs300x_callback_args_t * p_args)
void hs300x_user_callback1(rm_hs300x_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** HS300X callback parameter definition */
typedef struct st_rm_hs300x_callback_args
{
    void const          * p_context;
    rm_hs300x_event_t   event;
} rm_hs300x_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in rm\_hs300x\_instance.c

### Description

None

### Special Notes

None

## 6.11 Usage Example of HS300x FIT Module

Refer to a sample code included in Application Note “RA Family, RX Family, RL78 Family, RZ Family HS300x Sample Software Manual (R01AN5897)”.

## 7. HS400x API Functions

### 7.1 RM\_HS400X\_Open()

This function opens and configures the HS400x FIT module. This function must be called before calling any other HS400x API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t      RM_HS400X_Open(
    rm_hs400x_ctrl_t      * const p_ctrl,
    rm_hs400x_cfg_t const *const p_cfg
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.5(2) Configuration Struct `rm_hs400x_cfg_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.5(1) Control Struct `rm_hs400x_ctrl_t`.

#### Return Values

FSP_SUCCESS	HS400x successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_ALREADY_OPEN	Module is already open. This module can only be opened once.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

#### Properties

Prototyped in `rm_hs400x.h`

#### Description

This function opens and configures the HS400x FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_ctrl->p_cfg`” in “`p_ctrl`” structure.

This function does configurations by setting the members of “`p_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets callback and context.
- Sets an open flag.

This function calls an open API of COMMS FIT module to open communication middleware after all above initializations are done.

#### Special Notes

None

## 7.2 RM\_HS400X\_Close()

This function disables specified HS400x control block.

### Format

```
fsp_err_t RM_HS400X_Close (rm_hs400x_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.5(2) Configuration Struct `rm_hs400x_cfg_t`.

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in `rm_hs400x.h`

### Description

This function calls a close API of COMMS FIT module to close communication middleware.

This function clears an open flag after all above are done.

### Special Notes

None

### 7.3 RM\_HS400X\_MeasurementStart()

This function starts a measurement.

#### Format

```
fsp_err_t RM_HS400X_MeasurementStart (rm_hs400x_ctrl_t * const p_ctrl)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.5(2) Configuration Struct `rm_hs400x_cfg_t`.

#### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.
FSP_ERR_UNSUPPORTED	Hold measurement is unsupported.

#### Properties

Prototyped in `rm_hs400x.h`

#### Description

This function should be called when start a measurement.

This function sends the command of measurement to HS400X and starts a measurement.

This function supports No-Hold measurement and Periodic measurement only.

If Hold measurement is enabled, please call `RM_HS400X_Read()` without calling this function.

In Periodic measurement, if the periodic measurement has already run, `RM_HS400X_EVENT_ERROR` is received in callback because HS400x device replies with NACK.

#### Special Notes

None



## 7.4 RM\_HS400X\_MeasurementStop()

This function stops a periodic measurement.

### Format

```
fsp_err_t RM_HS400X_MeasurementStop (rm_hs400x_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.5(2) Configuration Struct `rm_hs400x_cfg_t`.

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.
FSP_ERR_UNSUPPORTED	Hold and No-Hold measurements are unsupported.

### Properties

Prototyped in `rm_hs400x.h`

### Description

This function stops a periodic measurement.

This function sends the command of stopping periodic measurement to HS400X.

This function supports a periodic measurement only.

If a periodic measurement is not running, `RM_HS400X_EVENT_ERROR` is received in callback because HS400x device replies with NACK.

### Special Notes

None

## 7.5 RM\_HS400X\_Read()

This function reads ADC data from HS400x sensor.

### Format

```
fsp_err_t RM_HS400X_Read (
    rm_hs400x_ctrl_t      * const p_ctrl,
    rm_hs400x_raw_data_t * const p_raw_data
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.5(2) Configuration Struct `rm_hs400x_cfg_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from HS400x sensor

*/\*\* HS400X raw data \*/*

```
typedef struct st_rm_hs400x_raw_data
```

```
{
    uint8_t    humidity[2];    ///< Upper 2 bits of 0th element are mask
    uint8_t    temperature[2]; ///< Upper 2 bits of 0th element are mask
} rm_hs400x_raw_data_t;
```

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options are invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

### Properties

Prototyped in `rm_hs400x.h`

### Description

This function reads ADC data from HS400x sensor.

The read API of COMMS FIT module is called in this function.

The ADC data read from HS400x sensor is stored in “`p_raw_data`” structure. The read data length is defined according to GUI configuration setting as 4 bytes (both humidity and temperature) or 2 bytes (temperature only).

### Special Notes

None

## 7.6 RM\_HS400X\_DataCalculate()

This function calculates humidity [%RH] and temperature [Celsius] from ADC data.

### Format

```
fsp_err_t RM_HS400X_DataCalculate (
    rm_hs400x_ctrl_t      * const p_ctrl,
    rm_hs400x_raw_data_t * const p_raw_data,
    rm_hs400x_data_t     * const p_hs400x_data
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.5(2) Configuration Struct `rm_hs400x_cfg_t`.

*p\_raw\_data*

Pointer to raw data structure for storing the read ADC data from HS400x sensor

*/\*\* HS400X raw data \*/*

```
typedef struct st_rm_hs400x_raw_data
```

```
{
    uint8_t    humidity[2];    ///< Upper 2 bits of 0th element are mask
    uint8_t    temperature[2]; ///< Upper 2 bits of 0th element are mask
} rm_hs400x_raw_data_t;
```

*p\_hs400x\_data*

Pointer to HS400x sensor measurement results data structure.

*/\*\* HS400X data block \*/*

```
typedef struct st_rm_hs400x_data
```

```
{
    rm_hs400x_sensor_data_t    humidity;
    rm_hs400x_sensor_data_t    temperature;
} rm_hs400x_data_t;
```

The `m_hs400x_sensor_data_t` structure is defined as following.

*/\*\* HS400X sensor data block \*/*

```
typedef struct st_rm_hs400x_sensor_data
```

```
{
    int16_t    integer_part;
    int16_t    decimal_part;    ///< To two decimal places
} rm_hs400x_sensor_data_t;
```

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_SENSOR_INVALID_DATA	Data is invalid.

### Properties

Prototyped in `rm_hs400x.h`

### Description

This function calculates the relative humidity value [%RH] and temperature value in degrees Celsius [°C] from the ADC data stored in “`p_raw_data`” and stores the calculated results to “`p_hs400x_data`” structure.

The calculation method is based on the following formula given in the HS400x Datasheet. The temperature [°C] range is -40 to +125.

$$\text{Humidity [\%RH]} = \left( \frac{\text{Humidity [13:0]}}{2^{14} - 1} \right) * 100$$

$$\text{Temperature [}^{\circ}\text{C]} = \left( \frac{\text{Temperature [13:0]}}{2^{14} - 1} \right) * 165 - 40$$

User application needs to combine the “integer\_part” and “decimal\_part” of “p\_hs400x\_data” structure to a float number for humidity and temperature usage.

**Special Notes**

None

## 7.7 hs400x\_user\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is hs400x\_user\_callback0, hs400x\_user\_callback1.

### Format

```
void hs400x_user_callback0(rm_hs400x_callback_args_t * p_args)
void hs400x_user_callback1(rm_hs400x_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** HS400X callback parameter definition */
typedef struct st_rm_hs400x_callback_args
{
    void const          * p_context;
    rm_hs400x_event_t   event;
} rm_hs400x_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in rm\_hs400x\_instance.c

### Description

None

### Special Notes

None

## 7.8 Usage Example of HS400x FIT Module

Refer to a sample code included in Application Note “RA Family, RX Family, RL78 Family, RZ Family HS400x Sample Software Manual (R01AN6333)”.

## 8. OB1203 API Functions

### 8.1 RM\_OB1203\_Open()

This function opens and configures the OB1203 FIT module. This function must be called before calling any other OB1203 API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_OB1203_Open (
    rm_ob1203_ctrl_t      * const p_api_ctrl,
    rm_ob1203_cfg_t const * const p_cfg
)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.6(1) Configuration Struct `rm_ob1203_cfg_t`.

#### Return Values

FSP_SUCCESS	OB1203 successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_ALREADY_OPEN	Module is already open. This module can only be opened once.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

#### Properties

Prototyped in `rm_ob1203.h`

#### Description

This function opens and configures the OB1203 FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_api_ctrl->p_cfg`” in “`p_api_ctrl`” structure.

This function does configurations by setting the members of “`p_api_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets parameters of callback and context.
- Sets an open flag.

This function calls the following after all above initializations are done.

- Opens API of COMMS FIT module to open communication middleware Opens IRQ open.
- Initializes the operation mode (Light mode or Proximity mode or PPG mode or Light Proximity mode).

#### Special Notes

None

## 8.2 RM\_OB1203\_Close()

This function disables specified OB1203 control block. This function should be called when the sensor is closed.

### Format

```
fsp_err_t RM_OB1203_Close (rm_ob1203_ctrl_t * const p_api_ctrl)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct rm\_ob1203\_ctrl\_t.

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_ob1203.h

### Description

This function calls a close API of COMMS FIT module to close communication middleware and IRQ close function.

This function clears an open flag after all above are done.

### Special Notes

None

### 8.3 RM\_OB1203\_MeasurementStart()

This function starts a measurement and should be called when a measurement is started.

#### Format

```
fsp_err_t RM_OB1203_MeasurementStart (rm_ob1203_ctrl_t * const p_api_ctrl)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct rm\_ob1203\_ctrl\_t.

#### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

#### Properties

Prototyped in rm\_ob1203.h

#### Description

This function sends the measurement start to command register of OB1203 sensor and starts a measurement after the "event" in "p\_api\_ctrl" structure is cleared.

#### Special Notes

None

### 8.4 RM\_OB1203\_MeasurementStop()

This function stops a measurement and should be called when a measurement is to be stopped.

#### Format

```
fsp_err_t RM_OB1203_MeasurementStop (rm_ob1203_ctrl_t * const p_api_ctrl)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct rm\_ob1203\_ctrl\_t.

#### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options are invalid.
FSP_ERR_NOT_OPEN	Module is not open.

#### Properties

Prototyped in rm\_ob1203.h

#### Description

This function sends the measurement stop to command register of OB1203 sensor and stops a measurement.

#### Special Notes

If device interrupt is enabled, interrupt bits are cleared after measurement stop.

If PPG mode, FIFO information is also reset after measurement stop.



## 8.5 RM\_OB1203\_LightRead()

This function reads ADC data of Light from OB1203 sensor. This function should be called when measurement finished.

### Format

```
fsp_err_t RM_OB1203_LightRead (
    rm_ob1203_ctrl_t          * const p_api_ctrl,
    rm_ob1203_raw_data_t     * const p_raw_data,
    rm_ob1203_light_data_type_t type
)
```

### Parameters

#### *p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

#### *p\_raw\_data*

Pointer to raw data structure for storing ADC data read from sensor

*/\*\* OB1203 raw data structure \*/*

```
typedef struct st_rm_ob1203_raw_data
```

```
{
    uint8_t    adc_data[96];    ///< Max of PPG data is 96 (3 bytes multiplied by 32 samples)
} rm_ob1203_raw_data_t;
```

#### *type*

Data type enum for Light ADC data

*/\*\* Data type of Light \*/*

```
typedef enum e_rm_ob1203_light_data_type
```

```
{
    RM_OB1203_LIGHT_DATA_TYPE_ALL        = 0,    ///< Common
    RM_OB1203_LIGHT_DATA_TYPE_CLEAR,     ///< Common
    RM_OB1203_LIGHT_DATA_TYPE_GREEN,     ///< Common
    RM_OB1203_LIGHT_DATA_TYPE_BLUE,      ///< CS mode only
    RM_OB1203_LIGHT_DATA_TYPE_RED,       ///< CS mode only
    RM_OB1203_LIGHT_DATA_TYPE_COMP,      ///< Common. Temperature compensation data.
} rm_ob1203_light_data_type_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in `rm_ob1203.h`

### Description

This function reads ADC data selected by `rm_ob1203_light_data_type_t` and stores data to “`p_raw_data`” structure.

### Special Notes

None

## 8.6 RM\_OB1203\_LightDataCalculate()

This function calculates Light values from ADC data.

### Format

```
fsp_err_t RM_OB1203_LightDataCalculate (
    rm_ob1203_ctrl_t * const      p_api_ctrl,
    rm_ob1203_raw_data_t * const  p_raw_data,
    rm_ob1203_light_data_t * const p_ob1203_data
)
```

### Parameters

#### *p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

#### *p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* OB1203 raw data structure \*/*

```
typedef struct st_rm_ob1203_raw_data
```

```
{
    uint8_t    adc_data[96];    ///< Max of PPG data is 96 (3 bytes multiplied by 32 samples)
} rm_ob1203_raw_data_t;
```

#### *p\_ob1203\_data*

Pointer to calculation result data structure storing Light calculation result

*/\*\* OB1203 light data structure \*/*

```
typedef struct st_rm_ob1203_light_data
```

```
{
    RM_OB1203_LIGHT_DATA_TYPE_ALL      = 0,    ///< Common
    RM_OB1203_LIGHT_DATA_TYPE_CLEAR,    ///< Common
    RM_OB1203_LIGHT_DATA_TYPE_GREEN,    ///< Common
    RM_OB1203_LIGHT_DATA_TYPE_BLUE,     ///< CS mode only
    RM_OB1203_LIGHT_DATA_TYPE_RED,      ///< CS mode only
    RM_OB1203_LIGHT_DATA_TYPE_COMP,     ///< Common. Temperature compensation data.
} rm_ob1203_light_data_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in `rm_ob1203.h`

### Description

This function calculates Light results and stores the results into the `rm_ob1203_light_data_t`.

### Special Notes

None

## 8.7 RM\_OB1203\_ProxRead()

This function reads ADC data of Proximity from OB1203 sensor. This function should be called when measurement finished.

### Format

```
fsp_err_t RM_OB1203_ProxRead (  
    rm_ob1203_ctrl_t      * const p_api_ctrl,  
    rm_ob1203_raw_data_t * const p_raw_data  
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing ADC data read from sensor

*/\*\* OB1203 raw data structure \*/*

```
typedef struct st_rm_ob1203_raw_data
```

```
{
```

```
    uint8_t    adc_data[96];    ///< Max of PPG data is 96 (3 bytes multiplied by 32 samples)
```

```
} rm_ob1203_raw_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

### Properties

Prototyped in `rm_ob1203.h`

### Description

This function reads ADC data and stores data to “`p_raw_data`” structure.

### Special Notes

None

## 8.8 RM\_OB1203\_ProxDataCalculate()

This function calculates Proximity values from ADC data.

### Format

```
fsp_err_t RM_OB1203_ProxDataCalculate (
    rm_ob1203_ctrl_t * const      p_api_ctrl,
    rm_ob1203_raw_data_t * const p_raw_data,
    rm_ob1203_prox_data_t * const p_ob1203_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* OB1203 raw data structure \*/*

```
typedef struct st_rm_ob1203_raw_data
```

```
{
```

```
    uint8_t    adc_data[96];    ///< Max of PPG data is 96 (3 bytes multiplied by 32 samples)
```

```
} rm_ob1203_raw_data_t;
```

*p\_ob1203\_data*

Pointer to calculation result data structure storing Proximity calculation result

*/\*\* OB1203 proximity data structure \*/*

```
typedef struct st_rm_ob1203_prox_data
```

```
{
```

```
    uint16_t    proximity_data;    ///< Proximity data.
```

```
} rm_ob1203_prox_data_t
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

### Properties

Prototyped in `rm_ob1203.h`

### Description

This function calculates Proximity results and stores the results into the `rm_ob1203_prox_data_t`.

### Special Notes

None

## 8.9 RM\_OB1203\_PpgRead()

This function reads ADC data of PPG from OB1203 sensor. This function should be called when measurement finished.

### Format

```
fsp_err_t RM_OB1203_PpgRead (
    rm_ob1203_ctrl_t      * const p_api_ctrl,
    rm_ob1203_raw_data_t * const p_raw_data,
    uint8_t const         number_of_samples
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing ADC data read from sensor

*/\*\* OB1203 raw data structure \*/*

```
typedef struct st_rm_ob1203_raw_data
```

```
{
```

```
    uint8_t    adc_data[96];    ///< Max of PPG data is 96 (3 bytes multiplied by 32 samples)
```

```
} rm_ob1203_raw_data_t;
```

*number\_of\_samples*

number of PPG samples.

One sample is 3 bytes.

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

### Properties

Prototyped in `rm_ob1203.h`

### Description

This function reads ADC data and stores data to “`p_raw_data`” structure.

### Special Notes

None

## 8.10 RM\_OB1203\_PpgDataCalculate()

This function calculates PPG values from ADC data.

### Format

```
fsp_err_t RM_OB1203_PpgDataCalculate (
    rm_ob1203_ctrl_t      * const p_api_ctrl,
    rm_ob1203_raw_data_t * const p_raw_data,
    rm_ob1203_ppg_data_t * const p_ob1203_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* OB1203 raw data structure \*/*

```
typedef struct st_rm_ob1203_raw_data
```

```
{
```

```
    uint8_t    adc_data[96];    ///< Max of PPG data is 96 (3 bytes multiplied by 32 samples)
```

```
} rm_ob1203_raw_data_t;
```

*p\_ob1203\_data*

Pointer to calculation result data structure storing PPG calculation result

*/\*\* OB1203 PPG data structure \*/*

```
typedef struct st_rm_ob1203_ppg_data
```

```
{
```

```
    uint32_t    ppg_data[32];    ///< PPG data (18bits).
```

```
} rm_ob1203_ppg_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

### Properties

Prototyped in `rm_ob1203.h`

### Description

This function calculates PPG results and stores the results into the `rm_ob1203_ppg_data_t`.

### Special Notes

None

## 8.11 RM\_OB1203\_DeviceStatusGet()

This function reads the status of sensor.

### Format

```
fsp_err_t RM_OB1203_DeviceStatusGet (
    rm_ob1203_ctrl_t          * const p_api_ctrl,
    rm_ob1203_device_status_t * const p_status
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct rm\_ob1203\_ctrl\_t.

*p\_status*

Pointer to device status

*/\*\* OB1203 device status \*/*

```
typedef struct st_rm_ob1203_device_status
```

```
{
    bool    power_on_reset_occur;
    bool    light_interrupt_occur;
    bool    light_measurement_complete;
    bool    ts_measurement_complete;
    bool    fifo_full_interrupt_occur;    ///< FIFO almost full interrupt
    bool    ppg_measurement_complete;
    bool    object_near;
    bool    prox_interrupt_occur;
    bool    prox_measurement_complete;
} rm_ob1203_device_status_t;
```

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

### Properties

Prototyped in rm\_ob1203.h

### Description

This function gets device status from OB1203 device and clears all interrupt bits after read.

### Special Notes

None

## 8.12 RM\_OB1203\_DeviceInterruptCfgSet()

This function configures device interrupts.

### Format

```
fsp_err_t RM_OB1203_DeviceInterruptCfgSet (
    rm_ob1203_ctrl_t          * const p_api_ctrl,
    rm_ob1203_device_interrupt_cfg_t  const interrupt_cfg
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct rm\_ob1203\_ctrl\_t.

*interrupt\_cfg*

Device interrupt configuration structure for each operation mode

/\*\* OB1203 device interrupt configuration structure \*/

```
typedef struct st_rm_ob1203_device_interrupt_cfg
```

```
{
```

```
    rm_ob1203_operation_mode_t    light_prox_mode; ///< Light Proximity mode only. If Light mode uses IRQ, set
RM_OB1203_OPERATION_MODE_LIGHT. If Proximity mode uses IRQ, set RM_OB1203_OPERATION_MODE_PROXIMITY.
```

```
    rm_ob1203_light_interrupt_type_t    light_type;        ///< Light mode interrupt type.
```

```
    rm_ob1203_light_interrupt_source_t    light_source;    ///< Light mode interrupt source.
```

```
    rm_ob1203_prox_interrupt_type_t    prox_type;        ///< Proximity mode interrupt type.
```

```
    uint8_t    persist;    ///< The number of similar consecutive Light mode or Proximity interrupt events that must occur
before the interrupt is asserted (4bits).
```

```
    rm_ob1203_ppg_interrupt_type_t    ppg_type;        ///< PPG mode interrupt type.
```

```
} rm_ob1203_device_interrupt_cfg_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_ob1203.h

### Description

This function configures device interrupts for each operation mode.

### Special Notes

None



### 8.13 RM\_OB1203\_GainSet()

This function configures gain values.

#### Format

```
fsp_err_t RM_OB1203_GainSet (  
    rm_ob1203_ctrl_t    * const p_api_ctrl,  
    rm_ob1203_gain_t    const gain  
)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct `rm_ob1203_ctrl_t`.

*gain*

Gain configuration structure

/\*\* OB1203 Gain structure \*/

```
typedef struct st_rm_ob1203_gain
```

```
{
```

```
    rm_ob1203_light_gain_t    light;    ///< Gain for Light mode
```

```
    rm_ob1203_ppg_prox_gain_t    ppg_prox;    ///< Gain for PPG mode and Proximity mode
```

```
} rm_ob1203_gain_t;
```

#### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

#### Properties

Prototyped in `rm_ob1203.h`

#### Description

This function configures gain for each operation mode.

#### Special Notes

None

## 8.14 RM\_OB1203\_LedCurrentSet()

This function configures currents for LED.

### Format

```
fsp_err_t RM_OB1203_LedCurrentSet (
    rm_ob1203_ctrl_t      * const p_api_ctrl,
    rm_ob1203_led_current_t  const led_current
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct rm\_ob1203\_ctrl\_t.

*led\_current*

Current configuration for LED

/\*\* OB1203 LED currents structure \*/

```
typedef struct st_rm_ob1203_led_current
```

```
{
    uint16_t  ir_led;      ///< IR LED current
    uint16_t  red_led;    ///< Red LED current
} rm_ob1203_led_current_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_ob1203.h

### Description

This function configures LED currents for each operation mode.

### Special Notes

None

## 8.15 RM\_OB1203\_FifoInfoGet()

This function gets FIFO information (write\_index, read\_index and overflow\_counter).

### Format

```
fsp_err_t RM_OB1203_FifoInfoGet (
    rm_ob1203_ctrl_t * const p_api_ctrl,
    rm_ob1203_fifo_info_t * const p_fifo_info
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.6(2) Control Struct rm\_ob1203\_ctrl\_t.

*p\_fifo\_info*

Pointer to FIFO information

*/\*\* OB1203 FIFO information structure \*/*

```
typedef struct st_rm_ob1203_fifo_info
```

```
{
    uint8_t    write_index;    ///< The FIFO index where the next sample of PPG data will be written in the FIFO.
    uint8_t    read_index;    ///< The index of the next sample to be read from the FIFO_DATA register.
    uint8_t    overflow_counter; ///< If the FIFO Rollover Enable bit is set, the FIFO overflow counter counts the number of
                                old samples (up to 15) which are overwritten by new data.
    uint8_t    unread_samples; ///< The number of unread samples calculated from the write index and the read index.
} rm_ob1203_fifo_info_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_ob1203.h

### Description

This function gets FIFO information for PPG mode. Light and Proximity modes are not supported.

- write\_index is the FIFO index where the next sample of PPG data will be written in the FIFO.
- read\_index is the index of the next sample to be read from the register.
- overflow\_counter is the number of old samples (up to 15) which are overwritten by new data. If the FIFO Rollover is enabled, the FIFO overflow counter counts.
- unread\_samples is the number of unread FIFO samples, which can be calculated by write index and read index.

### Special Notes

None

## 8.16 ob1203\_user\_xxx\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is ob1203\_user\_i2c\_callback0, ob1203\_user\_i2c\_callback1.

The default name of callback function for IRQ is ob1203\_user\_irq\_callback0, ob1203\_user\_irq\_callback1.

### Format

```
void ob1203_user_i2c_callback0(rm_ob1203_callback_args_t * p_args)
void ob1203_user_i2c_callback1(rm_ob1203_callback_args_t * p_args)
void ob1203_user_irq_callback0(rm_ob1203_callback_args_t * p_args)
void ob1203_user_irq_callback1(rm_ob1203_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** OB1203 callback parameter definition */
typedef struct st_rm_ob1203_callback_args
{
    void const          * p_context;
    rm_ob1203_event_t   event;
} rm_ob1203_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in rm\_ob1203\_instance.c

### Description

None

### Special Notes

None

## 8.17 Usage Example of OB1203 FIT Module

Refer to a sample code included in Application Note "RA Family, RX Family, RL78 Family OB1203 Sample Software Manual (R01AN6311)".

## 9. RRH46410 API Functions

### 9.1 RM\_RRH46410\_Open()

This function opens and configures the RRH46410 FIT module. This function must be called before calling any other RRH46410 API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_RRH46410_Open (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_cfg_t const * const p_cfg
)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.7(1) Configuration Struct `rm_zmod4xxx_cfg_t`.

#### Return Values

FSP_SUCCESS	RRH46410 successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_ALREADY_OPEN	Module is already open. This module can only be opened once.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

#### Properties

Prototyped in `rm_rrh46410.h`

#### Description

This function opens and initializes the RRH46410 FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_api_ctrl->p_cfg`” in “`p_api_ctrl`” structure.

This function does configurations by setting the members of “`p_api_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets related instance of IRQ FIT module.
- Sets parameters of callback and context.
- Initializes a previous sample ID.
- Sets warmup counts.

This function calls the following after all above initializations are done.

- Opens API of COMMS FIT module to open communication middleware.
- Opens API of IRQ FIT module.
- Sets the sensor device to Suspend mode.
- Sets an open flag.

#### Special Notes

None

## 9.2 RM\_RRH46410\_Close()

This function disables specified RRH46410 control block. This function should be called when the sensor is closed.

### Format

```
fsp_err_t RM_RRH46410_Close (rm_zmod4xxx_ctrl_t * const p_api_ctrl)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_rrh46410.h

### Description

This function calls a close API of COMMS FIT module to close communication middleware and IRQ close function.

This function clears an open flag after all above are done.

### Special Notes

None

### 9.3 RM\_RRH46410\_MeasurementStart()

This function starts a measurement and should be called when a measurement is started.

#### Format

```
fsp_err_t RM_RRH46410_MeasurementStart (rm_zmod4xxx_ctrl_t * const p_api_ctrl)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

#### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

#### Properties

Prototyped in rm\_rrh46410.h

#### Description

This function sends the Set Operation Mode command to RRH46410 and shifts to IAQ 2nd Gen, IAQ 2nd Gen ULP or PBAQ mode depending on RM\_RRH46410\_CFG\_DEVICE0\_OPERATION\_MODE in r\_rrh46410\_rx\_config.h.

#### Special Notes

None

### 9.4 RM\_RRH46410\_MeasurementStop()

This function stops a measurement and should be called when a measurement is to be stopped.

#### Format

```
fsp_err_t RM_RRH46410_MeasurementStop (rm_zmod4xxx_ctrl_t * const p_api_ctrl)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

#### Return Values

FSP_SUCCESS	Successfully stopped.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

#### Properties

Prototyped in rm\_rrh46410.h

#### Description

This function sends the Set Operation Mode command to RRH46410 and shifts to Suspend mode.

Measurement stops in Suspend mode.

#### Special Notes

None

## 9.5 RM\_RRH46410\_Read()

This function reads measurement data from RRH46410 sensor. This function should be called when measurement finished.

### Format

```
fsp_err_t RM_RRH46410_Read (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t * const p_raw_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing measurement data read from sensor

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
```

```
    uint8_t    adc_data[32];    // In RRH46410, this means measurement results
```

```
} rm_zmod4xxx_raw_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully results are read.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not opened configured.

FSP\_ERR\_TIMEOUT

Communication is timeout.

FSP\_ERR\_ABORTED

Communication is aborted.

### Properties

Prototyped in `rm_rrh46410.h`

### Description

This function sends the Get Measurement Results command to RRH46410 and gets measurement data.

This function stores measurement results to "p\_raw\_data" structure.

### Special Notes

None



## 9.6 RM\_RRH46410\_Iaq2ndGenDataCalculate()

This function calculates IAQ 2nd Gen values from the data obtained with RM\_RRH46410\_Read().

### Format

```
fsp_err_t RM_RRH46410_Iaq2ndGenDataCalculate (
    rm_zmod4xxx_ctrl_t          * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t     * const p_raw_data,
    rm_zmod4xxx_iaq_2nd_data_t * const p_rrh46410_data
)
```

### Parameters

#### *p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

#### *p\_raw\_data*

Pointer to raw data structure for storing measurement data read from sensor

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];    // In RRH46410, this means measurement results
} rm_zmod4xxx_raw_data_t;
```

#### *p\_rrh46410\_data*

Pointer to calculation result data structure storing IAQ 2nd Gen calculation result

*/\*\* ZMOD4XXX IAQ 2nd gen data structure \*/*

```
typedef struct st_rm_zmod4xxx_iaq_2nd_data
```

```
{
    float      rmoX[13];        ///< MOx resistance.
    float      log_rcda;        ///< log10 of CDA resistance for IAQ 2nd Gen.
    float      log_nonlog_rcda[3]; ///< log10 of CDA resistance for IAQ 2nd Gen ULP.
    float      iaq;             ///< IAQ index.
    float      tvoc;            ///< TVOC concentration (mg/m^3).
    float      etoh;            ///< EtOH concentration (ppm).
    float      eco2;            ///< eCO2 concentration (ppm).
    uint8_t    sample_id;       ///< Sample ID. RRH46410 only.
    float      rel_iaq;         ///< Relative IAQ. RRH46410 only.
} rm_zmod4xxx_iaq_2nd_data_t;
```

### Return Values

FSP_SUCCESS	Successfully gas data is calculated.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_UNSUPPORTED	Unsupported operation mode.
FSP_ERR_SENSOR_IN_STABILIZATION	Module is in stabilization phase.
FSP_ERR_SENSOR_MEASUREMENT_NOT_FINISHED	Measurement is not finished.

### Properties

Prototyped in rm\_rrh46410.h

### Description

This function calculates IAQ 2nd Gen from "p\_raw\_data" and stores the results into the "rm\_zmod4xxx\_iaq\_2nd\_data\_t \*p\_rrh46410\_data" structure.

This function should be called after RM\_RRH46410\_Read() is called.

### Special Notes

None

## 9.7 RM\_RRH46410\_PbaqDataCalculate()

This function calculates PBAQ values from the data obtained with RM\_RRH46410\_Read().

### Format

```
fsp_err_t RM_RRH46410_PbaqDataCalculate (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t  * const p_raw_data,
    rm_zmod4xxx_pbaq_data_t * const p_rrh46410_data
)
```

### Parameters

#### *p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct `rm_zmod4xxx_ctrl_t`.

#### *p\_raw\_data*

Pointer to raw data structure for storing measurement data read from sensor

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];    // In RRH46410, this means measurement results
} rm_zmod4xxx_raw_data_t;
```

#### *p\_zmod4xxx\_data*

Pointer to calculation result data structure storing PBAQ calculation result

*/\*\* ZMOD4XXX PBAQ data structure \*/*

```
typedef struct st_rm_zmod4xxx_pbaq_data
```

```
{
    float    rmoX[13];        ///< MOx resistance.
    float    log_rcda;        ///< log10 of CDA resistance.
    float    rhtr;            ///< heater resistance.
    float    temperature;     ///< ambient temperature (degC).
    float    tvoc;            ///< TVOC concentration (mg/m^3).
    float    etoh;            ///< EtOH concentration (ppm).
} rm_zmod4xxx_pbaq_data_t;
```

### Return Values

FSP_SUCCESS	Successfully gas data is calculated.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_UNSUPPORTED	Unsupported operation mode.
FSP_ERR_SENSOR_IN_STABILIZATION	Module is in stabilization phase.
FSP_ERR_SENSOR_MEASUREMENT_NOT_FINISHED	Measurement is not finished.

### Properties

Prototyped in `rm_rrh46410.h`

### Description

This function calculates PBAQ from “`p_raw_data`” and stores the results into the “`rm_zmod4xxx_pbaq_data_t *p_rrh46410_data`” structure.

This function should be called after `RM_RRH46410_Read()` is called.

### Special Notes

None

## 9.8 RM\_RRH46410\_TemperatureAndHumiditySet()

This function sets relative humidity (in %RH) values to RRH46410 for IAQ 2nd Gen mode and IAQ 2nd Gen ULP mode calculation.

### Format

```
fsp_err_t RM_RRH46410_TemperatureAndHumiditySet (  
    rm_zmod4xxx_ctrl_t * const p_api_ctrl,  
    float                temperature,  
    float                humidity  
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.7(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

*temperature*

Unused

*humidity*

Humidity value (in %RH) set to RRH46410

### Return Values

FSP\_SUCCESS

Successfully humidity is set.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not opened configured.

### Properties

Prototyped in rm\_rrh46410.h

### Description

This function sends the Set Humidity command to RRH46410 and sets environmental relative humidity (in %RH).

This setting provides more accurate data for IAQ 2nd generation measurements.

This function should be called before RM\_RRH46410\_Read() is called.

### Special Notes

None

## 9.9 rrh46410\_user\_xxx\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is rrh46410\_user\_i2c\_callback0.

The default name of callback function for IRQ is rrh46410\_user\_irq\_callback0.

### Format

```
void rrh46410_user_i2c_callback0(rm_zmod4xxx_callback_args_t * p_args)
```

```
void rrh46410_user_irq_callback0(rm_zmod4xxx_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** ZMOD4XXX sensor API callback parameter definition */
```

```
typedef struct st_rm_zmod4xxx_callback_args
```

```
{
```

```
    void const                * p_context;
```

```
    rm_zmod4xxx_event_t      event;
```

```
} rm_zmod4xxx_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in rm\_rrh46410\_instance.c

### Description

None

### Special Notes

None

## 9.10 Usage Example of RRH46410 FIT Module

Refer to a sample code included in Application Note "RA Family, RX Family, RL78 Family RRH46410 Sample Software Manual (R01AN7370)".

## 10. RRH62000 API Functions

### 10.1 RM\_RRH62000\_Open()

This function opens and configures the RRH62000 FIT module. This function must be called before calling any other RRH62000 API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_RRH62000_Open(
    rm_air_sensor_ctrl_t      * const p_api_ctrl,
    rm_air_sensor_cfg_t const * const p_cfg
)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.8(2) Control Struct `rm_air_sensor_ctrl_t`

*p\_cfg*

Pointer to configuration structure.

The members of this structure are shown in 2.9.8(1) Configuration Struct `rm_air_sensor_cfg_t`

#### Return Values

FSP_SUCCESS	RRH62000 successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_ALREADY_OPEN	Module is already open. This module can only be opened once.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

#### Properties

Prototyped in `rm_rrh62000.h`

#### Description

This function opens and initializes the RRH62000 FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_api_ctrl->p_cfg`” in “`p_api_ctrl`” structure. This function does configurations by setting the members of “`p_api_ctrl`” structure as following:

- Sets related instance of COMMS FIT module
- Sets parameters of callback and context

This function calls the following after all above initializations are done.

- Opens API of COMMS FIT module to open communication middleware
- Resets sensor device
- Check if ZMOD cleaning is complete
- Sets the number of moving average for sensor device
- Sets the fan speed control for sensor device
- Sets open flag

#### Special Notes

None

## 10.2 RM\_RRH62000\_Close()

This function disables specified RRH62000 control block. This function should be called when the sensor is closed.

### Format

```
fsp_err_t RM_RRH62000_Close (rm_air_sensor_ctrl_t * const p_api_ctrl)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.8(2) Control Struct rm\_air\_sensor\_ctrl\_t

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_rrh62000.h

### Description

This function calls closing API of COMMS FIT module to close communication middleware function.

This function clears open flag after all above are done.

### Special Notes

None

### 10.3 RM\_RRH62000\_StatusCheck()

This function reads the status of sensor and should be called when polling is used.

#### Format

```
fsp_err_t RM_RRH62000_StatusCheck (rm_air_sensor_ctrl_t * const p_api_ctrl);
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.8(2) Control Struct rm\_air\_sensor\_ctrl\_t

#### Return Values

FSP\_SUCCESS

Successfully data decoded.

FSP\_ERR\_ASSERTION

Null pointer, or one or more configuration options is invalid.

FSP\_ERR\_NOT\_OPEN

Module is not open.

FSP\_ERR\_TIMEOUT

Communication is timeout.

FSP\_ERR\_ABORTED

Communication is aborted.

#### Properties

Prototyped in rm\_rrh62000.h

#### Description

This function reads measurement status RRH62000 sensor from sensor register.

#### Special Notes

None

## 10.4 RM\_RRH62000\_Read()

This function reads measurement data from RRH62000 sensor. This function should be called when measurement finished.

### Format

```
fsp_err_t RM_RRH62000_Read(
    rm_air_sensor_ctrl_t      * const p_api_ctrl,
    rm_air_sensor_raw_data_t * const p_raw_data
)
```

### Parameters

#### *p\_api\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.8(2) Control Struct `rm_air_sensor_ctrl_t`

#### *p\_raw\_data*

Pointer to raw data structure for storing measurement data read from sensor. This structure is declared as below.

*/\*\* AIR SENSOR raw data structure \*/*

```
typedef struct st_rm_air_sensor_raw_data
```

```
{
    uint8_t    results[37];          ///< Raw sensor data array
} rm_air_sensor_raw_data_t;
```

### Return Values

FSP_SUCCESS	Successfully results are read.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.
FSP_ERR_SENSOR_MEASUREMENT_NOT_FINISHED	Measurement is not finished.

### Properties

Prototyped in `rm_rrh62000.h`

### Description

This function should be called to get measurement results after measurement finishes.

To check measurement status polling can be used.

### Special Notes

None



## 10.5 RM\_RRH62000\_DataCalculate()

This function calculates air quality values from the data obtained with RM\_RRH62000\_Read().

### Format

```
fsp_err_t RM_RRH62000_DataCalculate(
    rm_air_sensor_ctrl_t      * const p_api_ctrl,
    rm_air_sensor_raw_data_t * const p_raw_data,
    rm_air_sensor_data_t     * const p_rrh62000_data
)
```

### Parameters

#### *p\_api\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.8(2) Control Struct *rm\_air\_sensor\_ctrl\_t*

#### *p\_raw\_data*

Pointer to raw data structure for storing measurement data read from sensor.

This structure is declared as below.

*/\*\* AIR SENSOR raw data structure \*/*

```
typedef struct st_rm_air_sensor_raw_data
```

```
{
    uint8_t    results[37];           ///< Raw sensor data array
} rm_air_sensor_raw_data_t;
```

#### *p\_rrh62000\_data*

Pointer to calculation result data structure storing air quality values calculation result.

This structure is declared as below.

*/\*\* AIR SENSOR data block \*/*

```
typedef struct st_rm_air_sensor_data
```

```
{
    uint32_t status;
    rm_air_sensor_single_data_t nc_0p3;  ///< Number concentration of particle size 0.3 um - 10 um [1/cm3]
    rm_air_sensor_single_data_t nc_0p5;  ///< Number concentration of particle size 0.5 um - 10 um [1/cm3]
    rm_air_sensor_single_data_t nc_1;    ///< Number concentration of particle size 1 um - 10 um [1/cm3]
    rm_air_sensor_single_data_t nc_2p5;  ///< Number concentration of particle size 2.5 um - 10 um [1/cm3]
    rm_air_sensor_single_data_t nc_4;    ///< Number concentration of particle size 4 um - 10 um [1/cm3]
    rm_air_sensor_single_data_t pm1_1;   ///< Mass concentration of particle size 0.3 um - 1 um with
reference to KCl particle [um/cm3]
    rm_air_sensor_single_data_t pm2p5_1;  ///< Mass concentration of particle size 0.3 um – 2.5 um
with reference to KCl particle [um/cm3]
    rm_air_sensor_single_data_t pm10_1;   ///< Mass concentration of particle size 0.3 um - 10 um with
reference to KCl particle [um/cm3]
    rm_air_sensor_single_data_t pm1_2;   ///< Mass concentration of particle size 0.3 um - 1 um with
reference to cigarette smoke [um/cm3]
    rm_air_sensor_single_data_t pm2p5_2;  ///< Mass concentration of particle size 0.3 um – 2.5 um
with reference to cigarette smoke [um/cm3]
    rm_air_sensor_single_data_t pm10_2;   ///< Mass concentration of particle size 0.3 um - 10 um with
reference to cigarette smoke [um/cm3]
    rm_air_sensor_single_data_t temperature;  ///< Temperature [Celsius]
    rm_air_sensor_single_data_t humidity;     ///< Humidity [%RH]
    rm_air_sensor_single_data_t tvoc;        ///< Total volatile organic compounds (TVOC) concentrations [mg/m3]
    rm_air_sensor_single_data_t eco2;       ///< Carbon dioxide (CO2) level [ppm]. Value is
estimated/actual value depends on sensor module.
    rm_air_sensor_single_data_t iaq;        ///< Indoor Air Quality level according to UBA
    rm_air_sensor_single_data_t rel_iaq;    ///< Relative IAQ
} rm_air_sensor_data_t;
```

**Return Values**

FSP_SUCCESS	Successfully gas data is calculated.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_SENSOR_INVALID_DATA	Data is invalid.

**Properties**

Prototyped in rm\_rrh62000.h

**Description**

This function calculates from "p\_raw\_data" and stores the results into the "rm\_rrh62000\_data\_t \*p\_rrh62000\_data" structure.

This function should be called after RM\_RRH62000\_Read() is called.

**Special Notes**

None

## 10.6 RM\_RRH62000\_FirmwareVersionGet()

This function reads firmware version from RRH62000 sensor.

### Format

```
fsp_err_t RM_RRH62000_FirmwareVersionGet(
    rm_air_sensor_ctrl_t      * const p_api_ctrl,
    rm_air_sensor_version_t  * const p_version
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.8(2) Control Struct `rm_air_sensor_ctrl_t`

*p\_version*

Pointer to version data structure for storing version data read from sensor. This structure is declared as below.

*/\*\* AIR SENSOR version structure \*/*

`typedef struct st_rm_air_sensor_version`

```
{
    uint8_t    major;           ///< Firmware major version
    uint8_t    minor;          ///< Firmware minor version
    uint8_t    patch;          ///< Firmware patch version
    uint8_t    ascii_code[11]; ///< ASCII code of firmware version
} rm_air_sensor_version_t;
```

### Return Values

FSP_SUCCESS	Successfully results are read.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

### Properties

Prototyped in `rm_rrh62000.h`

### Description

This function sends the FWVER command to RRH62000 and gets firmware version.

This function stores firmware version to “`p_version`” structure.

### Special Notes

None

## 10.7 RM\_RRH62000\_AlgorithmVersionGet()

This function read algorithm version from RRH62000 sensor.

### Format

```
fsp_err_t RM_RRH62000_AlgorithmVersionGet(
    rm_air_sensor_ctrl_t      * const p_api_ctrl,
    rm_air_sensor_version_t  * const p_version
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure.

The members of this structure are shown in 2.9.8(2) Control Struct `rm_air_sensor_ctrl_t`

*p\_version*

Pointer to version data structure for storing version data read from sensor. This structure is declared as below.

*/\*\* AIR SENSOR version structure \*/*

`typedef struct st_rm_air_sensor_version`

```
{
    uint8_t    major;           ///< Firmware major version
    uint8_t    minor;          ///< Firmware minor version
    uint8_t    patch;          ///< Firmware patch version
    uint8_t    ascii_code[11]; ///< ASCII code of firmware version
} rm_air_sensor_version_t;
```

### Return Values

FSP_SUCCESS	Successfully results are read.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not opened configured.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

### Properties

Prototyped in `rm_rrh62000.h`

### Description

This function sends the ARGVER command to RRH62000 and gets algorithm version.

This function stores algorithm version to “`p_version`” structure.

### Special Notes

None

## 10.8 rrh62000\_user\_i2c\_callback()

This is a callback function registered with Smart Configurator by user.

### Format

```
void rrh62000_user_i2c_callback0(rm_air_sensor_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** AIR SENSOR API callback parameter definition */  
typedef struct st_rm_air_sensor_callback_args  
{  
    void const          * p_context;  
    rm_air_sensor_event_t event;  
} rm_air_sensor_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in `rm_rrh62000_instance.c`

### Description

None

### Special Notes

None

## 10.9 Usage Example of RRH62000 FIT Module

Refer to a sample code included in Application Note “RA Family, RX Family, RL78 Family RRH62000 Sample Software Manual (R01AN7388)”.

## 11. ZMOD4XXX API Functions

### 11.1 RM\_ZMOD4XXX\_Open()

This function opens and configures the ZMOD4XXX FIT module. This function must be called before calling any other ZMOD4XXX API functions.

The RIIC FIT module or / and SCI\_IIC FIT module be used must be initialized in advance.

#### Format

```
fsp_err_t RM_ZMOD4XXX_Open (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_cfg_t const * const p_cfg
)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.9(1) Configuration Struct `rm_zmod4xxx_cfg_t`

#### Return Values

FSP_SUCCESS	ZMOD4xxx successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_ALREADY_OPEN	Module is already open. This module can only be opened once.
FSP_ERR_UNSUPPORTED	Unsupported product ID.
FSP_ERR_TIMEOUT	communication is timeout.
FSP_ERR_ABORTED	communication is aborted.

#### Properties

Prototyped in `rm_zmod4xxx.h`

#### Description

This function opens and configures the ZMOD4XXX FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_api_ctrl->p_cfg`” in “`p_api_ctrl`” structure.

This function does configurations by setting the members of “`p_api_ctrl`” structure as following:

- Sets related instance of COMMS FIT module.
- Sets ZMOD4XXX library specification.
- Sets parameters of callback and context
- Sets an open flag.

This function calls the following after all above initializations are done.

- Opens API of COMMS FIT module to open communication middleware.
- Opens API of IRQ FIT module.
- Initializes the sensor device (ZMOD4410 or ZMOD4510).
- Initializes the used sensor library.

#### Special Notes

None

## 11.2 RM\_ZMOD4XXX\_Close()

This function disables specified ZMOD4XXX control block. This function should be called when the sensor is closed.

### Format

```
fsp_err_t RM_ZMOD4XXX_Close (rm_zmod4xxx_ctrl_t * const p_api_ctrl)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

### Return Values

FSP_SUCCESS	Successfully closed.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calls a close API of COMMS FIT module to close communication middleware and IRQ close function.

This function clears an open flag after all above are done.

### Special Notes

None

### 11.3 RM\_ZMOD4XXX\_MeasurementStart()

This function starts a measurement and should be called when a measurement is started.

#### Format

```
fsp_err_t RM_ZMOD4XXX_MeasurementStart (rm_zmod4xxx_ctrl_t * const p_api_ctrl)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

#### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	communication is timeout.
FSP_ERR_ABORTED	communication is aborted.

#### Properties

Prototyped in rm\_zmod4xxx.h

#### Description

This function sends the measurement start to command register of ZMOD4410 or ZMOD4510 sensor and starts a measurement after the "event" in "p\_api\_ctrl" structure is cleared.

#### Special Notes

When starting the next measurement after previous measurement is finished, a delay time is needed. The delay time is depended on the selected operation mode. The detail information of delay time value can be found in "case DEMO\_SEQUENCE\_8:" in "void start\_demo(void)" function described in 11.19 Usage Example of ZMOD4XXX FIT Module.

### 11.4 RM\_ZMOD4XXX\_MeasurementStop()

This function stops a measurement and should be called when a measurement is to be stopped.

#### Format

```
fsp_err_t RM_ZMOD4XXX_MeasurementStop (rm_zmod4xxx_ctrl_t * const p_api_ctrl)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

#### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options are invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	communication is timeout.
FSP_ERR_ABORTED	communication is aborted.

#### Properties

Prototyped in rm\_zmod4xxx.h

#### Description

This function sends the measurement stop to command register of ZMOD4410 or ZMOD4510 sensor and stops a measurement.

#### Special Notes

None



## 11.5 RM\_ZMOD4XXX\_StatusCheck()

This function reads the status of sensor and should be called when polling is used.

### Format

```
fsp_err_t RM_ZMOD4XXX_StatusCheck (rm_zmod4xxx_ctrl_t * const p_api_ctrl);
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function reads measurement status of ZMOD4410 and ZMD4510 sensor from sensor register.

This function returns either measurement success or 100ms timeout.

### Special Notes

None

## 11.6 RM\_ZMOD4XXX\_Read()

This read ADC data from ZMOD4410 or ZMOD4510 sensor. This function should be called when measurement finished.

### Format

```
fsp_err_t RM_ZMOD4XXX_Read (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t * const p_raw_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure for storing ADC data read from sensor

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
{
    uint8_t      adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.
FSP_ERR_SENSOR_MEASUREMENT_NOT_FINISHED	Measurement is not finished.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function checks measurement status by either polling or using busy/interrupt pin. After the measurement status is confirmed as finished, this function reads ADC data and stores data to "p\_raw\_data" structure.

### Special Notes

None

## 11.7 RM\_ZMOD4XXX\_Iaq1stGenDataCalculate()

This function calculates IAQ 1st Gen. values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_Iaq1stGenDataCalculate (
    rm_zmod4xxx_ctrl_t          * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t     * const p_raw_data,
    rm_zmod4xxx_iaq_1st_data_t * const p_zmod4xxx_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

`typedef struct st_rm_zmod4xxx_raw_data`

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing IAQ 1st Gen. calculation result.

*/\*\* ZMOD4XXX IAQ 1st gen data structure \*/*

```
typedef struct st_rm_zmod4xxx_iaq_1st_data
{
    float    rmox;           ///< MOx resistance.
    float    rcda;          ///< CDA resistance.
    float    iaq;           ///< IAQ index.
    float    tvoc;          ///< TVOC concentration (mg/m^3).
    float    etoh;          ///< EtOH concentration (ppm).
    float    eco2;          ///< eCO2 concentration (ppm).
} rm_zmod4xxx_iaq_1st_data_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_UNSUPPORTED	Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates IAQ results using ZMOD4410 IAQ 1st Gen. library and stores the results into the “`rm_zmod4xxx_iaq_1st_data_t *p_zmod4xxx_data`” structure.

### Special Notes

None

## 11.8 RM\_ZMOD4XXX\_Iaq2ndGenDataCalculate()

This function calculates IAQ 2nd Gen. values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_Iaq2ndGenDataCalculate (
    rm_zmod4xxx_ctrl_t          * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t      * const p_raw_data,
    rm_zmod4xxx_iaq_2nd_data_t  * const p_zmod4xxx_data
)
```

### Parameters

#### *p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

#### *p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

#### *p\_zmod4xxx\_data*

Pointer to calculation result data structure storing IAQ 2nd Gen. calculation result

*/\*\* ZMOD4XXX IAQ 2nd gen data structure \*/*

```
typedef struct st_rm_zmod4xxx_iaq_2nd_data
```

```
{
    float      rmoX[13];          ///< MOx resistance.
    float      log_rcda;          ///< log10 of CDA resistance for IAQ 2nd Gen.
    float      log_nonlog_rcda[3]; ///< log10 of CDA resistance for IAQ 2nd Gen ULP.
    float      iaq;              ///< IAQ index.
    float      tvoc;             ///< TVOC concentration (mg/m^3).
    float      etoh;             ///< EtOH concentration (ppm).
    float      eco2;             ///< eCO2 concentration (ppm).
} rm_zmod4xxx_iaq_2nd_data_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_UNSUPPORTED	Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates IAQ results using ZMOD4410 IAQ 2nd Gen. library and stores the results into the "rm\_zmod4xxx\_iaq\_2nd\_data\_t \*p\_zmod4xxx\_data" structure.

### Special Notes

None

## 11.9 RM\_ZMOD4XXX\_OdorDataCalculate()

This function calculates Odor values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_OdorDataCalculate (
    rm_zmod4xxx_ctrl_t          * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t     * const p_raw_data,
    rm_zmod4xxx_odor_data_t    * const p_zmod4xxx_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing Odor calculation result

*/\*\* ZMOD4XXX Odor structure \*/*

```
typedef struct st_rm_zmod4xxx_odor_data
```

```
{
    bool    control_signal;    ///< Control signal input for odor lib.
    float   odor;              ///< Concentration ratio for odor lib.
} rm_zmod4xxx_odor_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

FSP\_ERR\_UNSUPPORTED

Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates Odor results from `r_mox` and odor parameters using ZMOD4410 Odor library and stores the results into the "`rm_zmod4xxx_odor_data_t *p_zmod4xxx_data`" structure.

### Special Notes

None

## 11.10 RM\_ZMOD4XXX\_SulfurOdorDataCalculate()

This function calculates Sulfur Odor values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_SulfurOdorDataCalculate (
    rm_zmod4xxx_ctrl_t          * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t     * const p_raw_data,
    rm_zmod4xxx_sulfur_odor_data_t * const p_zmod4xxx_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

typedef struct st\_rm\_zmod4xxx\_raw\_data

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing Sulfur Odor calculation result

*/\*\* ZMOD4XXX Sulfur-Odor structure \*/*

typedef struct st\_rm\_zmod4xxx\_sulfur\_odor\_data

```
{
    float    rmox[9];           ///< MOx resistance.
    float    intensity;        ///< odor intensity rating ranges from 0.0 to 5.0 for sulfur lib
    rm_zmod4xxx_sulfur_odor_t odor; ///< sulfur_odor classification for lib
} rm_zmod4xxx_sulfur_odor_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

FSP\_ERR\_UNSUPPORTED

Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates Sulfur Odor results from ADC data using ZMOD4410 Sulfur Odor library and stores the results into the “`rm_zmod4xxx_sulfur_odor_data_t *p_zmod4xxx_data`” structure.

### Special Notes

None

## 11.11 RM\_ZMOD4XXX\_Oaq2ndGenDataCalculate()

This function calculates OAQ 2nd Gen. values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_Oaq2ndGenDataCalculate (
    rm_zmod4xxx_ctrl_t          * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t     * const p_raw_data,
    rm_zmod4xxx_oaq_2nd_data_t * const p_zmod4xxx_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing OAQ 2nd Gen. calculation result

*/\*\* ZMOD4XXX OAQ 2nd gen data structure \*/*

```
typedef struct st_rm_zmod4xxx_oaq_2nd_data
```

```
{
    float      rmo_x[8];           ///< MOx resistance.
    float      ozone_concentration; ///< The ozone concentration in part-per-billion
    uint16_t   fast_aqi;          ///< 1-minute average of the Air Quality Index according to the EPA standard based on ozone
    uint16_t   epa_aqi;          ///< The Air Quality Index according to the EPA standard based on ozone
} rm_zmod4xxx_oaq_2nd_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

FSP\_ERR\_UNSUPPORTED

Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates OAQ results from ADC data using ZMOD4510 OAQ 2nd Gen. library and stores the results into the "`rm_zmod4xxx_oaq_2nd_data_t *p_zmod4xxx_data`" structure.

### Special Notes

None

## 11.12 RM\_ZMOD4XXX\_RaqDataCalculate()

This function calculates RAQ values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_RaqDataCalculate (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t * const p_raw_data,
    rm_zmod4xxx_raq_data_t * const p_zmod4xxx_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing RAQ calculation result

*/\*\* ZMOD4XXX RAQ structure \*/*

```
typedef struct st_rm_zmod4xxx_raq_data
```

```
{
    bool    control_signal;    ///< Control signal input for raq lib.
    float   raq;              ///< Concentration ratio for raq lib.
} rm_zmod4xxx_raq_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

FSP\_ERR\_UNSUPPORTED

Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates RAQ results from `r_mox` and odor parameters using ZMOD4450 RAQ library and stores the results into the "`rm_zmod4xxx_raq_data_t *p_zmod4xxx_data`" structure.

### Special Notes

None



### 11.13 RM\_ZMOD4XXX\_RellaqDataCalculate()

This function calculates Rel IAQ values from ADC data.

#### Format

```
fsp_err_t RM_ZMOD4XXX_RellaqDataCalculate (
    rm_zmod4xxx_ctrl_t          * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t     * const p_raw_data,
    rm_zmod4xxx_rel_iaq_data_t * const p_zmod4xxx_data
)
```

#### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing Rel IAQ calculation result

*/\*\* ZMOD4XXX Relative IAQ data structure \*/*

```
typedef struct st_rm_zmod4xxx_rel_iaq_data
```

```
{
    float    rmox[13];    ///< MOx resistances.
    float    rhtr;        ///< heater resistance.
    float    rel_iaq;     ///< relative IAQ index.
} rm_zmod4xxx_rel_iaq_data_t;
```

#### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

FSP\_ERR\_UNSUPPORTED

Operation mode is not supported.

#### Properties

Prototyped in `rm_zmod4xxx.h`

#### Description

This function calculates IAQ results using ZMOD4410 Rel IAQ library and stores the results into the "rm\_zmod4xxx\_rel\_iaq\_data\_t \*p\_zmod4xxx\_data" structure.

#### Special Notes

None

## 11.14 RM\_ZMOD4XXX\_PbaqDataCalculate()

This function calculates PBAQ values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_PbaqDataCalculate (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t * const p_raw_data,
    rm_zmod4xxx_pbaq_data_t * const p_zmod4xxx_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing PBAQ calculation result

*/\*\* ZMOD4XXX PBAQ data structure \*/*

```
typedef struct st_rm_zmod4xxx_pbaq_data
```

```
{
    float    rmox[13];        ///< MOx resistance.
    float    log_rcda;        ///< log10 of CDA resistance.
    float    rhtr;            ///< heater resistance.
    float    temperature;     ///< ambient temperature (degC).
    float    tvoc;            ///< TVOC concentration (mg/m^3).
    float    etoh;            ///< EtOH concentration (ppm).
} rm_zmod4xxx_pbaq_data_t;
```

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_UNSUPPORTED	Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates TVOC results using ZMOD4410 PBAQ library and stores the results into the "rm\_zmod4xxx\_pbaq\_data\_t \*p\_zmod4xxx\_data" structure.

### Special Notes

None

## 11.15 RM\_ZMOD4XXX\_No2O3DataCalculate()

This function calculates NO2 O3 values from ADC data.

### Format

```
fsp_err_t RM_ZMOD4XXX_No2O3DataCalculate (
    rm_zmod4xxx_ctrl_t      * const p_api_ctrl,
    rm_zmod4xxx_raw_data_t * const p_raw_data,
    rm_zmod4xxx_no2_o3_data_t * const p_zmod4xxx_data
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*p\_raw\_data*

Pointer to raw data structure which ADC data read from sensor is stored in

*/\*\* ZMOD4XXX raw data structure \*/*

```
typedef struct st_rm_zmod4xxx_raw_data
```

```
{
    uint8_t    adc_data[32];
} rm_zmod4xxx_raw_data_t;
```

*p\_zmod4xxx\_data*

Pointer to calculation result data structure storing NO2 O3 calculation result

*/\*\* ZMOD4XXX NO2 O3 data structure \*/*

```
typedef struct st_rm_zmod4xxx_no2_o3_data
```

```
{
    float    rmox[4];           ///< MOx resistance.
    float    temperature;      ///< Temperature (degC) used for ambient compensation
    float    ozone_concentration; ///< O3_conc_ppb stands for the ozone concentration in part-per-billion
    float    no2_concentration; ///< NO2_conc_ppb stands for the NO2 concentration in part-per-billion
    uint16_t fast_aqi;         ///< FAST_AQI stands for a 1-minute average of the Air Quality Index according to the EPA
    standard based on ozone
    uint16_t epa_aqi;          ///< EPA_AQI stands for the Air Quality Index according to the EPA standard based on
    ozone.
} rm_zmod4xxx_no2_o3_data_t;
```

### Return Values

FSP\_SUCCESS

Successfully started.

FSP\_ERR\_ASSERTION

Null pointer passed as a parameter.

FSP\_ERR\_NOT\_OPEN

Module is not open.

FSP\_ERR\_UNSUPPORTED

Operation mode is not supported.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

This function calculates NO2 O3 results using ZMOD4510 NO2 O3 library and stores the results into the "rm\_zmod4xxx\_no2\_o3\_data\_t \*p\_zmod4xxx\_data" structure.

### Special Notes

None

## 11.16 RM\_ZMOD4XXX\_TemperatureAndHumiditySet()

This function sets relative humidity (in %RH) and temperature (in °C) values for IAQ 2nd Gen, IAQ 2nd Gen ULP, PBAQ, OAQ 2nd Gen and NO2 O3 calculation.

### Format

```
fsp_err_t RM_ZMOD4XXX_TemperatureAndHumiditySet (
    rm_zmod4xxx_ctrl_t * const p_api_ctrl,
    float               temperature,
    float               humidity
)
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct `rm_zmod4xxx_ctrl_t`.

*temperature*

Temperature value (in °C) set to “`p_api_ctrl -> temperature`”

*humidity*

Humidity value (in %RH) set to “`p_api_ctrl -> humidity`”

### Return Values

FSP_SUCCESS	Successfully started.
FSP_ERR_ASSERTION	Null pointer passed as a parameter.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in `rm_zmod4xxx.h`

### Description

In some operation, an additional temperature and humidity measurement is recommended, and the algorithm has an auto-compensation included.

This function sets environmental relative humidity (in %RH) and temperature (in °C) values for calculation.

This function should be called before `RM_ZMOD4XXX_Iaq2ndGenDataCalculate()`, `RM_ZMOD4XXX_PbaqDataCalculate()`, `RM_ZMOD4XXX_Oaq2ndGenDataCalculate()` or `RM_ZMOD4XXX_No2O3DataCalculate()` is called for calculation.

The detail information is described in Section “Environmental Influences” of ZMOD4410 Datasheet., Section “General Characteristics” of ZMOD4510 Datasheet.

### Special Notes

None

## 11.17 RM\_ZMOD4XXX\_DeviceErrorCheck()

This function checks for device errors such as unexpected errors. This function should be called before Read() and DataCalculate().

### Format

```
fsp_err_t RM_ZMOD4XXX_DeviceErrorCheck (rm_zmod4xxx_ctrl_t * const p_api_ctrl);
```

### Parameters

*p\_api\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.9(2) Control Struct rm\_zmod4xxx\_ctrl\_t.

### Return Values

FSP_SUCCESS	Successfully data decoded.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_TIMEOUT	Communication is timeout.
FSP_ERR_ABORTED	Communication is aborted.

### Properties

Prototyped in rm\_zmod4xxx.h

### Description

This function reads device error status of ZMOD4410, ZMOD4510 sensor from sensor register.

This function returns either measurement success or 100ms timeout.

This function is valid for IAQ 2nd Gen, Rel IAQ, PBAQ, OAQ 2nd Gen and NO2 O3.

### Special Notes

None

## 11.18 zmod4xxx\_user\_xxx\_callback()

This is a callback function registered with Smart Configurator by user.

The default name of callback function for I2C is zmod4xxx\_user\_i2c\_callback0, zmod4xxx\_user\_i2c\_callback1.

The default name of callback function for IRQ is zmod4xxx\_user\_irq\_callback0, zmod4xxx\_user\_irq\_callback1.

### Format

```
void zmod4xxx_user_i2c_callback0(rm_zmod4xxx_callback_args_t * p_args)
void zmod4xxx_user_i2c_callback1(rm_zmod4xxx_callback_args_t * p_args)
void zmod4xxx_user_irq_callback0(rm_zmod4xxx_callback_args_t * p_args)
void zmod4xxx_user_irq_callback1(rm_zmod4xxx_callback_args_t * p_args)
```

### Parameters

*p\_args*

```
/** ZMOD4XXX sensor API callback parameter definition */
typedef struct st_rm_zmod4xxx_callback_args
{
    void const          * p_context;
    rm_zmod4xxx_event_t event;
} rm_zmod4xxx_callback_args_t;
```

### Return Values

None

### Properties

Prototyped in rm\_zmod4xxx\_instance.c

### Description

None

### Special Notes

None

## 11.19 Usage Example of ZMOD4XXX FIT Module

Refer to a sample code included in Application Note “RA Family, RX Family, RL78 Family ZMOD4xxx Sample Software Manual (R01AN5899)”.

## 12. COMMS API Functions

### 12.1 RM\_COMMS\_I2C\_Open()

This function opens and configures the COMMS FIT module.

#### Format

```
fsp_err_t RM_COMMS_I2C_Open (
    rm_comms_ctrl_t      * const p_ctrl,
    rm_comms_cfg_t const * const p_cfg
)
```

#### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.10(2) Control Struct `rm_comms_ctrl_t`.

*p\_cfg*

Pointer to configuration structure

The members of this structure are shown in 2.9.10(1) Configuration Struct `rm_comms_cfg_t`.

#### Return Values

FSP_SUCCESS	Communications Middle module successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_ALREADY_OPEN	Module is already open. This module can only be opened once.
FSP_ERR_COMMS_BUS_NOT_OPEN	I2C driver is not open.

#### Properties

Prototyped in `rm_comms_i2c.h`

#### Description

This function opens and configures the COMMS FIT module.

This function copies the contents in “`p_cfg`” structure to the member “`p_ctrl->p_cfg`” in “`p_cfg`” structure.

This function does configurations by setting the members of “`p_ctrl`” structure as following:

- Sets bus configuration.
- Sets lower-level driver configuration.
- Sets callback and context.
- Sets an open flag.

#### Special Notes

“`R_RIIC_Open()`” or “`R_SCI_IIC_Open()`” must be called before calling this function.

Please refer to following documents for detail of “`R_RIIC_Open()`” API and “`R_SCI_IIC_Open()`” API:

- RX Family I2C Bus Interface (RIIC) Module Using Firmware Integration Technology (R01AN1692)
- RX Family Simple I2C Module Using Firmware Integration Technology (R01AN1691)

In addition, if use RTOS, a semaphore for blocking the bus and a mutex for locking the bus must be created before calling this function. Please make sure to use the semaphore and the mutex that are members of the variables “`g_comms_i2c_bus(x)_extended_cfg`” (`x`: 0 – 15)

Please refer to the following example.

```
/* Create a semaphore for blocking if a semaphore is not NULL */
if (NULL != g_comms_i2c_bus0_extended_cfg.p_blocking_semaphore)
{
#if BSP_CFG_RTOS_USED == 1      // FreeRTOS
*(g_comms_i2c_bus0_extended_cfg.p_blocking_semaphore->p_semaphore_handle)
= xSemaphoreCreateCounting((UBaseType_t) 1, (UBaseType_t) 0);
#elif BSP_CFG_RTOS_USED == 5   // ThreadX
tx_semaphore_create(g_comms_i2c_bus0_extended_cfg.p_blocking_semaphore->p_semaphore_handle,
g_comms_i2c_bus0_extended_cfg.p_blocking_semaphore->p_semaphore_name,
(ULONG) 0);
#endif
}

/* Create a recursive mutex for bus lock if a recursive mutex is not NULL */
if (NULL != g_comms_i2c_bus0_extended_cfg.p_bus_recursive_mutex)
{
#if BSP_CFG_RTOS_USED == 1      // FreeRTOS
*(g_comms_i2c_bus0_extended_cfg.p_bus_recursive_mutex->p_mutex_handle)
= xSemaphoreCreateRecursiveMutex();
#elif BSP_CFG_RTOS_USED == 5   // ThreadX
tx_mutex_create(g_comms_i2c_bus0_extended_cfg.p_bus_recursive_mutex->p_mutex_handle,
g_comms_i2c_bus0_extended_cfg.p_bus_recursive_mutex->p_mutex_name,
TX_INHERIT);
#endif
}
}
```



## 12.2 RM\_COMMS\_I2C\_Close()

This function disables specified COMMS FIT module.

### Format

```
fsp_err_t RM_COMMS_I2C_Close (rm_comms_ctrl_t * const p_ctrl)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.10(2) Control Struct rm\_comms\_ctrl\_t.

### Return Values

FSP_SUCCESS	Communications Middle module successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.

### Properties

Prototyped in rm\_comms\_i2c.h

### Description

This function clears the current device on bus and the open flag.

### Special Notes

None

## 12.3 RM\_COMMS\_I2C\_Read()

This function performs a read from I2C device.

### Format

```
fsp_err_t RM_COMMS_I2C_Read (
    rm_comms_ctrl_t    * const p_ctrl,
    uint8_t            * const p_dest,
    uint32_t const     bytes
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.10(2) Control Struct `rm_comms_ctrl_t`.

*p\_dest*

Pointer to the buffer to store read data

*bytes*

Number of bytes to read

### Return Values

FSP_SUCCESS	Communications Middle module successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_INVALID_CHANNEL	Invalid channel.
FSP_ERR_INVALID_ARGUMENT	Invalid argument.
FSP_ERR_IN_USE	Bus is busy.

### Properties

Prototyped in `rm_comms_i2c.h`

### Description

This function calls internal function “`rm_comms_i2c_bus_read()`” to start read operation from I2C bus which is RIIC bus or SCI bus depending on the device (sensor) connection.

The internal function “`rm_comms_i2c_bus_read()`” does bus re-configuration according to contents in “`p_ctrl`”. Then it calls “`R_RIIC_MasterReceive()`” API of RIIC FIT module when the device (sensor) is connected to RIIC bus, calls “`R_SCI_IIC_MasterReceive()`” API of SCI\_IIC FIT module when the device (sensor) is connected to SCI bus.

The receive pattern of “`R_RIIC_MasterReceive()`” and “`R_SCI_IIC_MasterReceive()`” is set as master reception. In this pattern, the master receives data from the slave.

Please refer to following documents for detail of “`R_RIIC_MasterReceive()`” API and “`R_SCI_IIC_MasterReceive()`” API:

- RX Family I2C Bus Interface (RIIC) Module Using Firmware Integration Technology (R01AN1692)
- RX Family Simple I2C Module Using Firmware Integration Technology (R01AN1691)

### Special Notes

None

## 12.4 RM\_COMMS\_I2C\_Write()

This function performs a write from the I2C device.

### Format

```
fsp_err_t RM_COMMS_I2C_Write (
    rm_comms_ctrl_t    * const p_ctrl,
    uint8_t            * const p_src,
    uint32_t const     bytes
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.10(2) Control Struct `rm_comms_ctrl_t`.

*p\_src*

Pointer to the buffer to store writing data

*bytes*

Number of bytes to write

### Return Values

FSP_SUCCESS	Communications Middle module successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_INVALID_CHANNEL	Invalid channel.
FSP_ERR_INVALID_ARGUMENT	Invalid argument.
FSP_ERR_IN_USE	Bus is busy.

### Properties

Prototyped in `rm_comms_i2c.h`

### Description

This function calls internal function “`rm_comms_i2c_bus_write()`” to start write operation to I2C bus which is RIIC bus or SCI bus depending on device (sensor) connection.

The internal function “`rm_comms_i2c_bus_write()`” does bus re-configuration according to contents in “`p_ctrl`”. Then it calls “`R_RIIC_MasterSend()`” API of RIIC FIT module when the device (sensor) is connected to RIIC bus, calls “`R_SCI_IIC_MasterSend()`” API of SCI\_IIC FIT module when the device (sensor) is connected to SCI bus.

Please refer to following documents for detail of “`R_RIIC_MasterSend()`” API and “`R_SCI_IIC_MasterSend()`” API:

- RX Family I2C Bus Interface (RIIC) Module Using Firmware Integration Technology (R01AN1692)
- RX Family Simple I2C Module Using Firmware Integration Technology (R01AN1691)

### Special Notes

None

## 12.5 RM\_COMMS\_I2C\_WriteRead()

This function performs a write to, then a read from the I2C device.

### Format

```
fsp_err_t RM_COMMS_I2C_WriteRead (
    rm_comms_ctrl_t          * const p_ctrl,
    rm_comms_write_read_params_t  const write_read_params
)
```

### Parameters

*p\_ctrl*

Pointer to control structure

The members of this structure are shown in 2.9.10(2) Control Struct `rm_comms_ctrl_t`.

*write\_read\_params*

Parameters structure for writeRead API

*/\*\* Struct to pack params for writeRead \*/*

```
typedef struct st_rm_comms_write_read_params
```

```
{
    uint8_t      * p_src;           ///< pointer to buffer for storing write data
    uint8_t      * p_dest;        ///< pointer to buffer for storing read data
    uint8_t      src_bytes;       ///< number of write data
    uint8_t      dest_bytes;      ///< number of read data
} rm_comms_write_read_params_t;
```

### Return Values

FSP_SUCCESS	Communications Middle module successfully configured.
FSP_ERR_ASSERTION	Null pointer, or one or more configuration options is invalid.
FSP_ERR_NOT_OPEN	Module is not open.
FSP_ERR_INVALID_CHANNEL	Invalid channel.
FSP_ERR_INVALID_ARGUMENT	Invalid argument.
FSP_ERR_IN_USE	Bus is busy.

### Properties

Prototyped in `rm_comms_i2c.h`

### Description

This function calls internal function “`rm_comms_i2c_bus_write_read()`” to start writing to I2C bus, then reading from I2C bus with re-start. The I2C bus is RIIC bus or SCI bus depending on device (sensor) connection.

The internal function “`rm_comms_i2c_bus_write_read()`” does bus re-configuration according to contents in “`p_ctrl`”. Then it calls “`R_RIIC_MasterReceive()`” API of RIIC FIT module when the device (sensor) is connected to RIIC bus, calls “`R_SCI_IIC_MasterReceive()`” API of SCI\_IIC FIT module when the device (sensor) is connected to SCI bus. The receive pattern of “`R_RIIC_MasterReceive()`” and “`R_SCI_IIC_MasterReceive()`” is set as master transmit/receive. In this pattern, the master (RX MCU) transmits data to the slave. After the transmission completes, a restart condition is generated, and the master receives data from the slave.

Please refer to following documents for detail of “`R_RIIC_MasterReceive()`” API and “`R_SCI_IIC_MasterReceive()`” API:

- RX Family I2C Bus Interface (RIIC) Module Using Firmware Integration Technology (R01AN1692)
- RX Family Simple I2C Module Using Firmware Integration Technology (R01AN1691)

### Special Notes

None

**Revision History**

Rev.	Date	Description	
		Page	Summary
1.00	June 30, 2021	-	First Release
1.10	Sep 30, 2021	-	Added description of programming mode features of HS300X FIT module Added description of FS2012 and ZMOD4XXX FIT modules
1.20	Dec 9, 2021	-	Changed description of supporting to usage of multiple ZMOD4XXX sensors in a project Other minor changes
1.30	Feb 15, 2022	-	Added RM_ZMOD4XXX_DeviceErrorCheck API Changed the number of I2C buses and devices from 5 to 16. Other minor changes
1.40	April 15, 2022	-	Added description of OB1203 FIT modules
1.50	June 22, 2022	-	Added descriptions of HS400x, FS3000 and FS1015 FIT modules
1.60	August 31, 2022	-	Added descriptions of ZMOD4450 to ZMOD4XXX FIT modules
1.70	June 28, 2023	-	Added RM_ZMOD4XXX_RellaqDataCalculate(),and RM_ZMOD4XXX_PbaqDataCalculate() Updated Usage Example of ZMOD4XXX FIT Module
1.80	Aug 26, 2024	-	Added description of RRH46410 FIT modules Fixed misprint
1.90	Oct 23, 2024	-	Added description of No2O3 to ZMOD4XXX FIT modules Deleted description of Oaq1stGen to ZMOD4XXX FIT modules Fixed misprint
2.00	Oct.31.2024	-	Added description of RRH62000 FIT modules Fixed misprint
2.10	Jan.31.2025	113, 115, 116	Updated RRH62000 API functions

# General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

## 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

## 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

## 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

## 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

## 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

## 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

## 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

## 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/).