

## Environmental Sensors

This document describes the Environmental Sensors Evaluation Kit (ES-EVK) for the following sensors:

- ZMOD4410 for TVOC and IAQ
- RRH46410 for TVOC and IAQ
- ZMOD4510 for O<sub>3</sub>, NO<sub>2</sub>, and OAQ
- ZMOD4450 for RAQ
- HS3001 and HS4001 for RHT
- FS3000 for Air Velocity
- RRH62000 for PM, TVOC, and RHT
- RRH47000 for CO<sub>2</sub> and RHT

All sensors share the same evaluation kit platform in hardware and software.

The EVK's Communication Board (ESCom) handles the interface between the user's computer and the sensor modules mounted on the sensor boards ("daughter boards").

The evaluation kit uses an ARM®-based Renesas RA4M2 MCU on the communication board to handle the USB protocol, translate communications, and synchronize communications with the I<sup>2</sup>C interface. The sensor board includes necessary decoupling capacitors; however, I<sup>2</sup>C pull-up resistors for the sensor boards are not assembled or mounted on the ESCom communication board, but on the provided Renesas sensor boards only.

The Windows®-based Environmental Sensors Evaluation Software (ES-Eval) and additional related documentation are available on each Renesas sensor product page.


### Kit Content

- Environmental Sensor Communication board (ESCom)
- Sensor board with either:
  - ZMOD4410 + HS4001
  - ZMOD4510 + HS3001
  - RRH46410 + HS4001
  - ZMOD4450
  - FS3000
  - RRH62000
  - RRH47000
- USB cable (Type-A to Type-C)

### Features

- User-friendly EVK expedites configuration and evaluation of the Renesas environmental sensors for air quality, gasses, humidity, temperature and particulate matter
- Supports all methods of operation for each sensor, including ultra-low power and AI technology for accurate and consistent sensor outputs
- Sensor-dependent algorithmic output and, if applicable, referring to international standards
- Operates with Renesas provided software; either with executable Graphic User Interface (GUI) or alternatively with programming examples
- The modular design of the EVK allows simple connection of PMOD boards for different environmental sensor derivatives and easy integration with other sensor products via the I<sup>2</sup>C interface
- The required Environmental Sensors Evaluation Software (ES-Eval) is available for free download on the Renesas website
- Provides background information on air quality sensing and how to use the sensor firmware
- Additional pins to measure power consumption and supply voltage

### Evaluation Kit

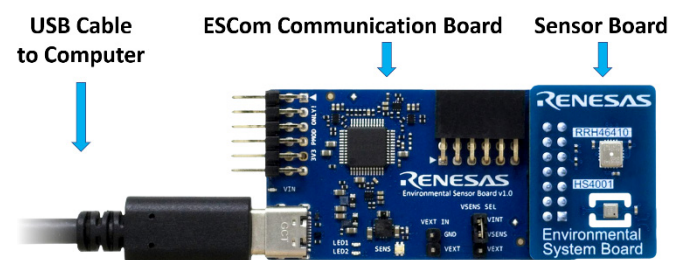

*Note:* Product images in this document are representations. Actual product configurations and versions are subject to change.



**Important Equipment Warning:** Ensure the correct connection of all cables. Supplying the board using the wrong polarity could result in damage to the board and/or the equipment. Check that all jumpers have been placed as specified in this document.

## Contents

<b>1. Setup</b> .....	<b>4</b>
1.1 Initial Startup.....	4
1.2 Required User Equipment.....	4
1.3 User Computer Requirements.....	4
1.3.1. Computer Requirements.....	4
1.4 Software Installation and Setup.....	4
1.5 EVK Hardware Connections and Initial Power-up.....	5
<b>2. Usage Guide</b> .....	<b>7</b>
2.1 Error Codes.....	12
<b>3. Schematics, BOM, and Pin Connector</b> .....	<b>13</b>
<b>4. Board Layout</b> .....	<b>23</b>
<b>5. Ordering Information</b> .....	<b>25</b>
<b>6. Revision History</b> .....	<b>25</b>

## Figures

Figure 1. Jumper Settings and Connectors on the Environmental Sensor Communication Board.....	5
Figure 2. Jumper Settings on the Communication Board for Internal or External Supply Voltage.....	6
Figure 3. Using a 14-Pin Ribbon Cable to Increase Distance between Communication and Sensor Board.....	6
Figure 4. Initial Display during Measurement (Exemplary for ZMOD4410 and HS4001).....	7
Figure 5. ESCom Communication Board Schematic – Page 1.....	13
Figure 6. ESCom Communication Board Schematic – Page 2.....	14
Figure 7. Sensor Board Schematic for ZMOD4410 and HS4001.....	15
Figure 8. Sensor Board Schematic for ZMOD4510 and HS3001.....	16
Figure 9. Sensor Board Schematic for RRH46410 and HS4001.....	17
Figure 10. Sensor Board Schematic for ZMOD4450.....	18
Figure 11. Sensor Board Schematic for FS3000.....	19
Figure 12. Sensor Board Schematic for RRH62000.....	20
Figure 13. Sensor Board Schematic for RRH47000.....	21
Figure 14. Sensor Board ZMOD4410 Layout with Pin Configuration.....	23
Figure 15. Sensor Board ZMOD4510 Layout with Pin Configuration.....	23
Figure 16. Sensor Board RRH46410 Layout with Pin Configuration and Additional Side Pads.....	23
Figure 17. Sensor Board ZMOD4450 Layout with Pin Configuration.....	24
Figure 18. Sensor Board FS3000 Layout with Pin Configuration.....	24
Figure 19. Sensor Board RRH62000 Layout with Pin Configuration.....	24
Figure 20. Sensor Board RRH47000 Layout with Pin Configuration.....	24

## Tables

Table 1. Evaluation Kit Connection Descriptions.....	6
Table 2. Analysis Tab User Options .....	8
Table 3. Most Common Errors.....	12
Table 4. Pin Configuration on Connector X1 .....	22

# 1. Setup

## 1.1 Initial Startup

To set up and operate the Evaluation Kit (EVK), refer to the *Quick Start Guide* included in the kit.

## 1.2 Required User Equipment

By default, the internal supply voltage for powering the sensor board is generated from the USB voltage supplied by the user's computer via the USB cable. If there is a need for currents higher than the defined USB Standard (typically 500mA at 5V), an external voltage supply source can be used instead of the internally generated voltage supply provided on the communication board.

The external supply powers only the sensor modules and not the communication board itself. The supply must meet the following requirements:

- Voltage 1.8V to 3.3V
- Current supply capability must meet the requirements of the connected sensors

## 1.3 User Computer Requirements

### 1.3.1. Computer Requirements

Windows-based computer is required for interfacing with the EVK and configuring the gas sensor modules. The user must download and install the [Environmental Sensors Evaluation Software](#) (ES-Eval).

The computer must meet the following requirements:

- 1GB RAM
- Hard drive with at least 1GB free space
- 1 USB port
- Windows 7, 8, 10, or 11
- Internet access for initial download of the drivers and software

**Important:** Before installing and activating the software, assemble and connect the hardware for the kit to the user's computer according to steps 1 to 3 in section 1.5.

## 1.4 Software Installation and Setup

Complete the following procedure to download and install *the Environmental Sensors Evaluation Software* (ES-Eval) with the kit connected:

1. Download the [Environmental Sensors Evaluation Software](#) (ES-Eval) file. This file can also be downloaded from any Renesas sensor product page.
2. Double-click on the executable *Installer* file to start and follow the installation steps.

## 1.5 EVK Hardware Connections and Initial Power-up

Set up the EVK hardware before using the software by completing the following procedure:

1. Refer to Figure 1 and Table 1 to determine the correct jumper settings for the ECom communication board. This jumper selects either the user programmable internal supply or a user supplied voltage as supply for the connected sensors.
  - If the internal voltage supply (default USB) is used, ensure that the jumper is connected to  $V_{INT}$  and  $V_{SENS}$  on the K2 connector.
  - If using an external supply, ensure that the jumper is connected to  $V_{EXT}$  and  $V_{SENS}$  on the K2 connector. In this case, without connecting the external supply to the communication board, verify that the external voltage supply setting does not exceed the voltage supply specifications – a minimum of 1.8V or a maximum of 3.3V. With the external supply off, connect the external voltage to the 2-pin “VEXT In” header (jumper K5) with the orientation indicated in Figure 2.

*Note:* The external power does not support the 5V pin on the 14-pin connector.
2. Connect the environmental sensor board on the 14-pin connector on the communication board ensuring the proper orientation of the sensor board is as shown in the *Evaluation Kit* image on page 1.
 

*Note:* In the case where two or more devices with the same I<sup>2</sup>C address have been connected to the ECom board, all devices will respond to commands send by the *Environmental Sensors Evaluation Software* (ES-Eval) and overlap of signal results may happen, which will lead to undefined results.
3. Insert the USB-C cable into the P1 connector on the communication board and connect it to an available USB port on the user’s computer.
4. Activate the software as described in section 1.4.
5. If the internal voltage is used, the ES-Eval activates the internal voltage after the sensor has been started.
6. Verify that the D2 LED is on and illuminated blue. This indicates that the sensor voltage is in the valid range.

The communication board provides additional PMOD connectors for usage with other Renesas products. For more information on additional PMOD connector options and their usage, contact Renesas [support](#).

- PMOD Connector (Female) for additional sensors via I<sup>2</sup>C interface
- PMOD Connector (Male) for Renesas MCU EVKs


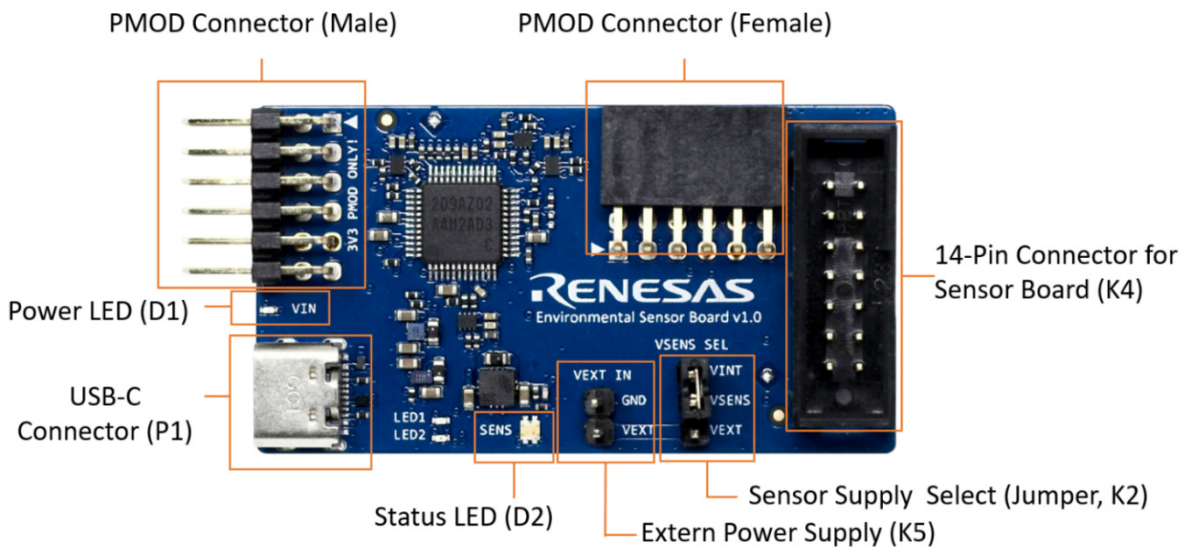


Figure 1. Jumper Settings and Connectors on the Environmental Sensor Communication Board

Table 1. Evaluation Kit Connection Descriptions

Connector	Type	Description
K2	3-pin header	This jumper selects either the internal or external voltage supply. For the proper position for the jumper, see Figure 2. It is also possible to measure the current drawn by the sensor. For this feature, ensure all other electrical components on the sensor board are physically removed.
PMOD	PMOD (Male)	This connector can be used to connect the ECom to a Renesas MCU Development Kit and communicate with the sensors connected via the K4 or the PMOD (socket) Connector.
PMOD	PMOD (Female)	This connector can be used to connect a Renesas PMOD sensor to the ECom board. Check the Renesas website for information about the available PMOD devices.
K4	14-pin connector	Port for connecting the environmental sensor boards to the ECom communication board.
K5	2-pin header	Connector for an optional external power supply (see Figure 2).
D1	Power LED	LED illuminates blue if the communication board is powered correctly.
D2	Status LED	LED illuminates blue if the ECom is properly connected and the kit software is started. It blinks green when an actual communication with a sensor takes place.
P1	USB-C	USB-C cable connector for connecting the communication board to the user's computer.

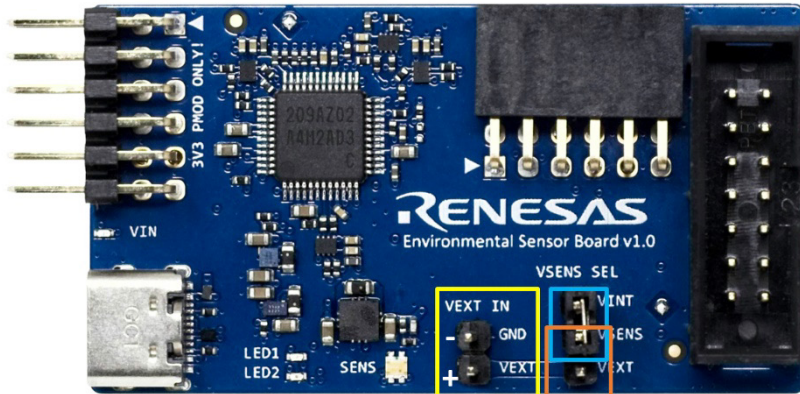

K2 Jumper:

- If using the internal supply, set the K2 jumper to connect VINT and VSENS (blue)
- If using the external supply, set the K2 jumper to connect VEXT and VSENS (orange) and connect the supply with K5 pins (yellow)

Figure 2. Jumper Settings on the Communication Board for Internal or External Supply Voltage



Figure 3. Using a 14-Pin Ribbon Cable to Increase Distance between Communication and Sensor Board

## 2. Usage Guide

After starting the ES-Eval software, the initial window is displayed as shown in Figure 4. The initial display in all operation modes consists of the following blocks:

- Measurement Control
- Sensor Select
- Algorithm Select & Configuration
- Signal Analysis
- Plot Control
- Plot Visualization

*Note:* The ES-EVAL automatically checks upon start if an ECom firmware update is available. It is recommended to always use the latest firmware for the Communication Board, which can be installed by using the latest ES-EVAL.













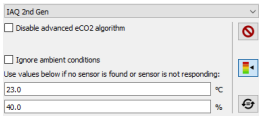
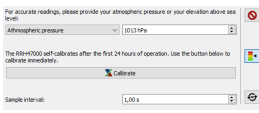
Figure 4. Initial Display during Measurement (Exemplary for ZMOD4410 and HS4001)




Depending on the sensor and operation mode, the user may see slightly different options. The available user options for all measurement modes are described in Table 2


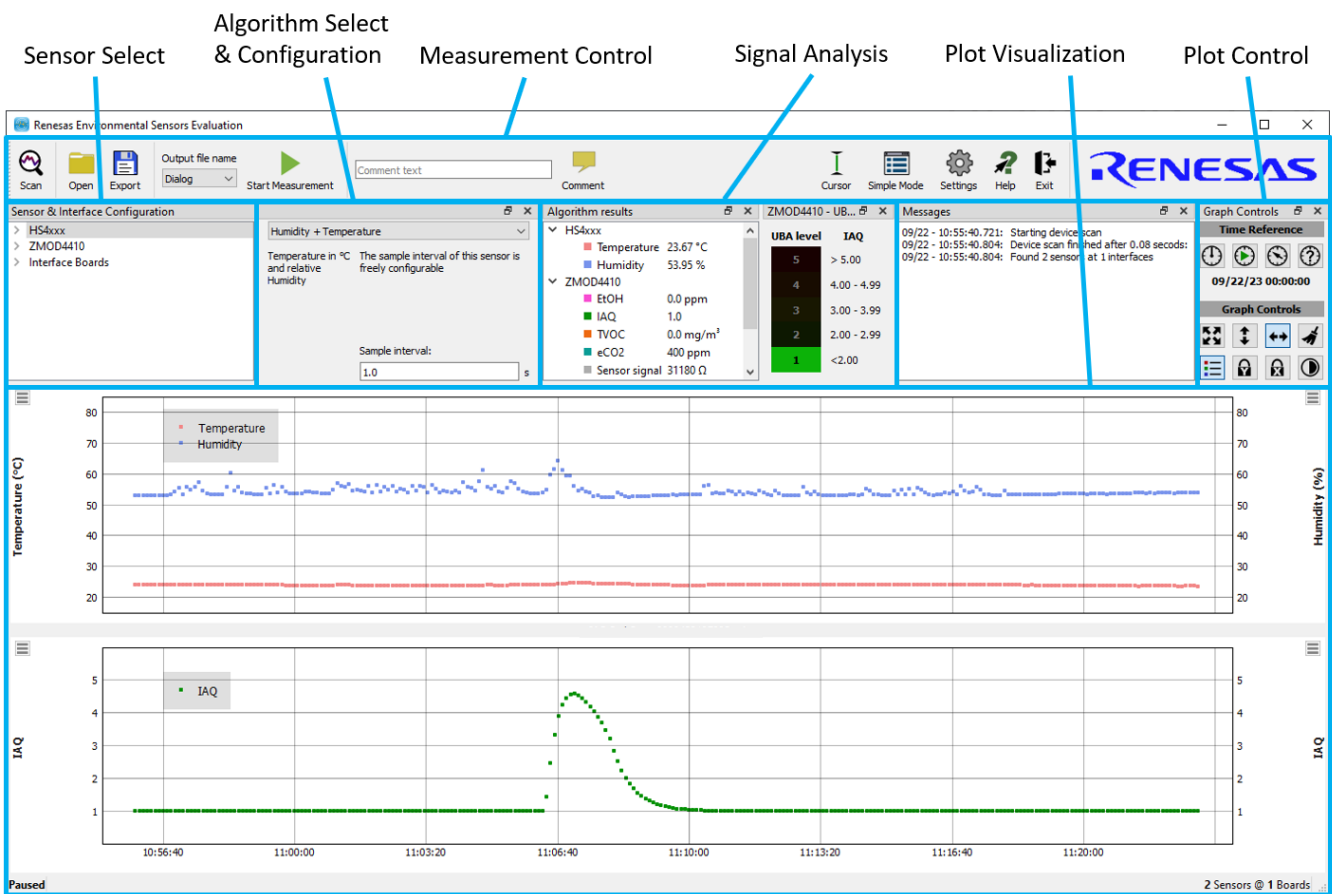
**Table 2. Analysis Tab User Options**

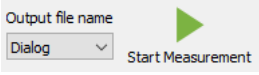Display Section	Button/Action	Description
Measurement Control		Scan the bus for sensors connected to the ECom board.
		This “Open” option allows the loading of previously recorded csv files into the EVK software when having the same csv file column structure. In case raw data are included it allows post-processing of previously recorded CSV files with the latest algorithms. For this usage, it is not necessary to connect the EVK hardware. The “Export” can be used to export a data file that was loaded and post-processed with the latest GUI algorithms.
		Clicking the “Start Measurement” button starts running a continuous measurement and changes the button function to “Stop Measurement.” Clicking the button again stops the measurement. All data captured during the measurement session is stored in a CSV formatted output file. The name of the output file can be selected either with an auto-name format or customized file name. The sensor results will be saved in a comma-separated file (CSV) which is user-selected via the file and path selection dialog when the sensor is started. This CSV file contains multiple sensor parameters (the sensor tracking number, the production lot number, calibration parameters, etc.) In addition, typically all raw sensor signals (for example, resistances) for each measurement step and temperature are recorded. <i>Note:</i> Additional information and parameters are usually used for debugging and validation only and the focus needs to be on the relevant parameters, such as the algorithm results.
		A comment (for example, “Start gas exposure”) can be added to the recorded data. After clicking the “Comment” button, a position in the graph must be clicked to place the comment. Use the ESC key to escape this function.
		In this section it is possible to: <ul style="list-style-type: none"> <li>▪ Activate cursor in the visualization plot.</li> <li>▪ Open a dialog for more settings such as default log parameters.</li> <li>▪ Switch to a Simple Mode to display results without any graphs. This display feature is available in dark and bright mode.</li> <li>▪ Provide help for GUI controls (first click “Help”, then click the object you want information about).</li> <li>▪ Exit the software.</li> </ul>
		If you click on the Renesas logo, the integrated algorithm versions are displayed. The latest ES-Eval version always has the same algorithms integrated as the latest firmware version of the individual sensors.
Sensor Select		This widget is used to select sensors for configuration and to configure whether they are shown in the GUI and logged in the graph. After a bus scan, all sensors and interface boards detected on the computer are listed here. Measurement data is collected for all sensors and logged in the output file. To remove a sensor or sensor type from data acquisition, right-click on the corresponding element and chose ‘remove’. A new bus scan is required to add the sensors again.  In addition, the first of each sensor type is displayed in the graphs. The checkbox in front of each sensor is used to enable or disable plot visualization. <i>Note:</i> Only one sensor of each type can be plotted.

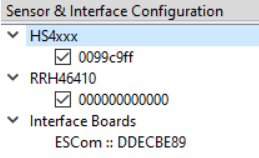

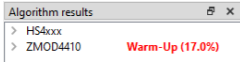Display Section	Button/Action	Description
Algorithm Select & Configuration		<p>If a “Warm-Up” time is needed, it will be displayed to the user. Therefore, the first measurements of the algorithm will be taken for this warm-up. This field also indicates how much time has been completed during this period. Raw sensor signals and algorithm results are shown on the plots during this time, but full algorithm performance is only given after warm-up.</p> <p><i>Note:</i> This does not cover the full stabilization of the sensor module but rather covers only the first minutes during startup.</p> <p>After warm-up, the “Signal Analyzes” field shows the measurement results from all active sensors.</p>
		<p>If a sensor is not needed for a measurement, it can be disabled (power down). A second click on this button will re-enable the sensor.</p>
		<p>In the event that multiple operation methods are available, these will be displayed and activated here. It is also possible to deactivate a sensor if it is required for the measurement and data collection.</p> <p>For gas sensor operation, temperature and humidity compensations are recommended. This is enabled by default in case a temperature/humidity sensor is connected, such as the HS3001 or HS4001. If a temperature or humidity sensor is not found or ignored, the settings for the parameters can be set manually in this field.</p> <p><b>Additional parameters for ZMOD4410 and RRH46410:</b></p> <p>Renesas’ patented smart algorithm provides eCO<sub>2</sub> readings with high accuracy when activated (default). However, for demonstration reasons it may be useful to disable the eCO<sub>2</sub> algorithm in the section “Demonstration Modes” to see fast CO<sub>2</sub> changes directly related to the VOC level.</p>
	<p>The sample interval of this sensor is freely configurable</p> <p>Sample interval:</p> <input type="text" value="1.0"/> s	<p>When using a Renesas HS temperature and humidity sensor, the temperature result will be displayed in Celsius (°C) and the humidity in % RH, respectively. The sampling interval of the HS can be adjusted as needed with the shortest possible sampling interval of 0.5s.</p>
		<p>The RRH47000 CO<sub>2</sub> sensor provides parameter settings for accurate measurement of CO<sub>2</sub> concentrations. This includes atmospheric pressure compensation (based on elevation above sea level), due to dependency on CO<sub>2</sub> partial pressure. A manual calibration in a known CO<sub>2</sub> atmosphere can also be triggered to avoid waiting times for the automatic baseline correction (ABC).</p>

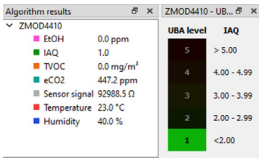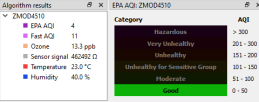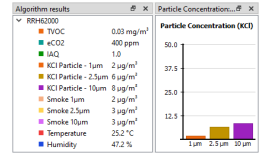Display Section	Button/Action	Description
<p>Signal Analysis</p>	  	<p><b>The following algorithm results are given for ZMOD4410 and RRH46410:</b></p> <ul style="list-style-type: none"> <li>▪ <b>IAQ 2<sup>nd</sup> Gen (Absolute and Relative):</b>                      The IAQ rating from the Federal German Environmental Agency (UBA) ranging from 1 (Clean Hygienic Air) to 5 (Unacceptable Conditions) and is based on an absolute TVOC reading (mg/m<sup>3</sup> or Ethanol equivalent in ppm). Also, a relative IAQ indicates general changes in air quality:                     <ul style="list-style-type: none"> <li>• 0 to 100 Improvement in Air Quality (air gets cleaner)</li> <li>• 100 No change in Air Quality</li> <li>• 100 to 500 Degradation in Air Quality (air gets more polluted)</li> </ul> </li> <li>▪ <b>PBAQ:</b>                      The PBAQ operation mode complies with typical Public Building Air Quality standards. It focuses on high accurate TVOC concentrations in the typical indoor environments and is given in absolute numbers (mg/m<sup>3</sup>) and as relative output (same scale as IAQ 2<sup>nd</sup> Gen). Also, a relative PBAQ output indicates general changes in air quality:                     <ul style="list-style-type: none"> <li>• 0 to 100 Improvement in Air Quality (air gets cleaner)</li> <li>• 100 No change in Air Quality</li> <li>• 100 to 500 Degradation in Air Quality (air gets more polluted)</li> </ul> </li> <li>▪ <b>Sulfur Odor Discrimination:</b>                      Identifies bad sulfur odors. The algorithm output is classified as “acceptable” and “bad” with an intensity indicator ranging from 1 (clean air) to 5 (very strong)</li> </ul> <p><b>The following algorithm results is given for ZMOD4510:</b></p> <p>The first 50 measurement samples will be taken for sensor stabilization. During this time, the “Algorithm Result” section will indicate the completion progress and will continually show the sensor resistance. After stabilization, the ozone and nitrogen dioxide concentrations are given (in ppb) and the AQI is shown in six categories according to the EPA Air Quality Standard:</p> <ul style="list-style-type: none"> <li>▪ 0 to 50 Good Air Quality</li> <li>▪ 51 to 100 Moderate Air Quality</li> <li>▪ 101 to 150 Unhealthy Air Quality for Sensitive Groups</li> <li>▪ 151 to 200 Unhealthy Air Quality</li> <li>▪ 201 to 300 Very Unhealthy Air Quality</li> <li>▪ &gt; 300 Hazardous Air Quality</li> </ul> <p><b>The following algorithm results are given for HS3001 and HS4001:</b></p> <p>Temperature (°C) and Humidity (RH).                      Returns the values for relative humidity (RH) in % and temperature in °C in the selected sample interval.</p> <p><b>The following algorithm results are given for RRH62000:</b></p> <p>The All-in-one Air Quality Module includes sensing elements for Particle Measurement (PM1, PM2.5, and PM10), TVOC, IAQ, eCO<sub>2</sub>, Temperature, and Humidity. The PM measurement has two output options: KCl (Potassium Chloride, a typical calibration particle nuclei) and Smoke (Cigarette smoke, used for calibration).</p>

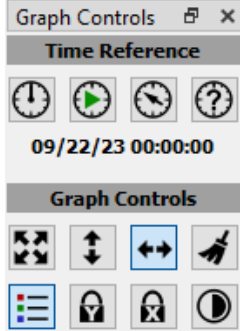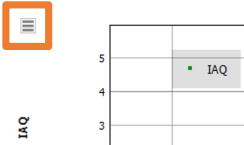Display Section	Button/Action	Description
Plot Control	 <p>The screenshot shows a 'Graph Controls' window with a 'Time Reference' section containing four clock icons and a timestamp '09/22/23 00:00:00'. Below it is a 'Graph Controls' section with two rows of icons: the top row has four icons for auto-fit, Y-axis fit, X-axis fit, and delete; the bottom row has four icons for legend, Y-axis lock, X-axis lock, and contrast toggle.</p>	<p><b>Time Reference:</b> Choose the time reference for the X axes.</p> <ul style="list-style-type: none"> <li>Start of Day (of current measurement)</li> <li>Start of Measurement</li> <li>Manually pick a time in the graph using the mouse</li> <li>User defined reference time stamp</li> </ul> <p><b>Graph Controls:</b> Button explanation from left to right for the top row:</p> <ul style="list-style-type: none"> <li>The 1<sup>st</sup> button auto fits all the data on the X and Y axes</li> <li>The 2<sup>nd</sup> button fits the Y axis to display all Data</li> <li>The 3<sup>rd</sup> button allows hovering the mouse to open a menu that provides control on the X-range being displayed</li> <li>The 4<sup>th</sup> button will delete all current data from the plots (memory). The data in the csv measurement file will remain.</li> </ul> <p>Button explanation from left to right for the bottom row:</p> <ul style="list-style-type: none"> <li>Button 1 enables/disables the legend for the plot visualization</li> <li>Button2 locks/unlocks the Y axes to be unaffected by mouse operations</li> <li>Button 3 locks/unlocks the X axes to be unaffected by mouse operations</li> <li>The 4<sup>th</sup> button switches between bright and dark to improve contrast. This display mode will also be used in the Simple Mode view.</li> </ul>
Plot Visualization	 <p>The screenshot shows a graph with a vertical axis labeled 'IAQ' ranging from 3 to 5. A single data point is plotted at approximately 4.5 and is labeled 'IAQ'.</p>	<p>The lower half of the graphical user interface provides a visualization of the data. It shows the plots for the options selected. Also, in the upper left and right corners of each graph, multiple parameters can be chosen from to active/deactivate curves for sensor output of the corresponding axis. It is also possible to change the axis scale between linear and logarithmic.</p>


## 2.1 Error Codes

Most common error messages are explained in Table 3.

**Table 3. Most Common Errors**

Error Code	Description and Solution
Error: Failed to open file <filename>	The selected data-file could not be opened for writing. Check that the selected file is not locked by another application and that you have write access to the folder the data files should be stored in.
The RRH46410 cannot be used with the HiCom communication board.	The RRH46410 cannot work with the older HiCom communication board due to missing clock stretching.
<SENSOR> reported damage error. If this error lasts over a longer time, the sensor may be damaged.	The sensor has a self-check for its general functionality. With every measurement an internal check is performed to identify potential damage. Please see the device datasheet for more information.
<SENSOR> / <UID>: Sequence failed: <DETAILS>	There was an error executing the measurement sequence for sensor <SENSOR> with unique ID <UID>. Additional details of the error are displayed <DETAILS>. The ES-Eval software will try to recover the error automatically and continue measurements. If the same error occurs in subsequent measurements, try to stop and restart the measurement. If unsuccessful, try to reconnect the interface board.


### 3. Schematics, BOM, and Pin Connector

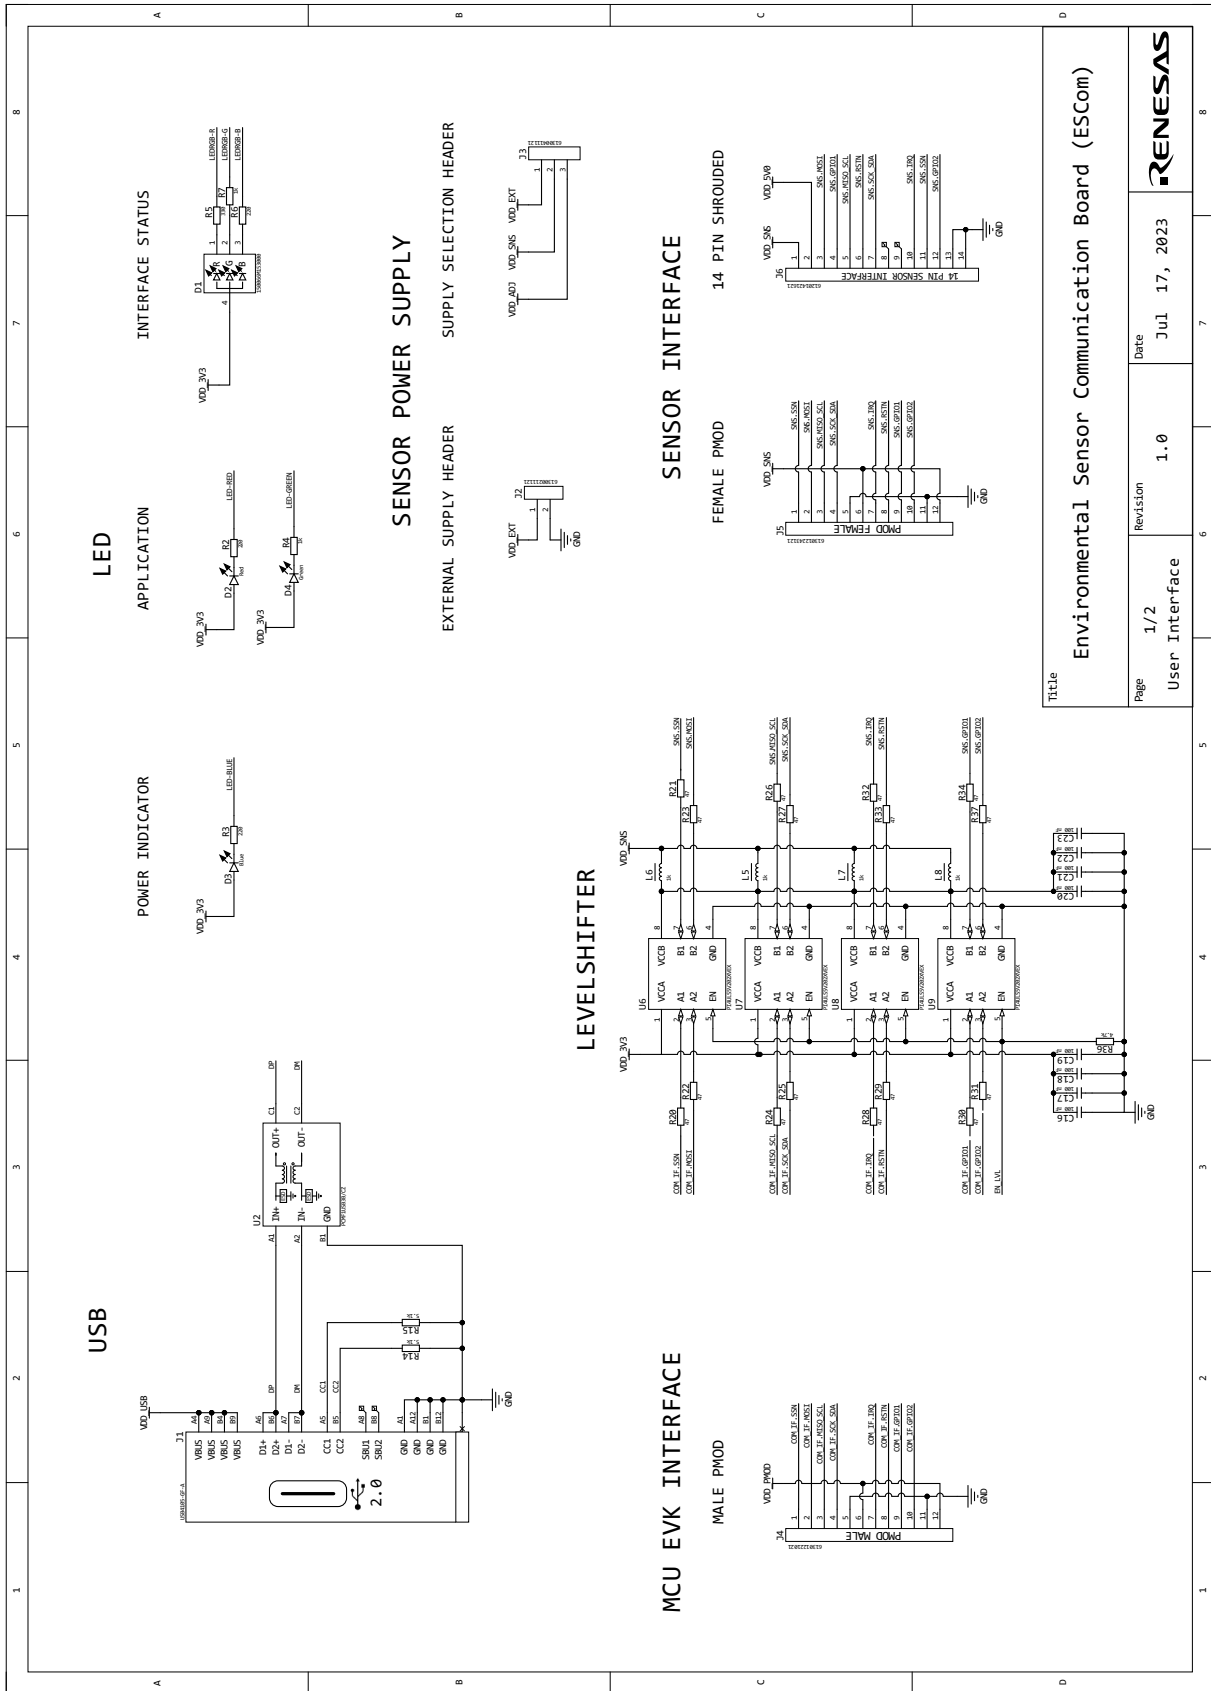

Title		Environmental Sensor Communication Board (ESCom)	
Page	1/2	Revision	1.0
Date	Jul 17, 2023	RENESAS	

Figure 5. ESCom Communication Board Schematic – Page 1



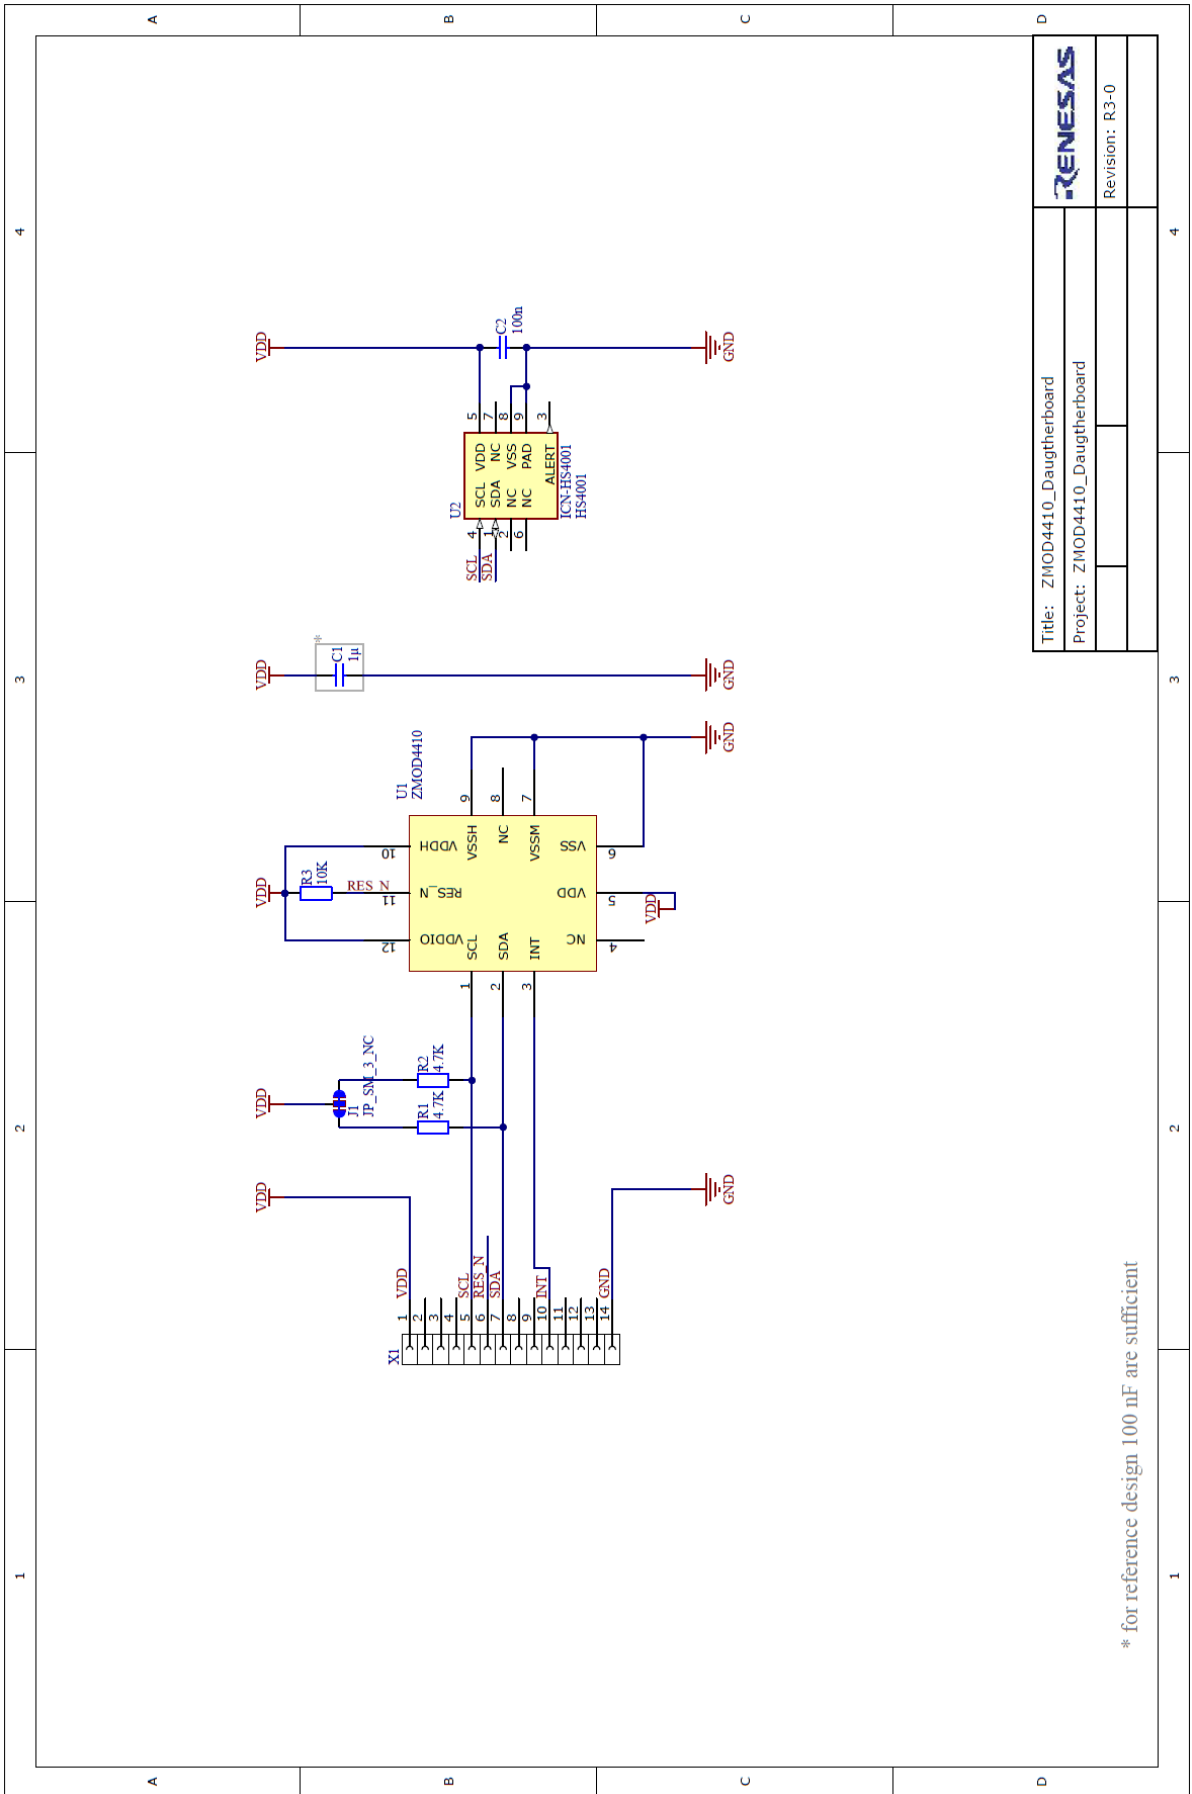

Title: ZMOD4410_Daughterboard	
Project: ZMOD4410_Daughterboard	
Revision: R3-0	

\* for reference design 100 nF are sufficient

Figure 7. Sensor Board Schematic for ZMOD4410 and HS4001


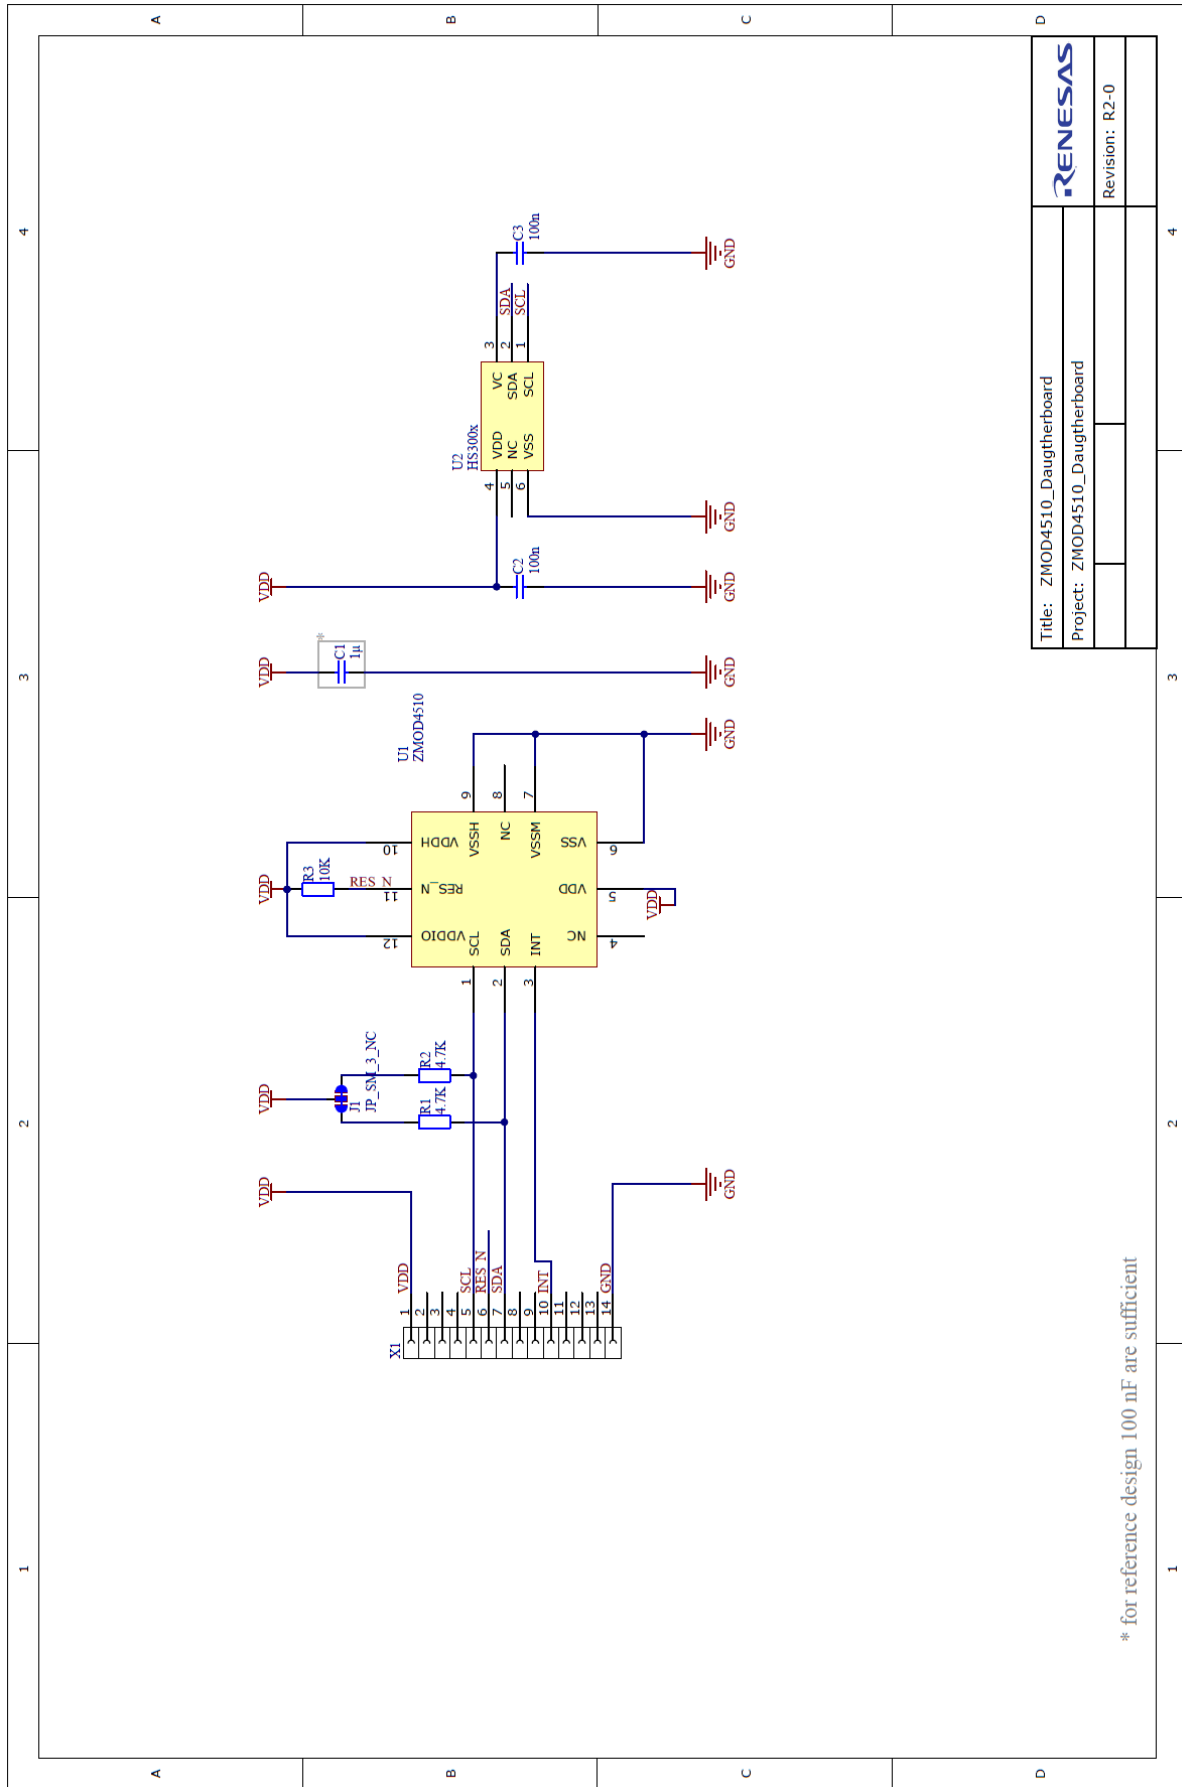


Figure 8. Sensor Board Schematic for ZMOD4510 and HS3001




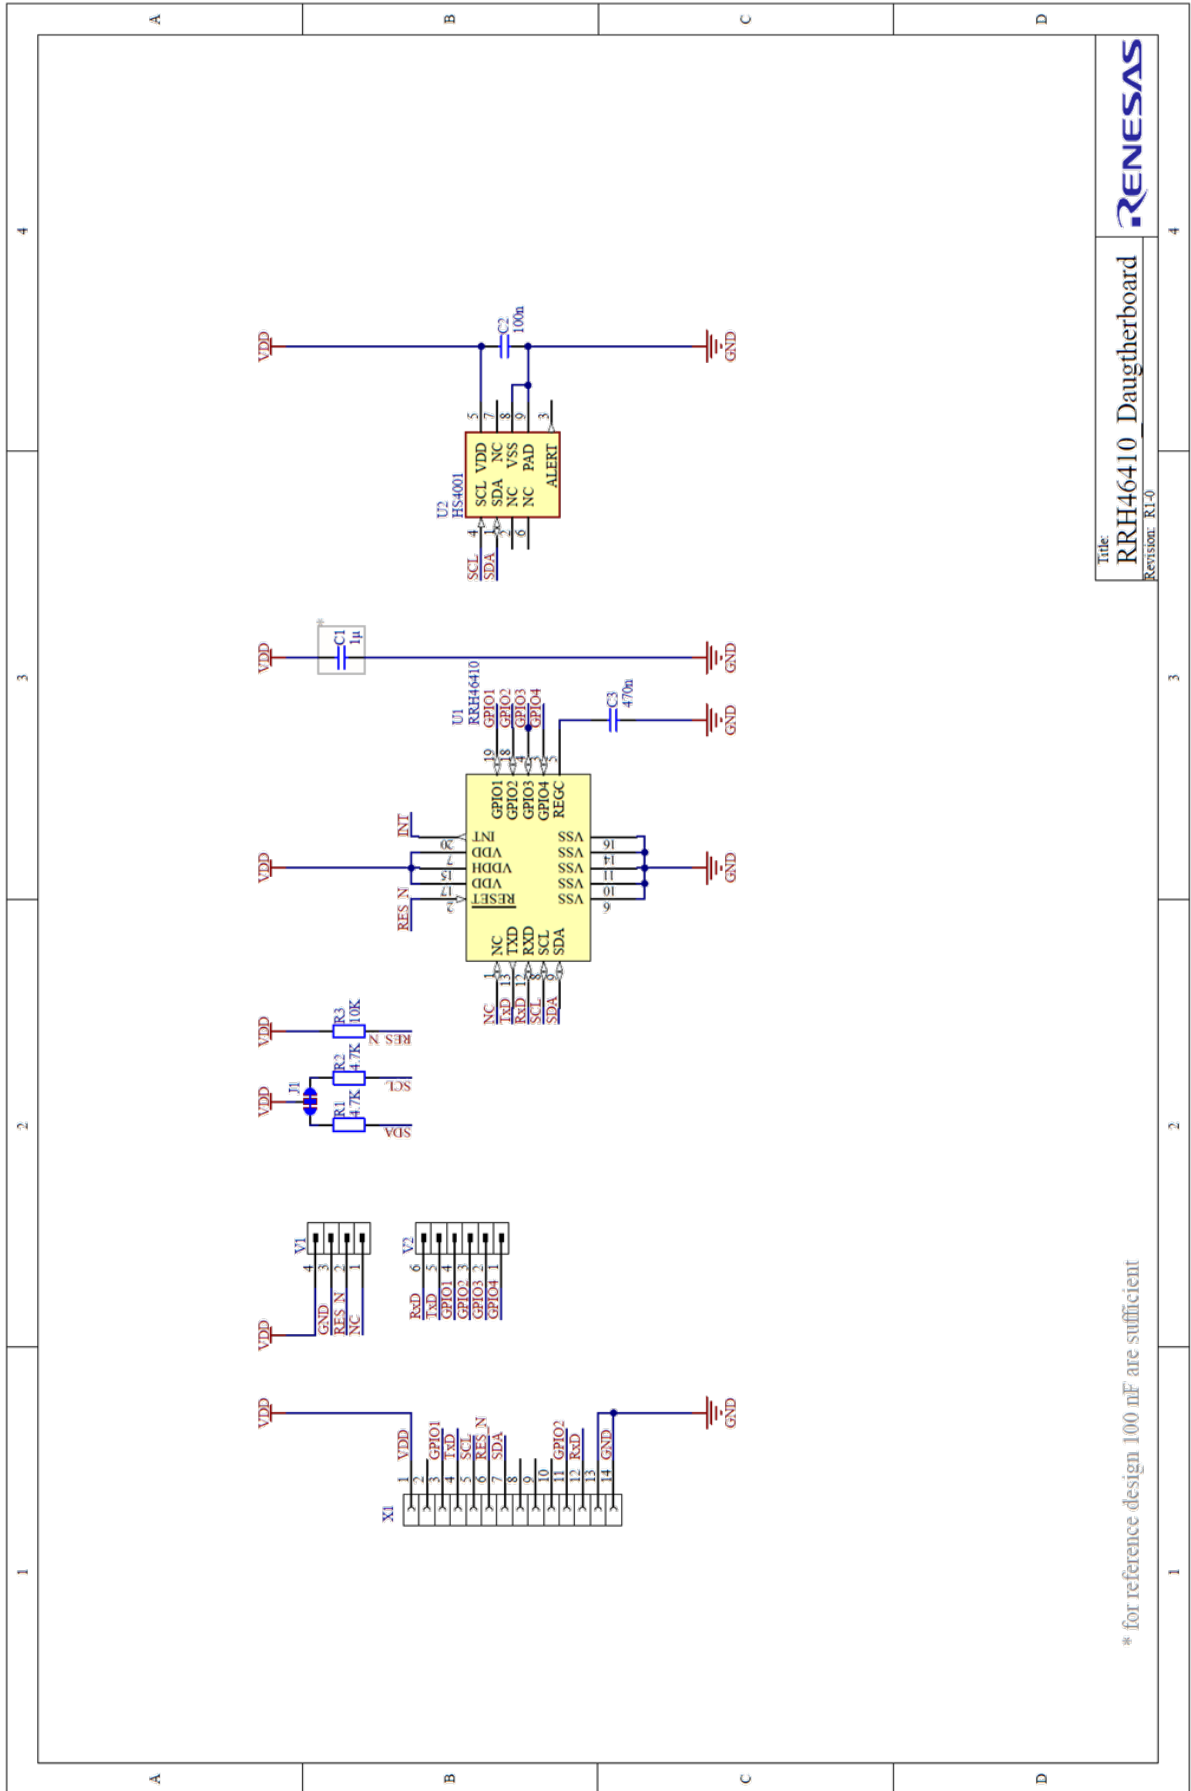

Title: RRH46410\_Daughterboard  
 Revision: R1.0

\* for reference design 100 nF are sufficient


Figure 9. Sensor Board Schematic for RRH46410 and HS4001

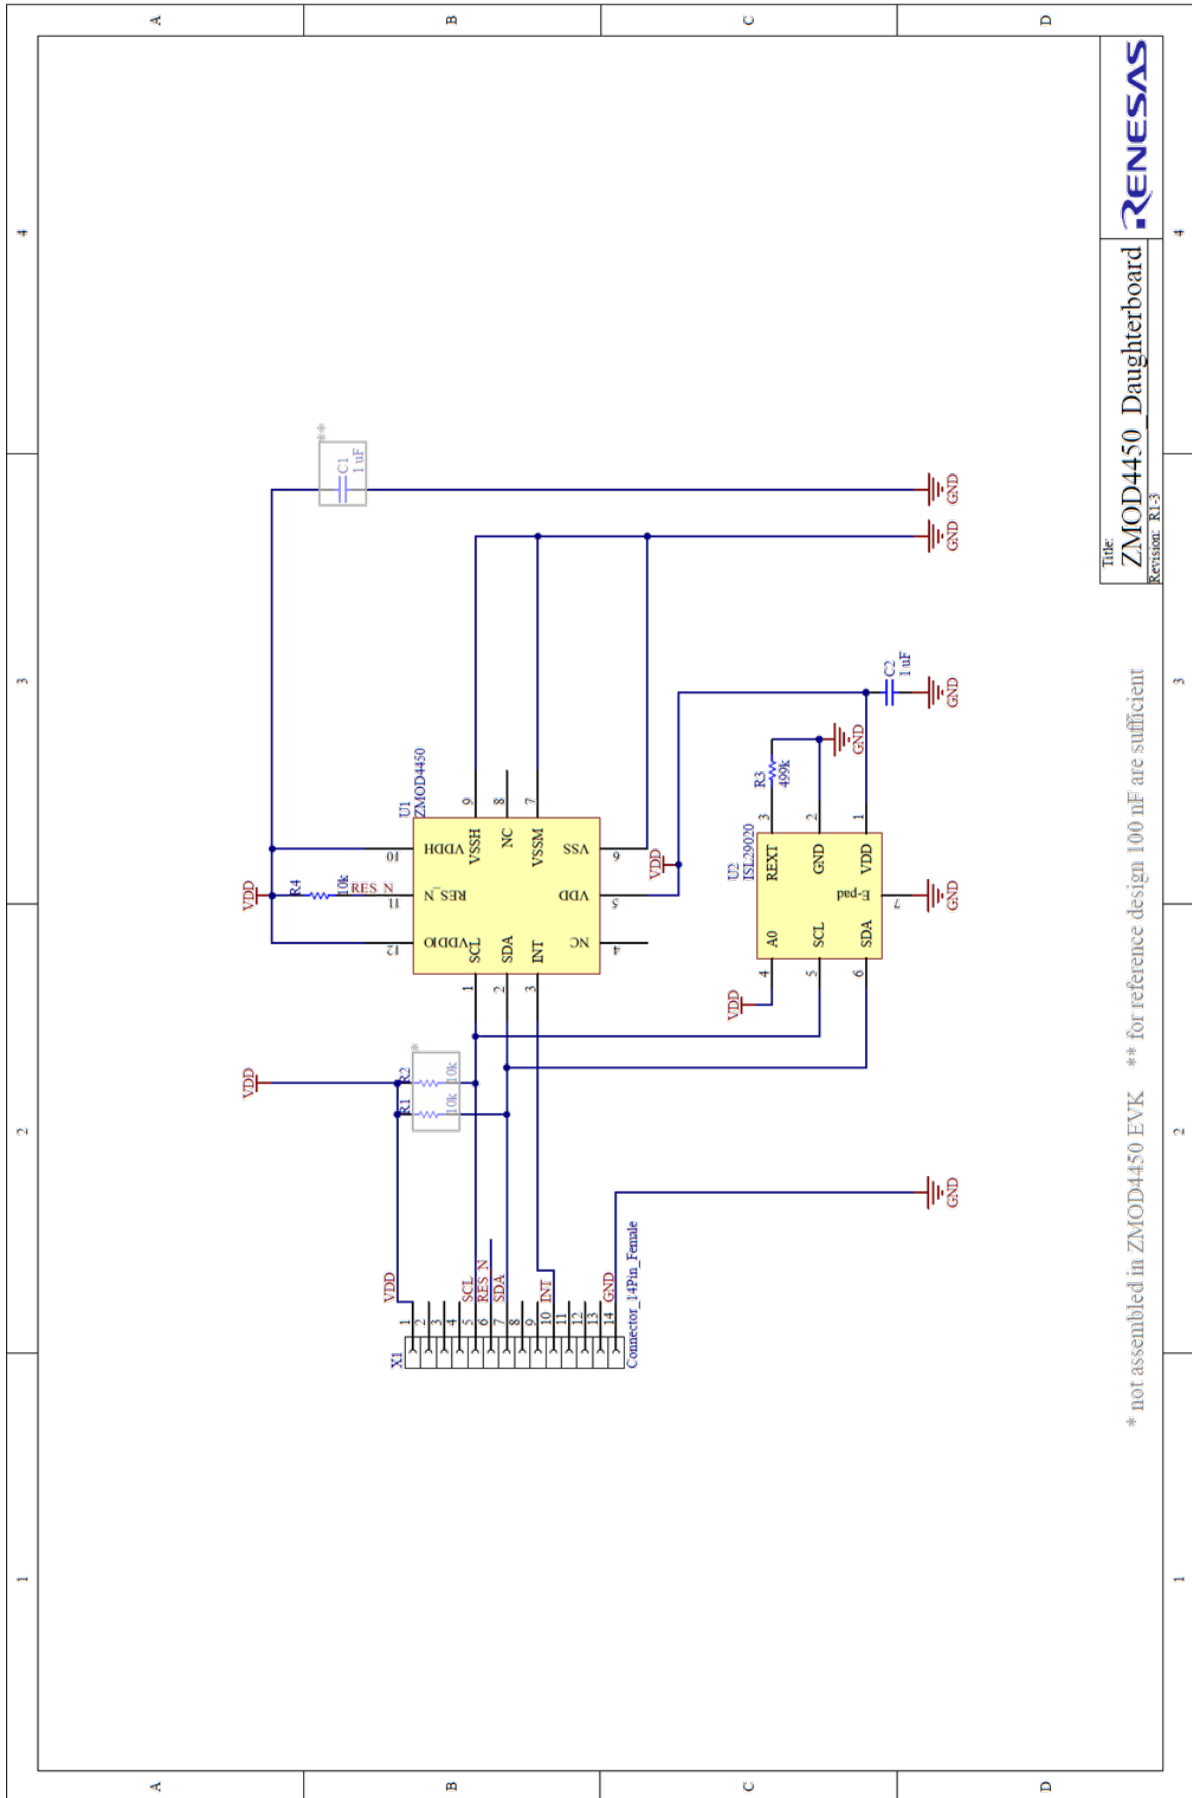

Title: ZMOD4450 Daughterboard  
Revision: R1.3

\* not assembled in ZMOD4450 EVK \*\* for reference design 100 nF are sufficient


Figure 10. Sensor Board Schematic for ZMOD4450

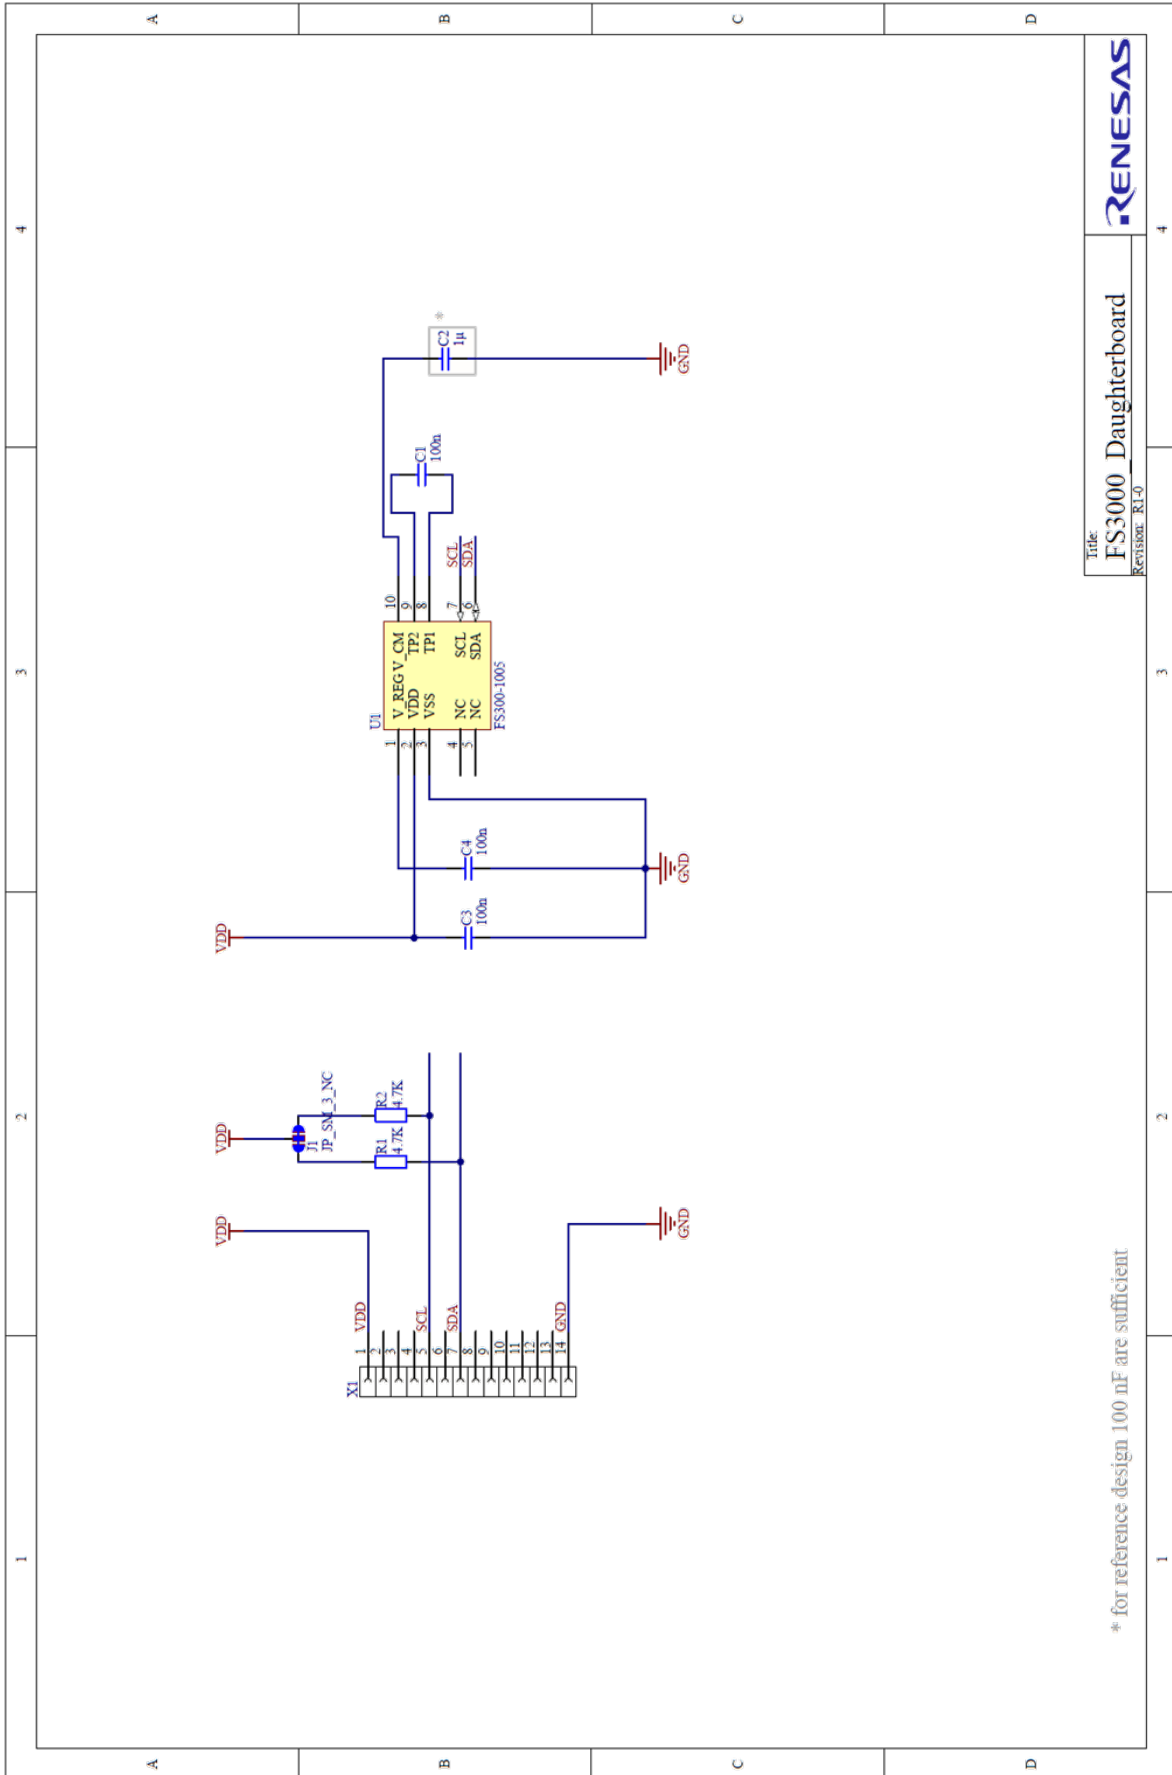

Title: FS3000 Daughterboard  
 Revision: R1.0

\* for reference design 100 nF are sufficient

Figure 11. Sensor Board Schematic for FS3000

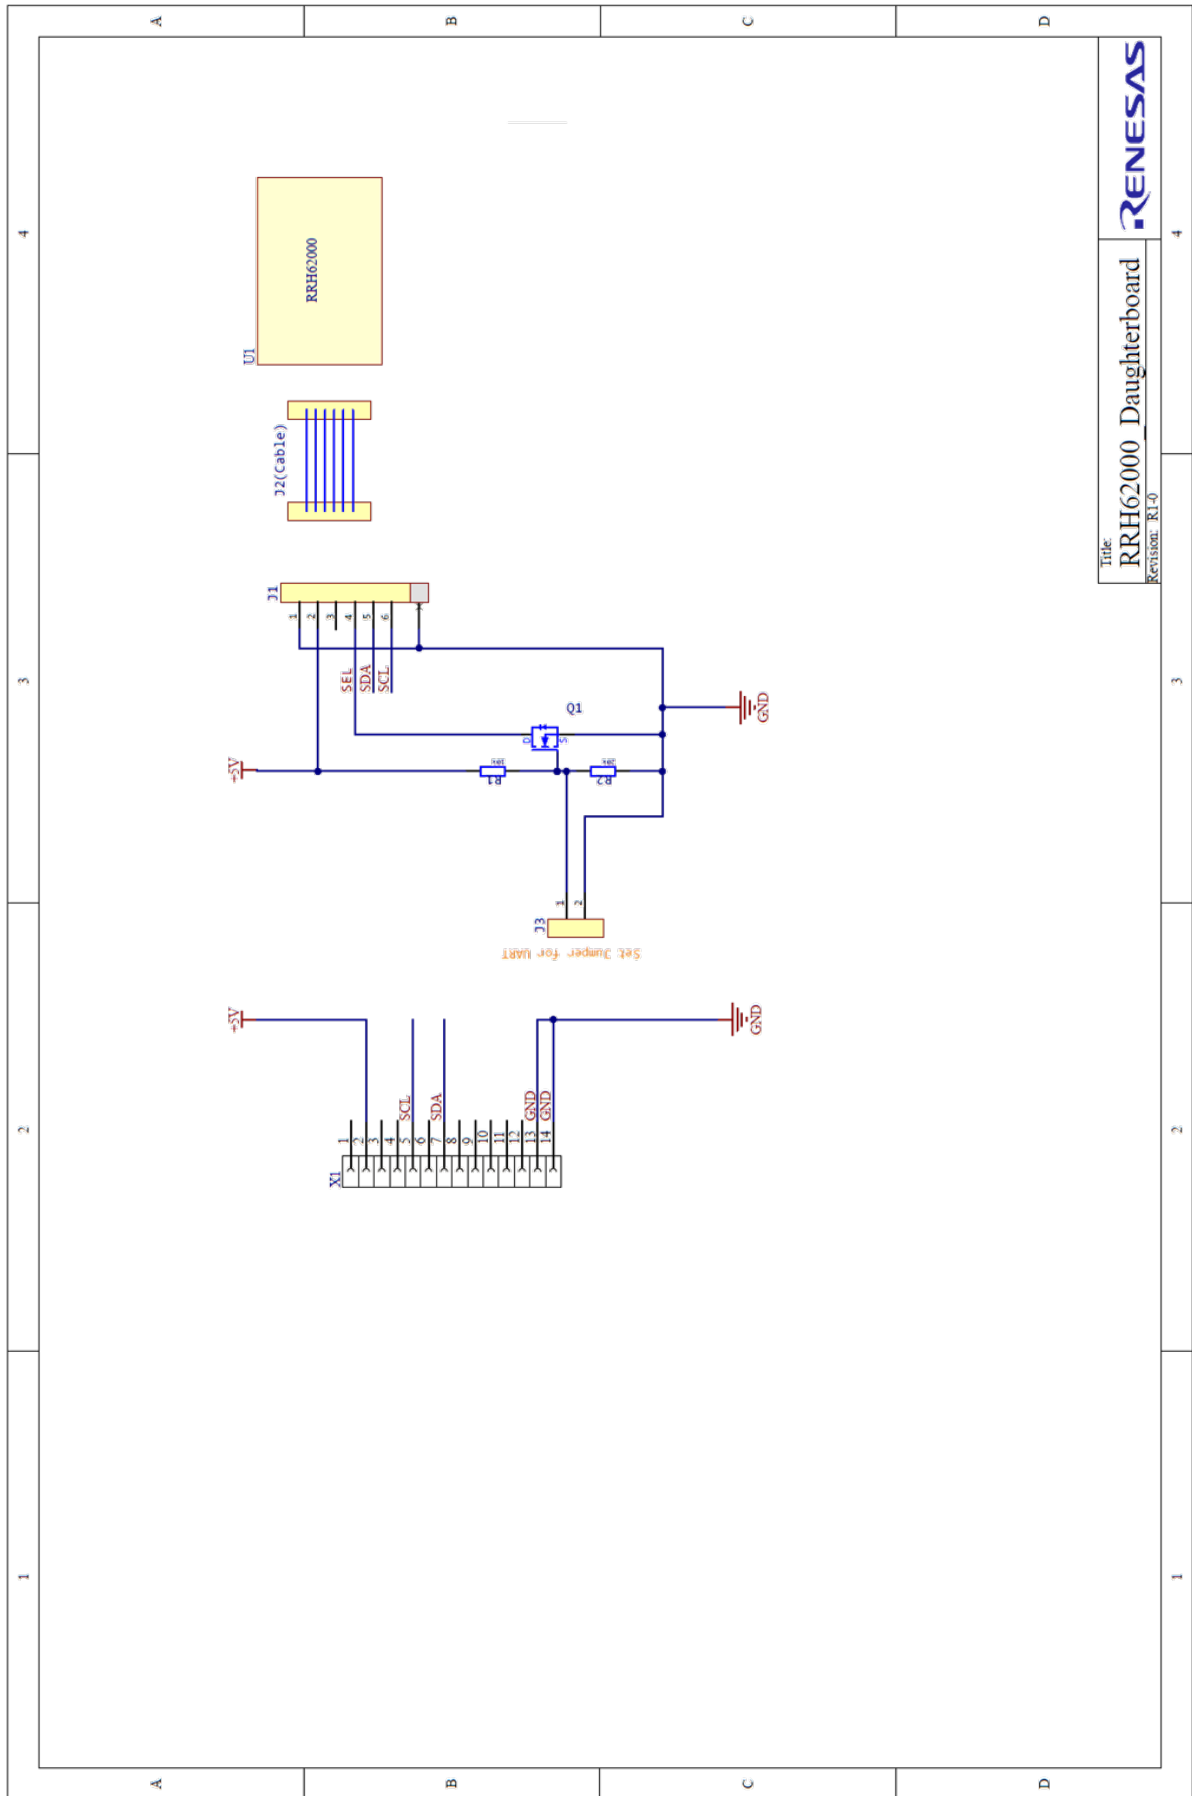

Title: RRH62000 Daughterboard  
Revision: R1.0



Figure 12. Sensor Board Schematic for RRH62000



Table 4. Pin Configuration on Connector X1

Pin Number	Pin Description
1	VDD
2	5V
3	N.C.
4	N.C.
5	SCL / TX
6	RES_N
7	SDA / RX
8	N.C.
9	N.C.
10	INT
11	N.C.
12	N.C.
13	GND
14	GND

## 4. Board Layout

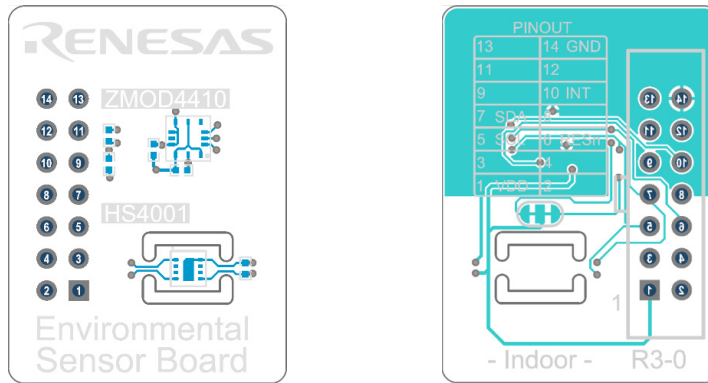


Figure 14. Sensor Board ZMOD4410 Layout with Pin Configuration

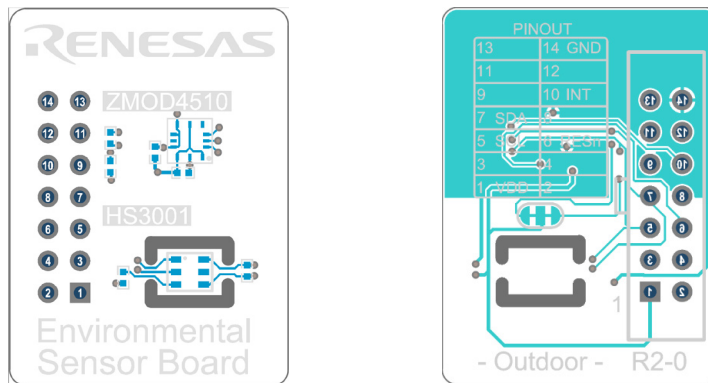


Figure 15. Sensor Board ZMOD4510 Layout with Pin Configuration

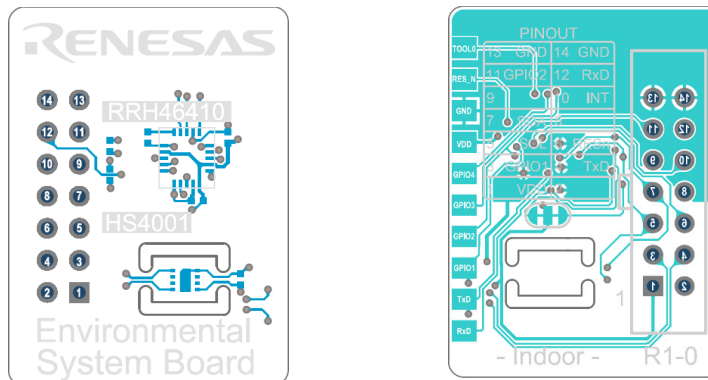


Figure 16. Sensor Board RRH46410 Layout with Pin Configuration and Additional Side Pads

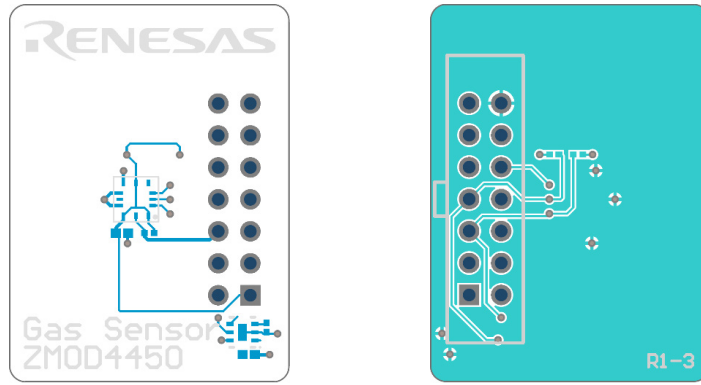


Figure 17. Sensor Board ZMOD4450 Layout with Pin Configuration

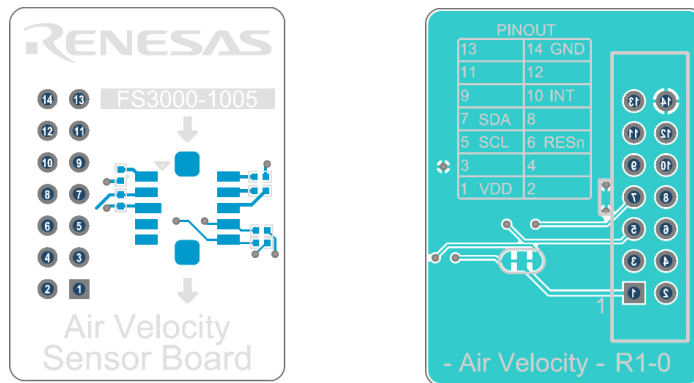


Figure 18. Sensor Board FS3000 Layout with Pin Configuration

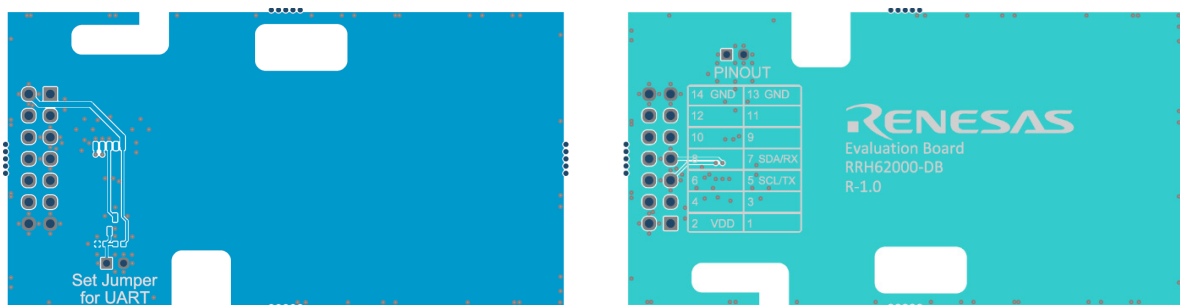


Figure 19. Sensor Board RRH62000 Layout with Pin Configuration

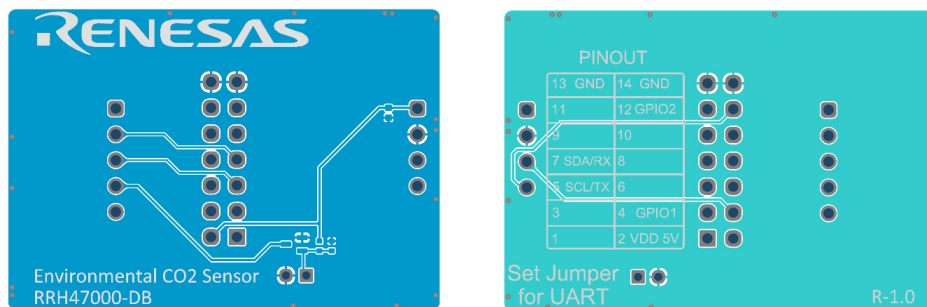


Figure 20. Sensor Board RRH47000 Layout with Pin Configuration



## 5. Ordering Information

Part Number	Description
ZMOD4410-EVK-HC or HS4000-EVK	Evaluation Kit including the ZMOD4410 Sensor Board, HS4001 Temperature/Humidity Sensor, ESCom Board (USB Interface), and USB-C Cable.
ZMOD4510-EVK-HC or HS3000-EVK	Evaluation Kit including the ZMOD4510 Sensor Board, HS3001 Temperature/Humidity Sensor, ESCom Board (USB Interface), and USB-C Cable.
RRH46410-EVK	Evaluation Kit including the RRH46410 Sensor Board, HS4001 Temperature/Humidity Sensor, ESCom Board (USB Interface), and USB-C Cable.
ZMOD4450-EVK-HC	Evaluation Kit including the ZMOD4450 Sensor Board, HiCom Board (USB Interface), and USB Cable.
FS3000-EVK	Evaluation Kit including the FS3000 Sensor Board, ESCom Board (USB Interface), and USB-C Cable.
RRH62000-EVK	Evaluation Kit including the RRH62000 Sensor Board, ESCom Board (USB Interface), and USB-C Cable.
RRH47000-EVK	Evaluation Kit including the RRH47000 Sensor Board, ESCom Board (USB Interface), and USB-C Cable.

## 6. Revision History

Revision	Date	Description
1.04	Nov 8, 2024	Added support for the RRH47000 sensor module.
1.03	Jul 30, 2024	Added support for the RRH62000 sensor module.
1.02	May 16, 2024	Added support for the ZMOD4450 RAQ sensor module. Completed other minor changes.
1.01	Mar 19, 2024	Added support for the FS3000 sensor module.
1.00	Dec 17, 2023	Initial release.

## IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES (“RENESAS”) PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01 Jan 2024)

### Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

### Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

### Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit [www.renesas.com/contact-us/](http://www.renesas.com/contact-us/).