


RENESAS Code

PLQP0100KD-A

HLFQFP Mount Pad Dimensions

Unit : mm

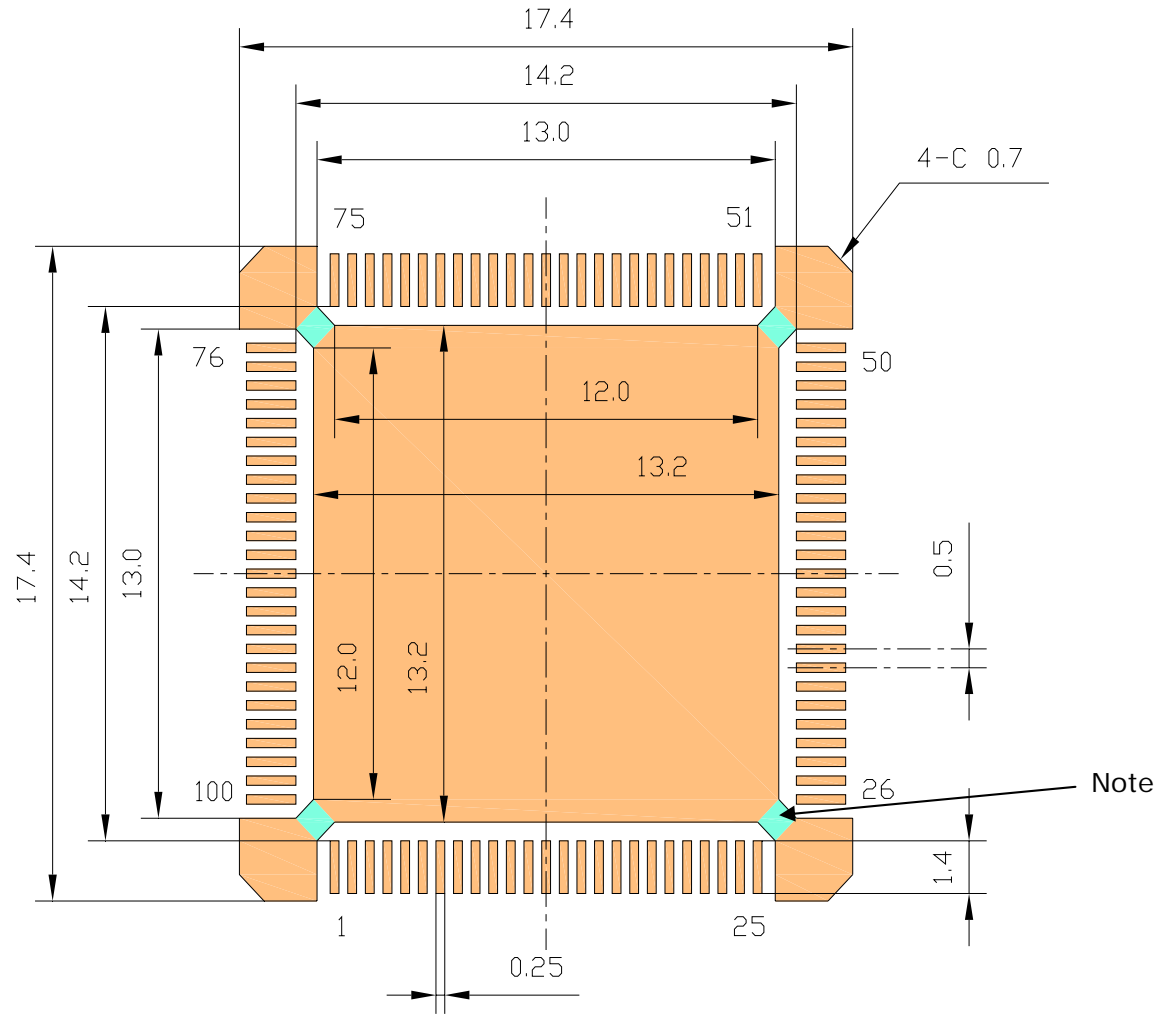

Note

To ensure the amount of solder for pad area corresponding to the corner of heat spreader, we recommend set the area of solder resist or a silkscreen on PCB as preventing of solder outflow at reflow.