

---

## ISL29011IROZ-EVALZ

Using the Intersil ALS Software (v 541) with Intersil Ambient and Infrared Light to Digital Converter with IR LED Driver ISL29011

---

AN1529  
Rev 0.00  
February 9, 2010

### Table of Contents

Evaluation Package .....	2
System Requirements.....	2
Hardware Setup.....	2
Software Installation.....	2
Software Setup.....	2
Multi-Function Sensor Evaluation Software Guide .....	3
Trouble Shooting .....	6

## Evaluation Package

- Demo Board
- Evaluation CD
- USB 2.0 Cable

## System Requirements

- Windows 98/NT/2000/XP/VISTA
- CD Drive
- Available USB Port

## Hardware Setup

1. Connect the USB 2.0 Cable to the PC first, and then to the Evaluation Board.

2. The Computer may ask about installing software for new found hardware; select "Yes, this time only."
3. On the following screen, it will ask about how to install hardware. Select the recommended option (Installing from CD) and follow the directions.
4. The USB is the only connector needed.

## Software Installation

1. Insert the Intersil CD into the CD Drive/player when asked to by the Hardware wizard.
2. Install the Intersil software.

## Software Setup

To open the program, go to the "Start" menu, Start -> Intersil -> Intersil\_ALS\_Comm -> Intersil\_ALS\_Comm. (see Figure 1).

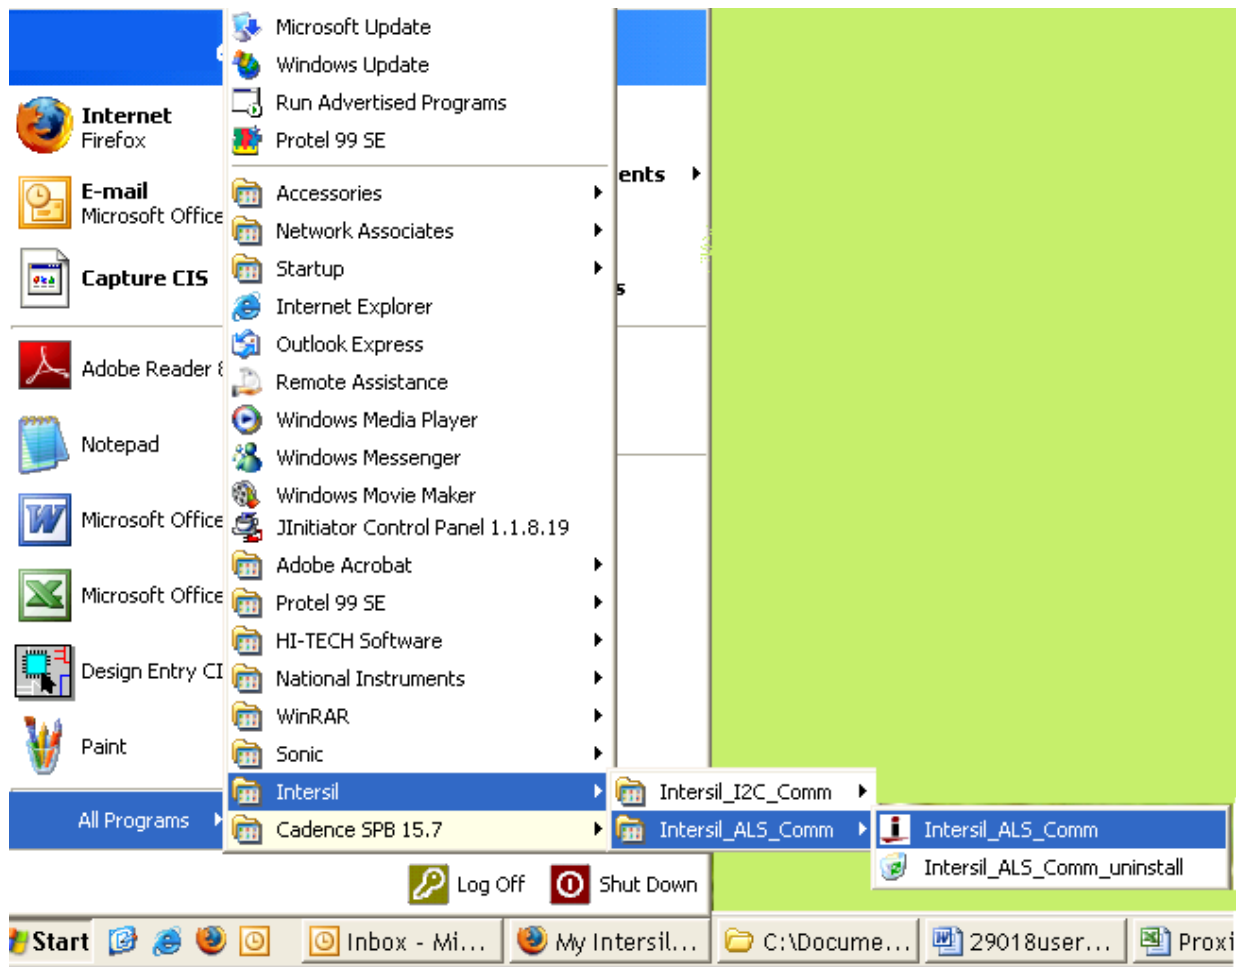


FIGURE 1.

Once you have double clicked the program, the following window will open (see Figure 2).

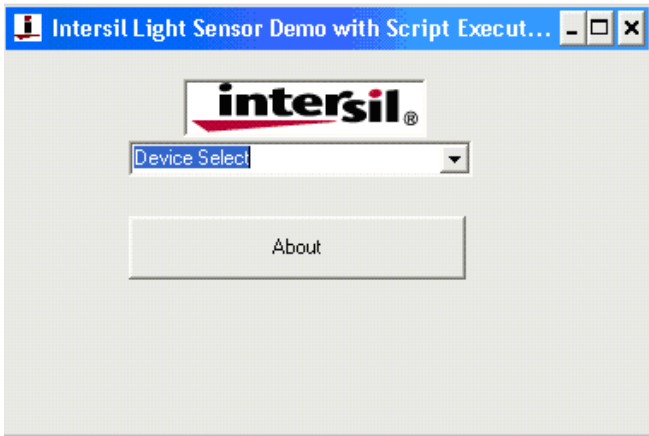


FIGURE 2.

Go to the "Device Select" tab and select which ever Device you have connected to your computer (see Figure 3) For this example, we will use the "ISL29011 Light Sensor."

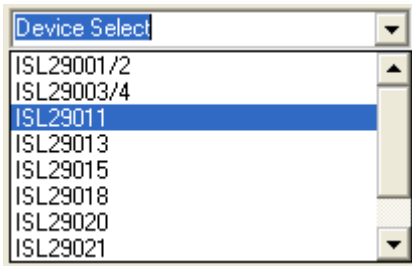


FIGURE 3.

One window will open; "ISL29011 Multi-Function Sensor Evaluation Software." This is the main window in which all demonstrations will be done.

**USB Communication** - Check to make sure this light is green; if it is not green, check your connection.

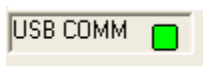


FIGURE 4.

**Testing Communication**- To test communication with the IC, click the button shown in Figure 5; if it shows "good", then the Hardware and Software are properly set up; if it says "fail", then check your connections. If the problem still persists then you may want to restart the software.



FIGURE 5.

Note: This is common for all devices

## Multi-Function Sensor Evaluation Software Guide

From the menu on the left, choose the specific "Mode" in which you want to operate the IC. A detailed explanation

is described in the data sheet ([FN6467](#)). Table 1 summarizes the different modes.

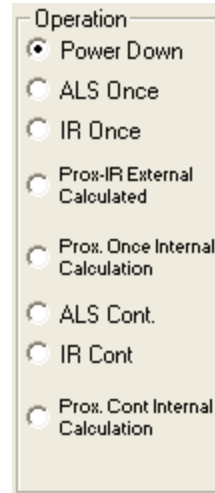


FIGURE 6.

TABLE 1.

MODE	EXPLANATION
Power-down	Turn off and keep data in registers.
ALS Once	Ambient Light Sense for one conversion then Power-down.
IR Once	Infrared Sense for one conversion then Power-down.
Prox. Once Internal Calc.	Proximity Infrared Sense for one conversion then Power-down; Flagging is triggered by Interrupt.
ALS Cont.	Ambient Light Sense continuously and continue to refresh registers.
IR Cont	Infrared Sense continuously and continue to refresh registers.
Prox. Cont Internal	Proximity Infrared Sense continuously and continue to refresh registers; Flagging is triggered by Interrupt.

**Integration Time**- this corresponds to the resolution of the internal ADC, the number of bits allocated to representing Count. Higher resolution (more bits) requires a large number of counts and will need longer acquisition (integration) time.

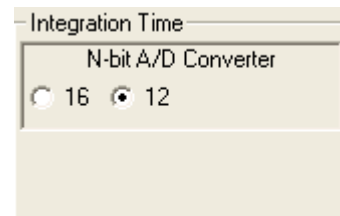


FIGURE 7.

**Sensitivity-Range Select-** allows you to choose the sensitivity of the sensor based on external conditions/object detection. For example, a really bright object would require a higher Range (i.e. 64000), versus a dark object, which will require a low Range (i.e. 1000). Higher range reduces photo detector sensitivity.

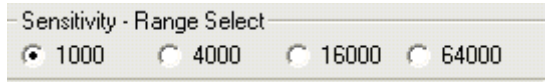


FIGURE 8.

**Source Current** - allows you to adjust the IR LED driving current. A greater current allows for the detection of objects at farther distances.

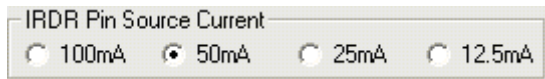


FIGURE 9.

**IR Modulation Frequency-** allows you to modulate the IR LED driving current. Increasing the frequency parameter allows for better noise immunity.

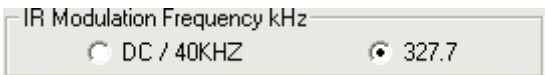


FIGURE 10.

This section allows you to set the interrupt trip-point, and acts as an alarm/monitoring function to determine whether the ADC count exceeds the upper limit.

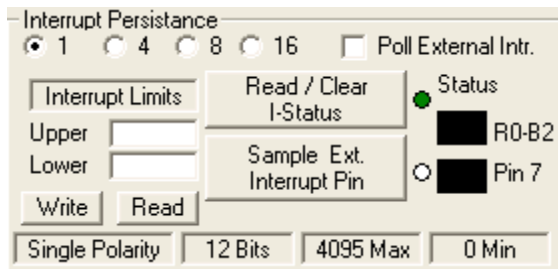


FIGURE 11.

The Interrupt function will work for both ALS and Prox modes.

To use:

1. Choose Interrupt Persistence value (we recommend 8)
2. Enter a decimal number for the Upper Limit. Enter a decimal number for the Lower Limit.
3. The Upper Limit must be greater than the Lower Limit. The values for the limits depend on the application, configuration of other options, and distance for which you choose to flag at.
4. Click on "Write" and then click on "Read" and verify that desired Limit values are correct (verify that values in entered for intended Limits are the same values in the field box after clicking on "Read"). If not, repeat steps 2-3.
5. Double click "Read/Clear I-Status" to clear status.
6. Now you may choose to manually poll the Interrupt pin (pin 7 on package), or for it to happen automatically. To manually do it, simply click on "Sample Ext. Interrupt Pin" when desired. To do it automatically, ensure "Poll External Intr." box is selected.
7. Interrupt is set up now. You may begin collecting data. Collecting data is within the Upper Limit and the Lower Limit; the black box means unflagged status. On the other hand, either collecting data is above the Upper Limit or the lower of the Lower Limit, then the black block will be red, which means a flag has been triggered.

TABLE 2.

Interrupt Persistence	Sets the number of times the upper limit need be exceeded or lower limit need be sub ceded- once the allotted number of times is achieved- then an alarm/interrupt will flag.
Interrupt Limits	Type the upper threshold for the interrupt in the top box (Max = 65535 for Int. Time = 16; Max = 4095 for Int. Time = 12) Type the lower threshold for the interrupt in the bottom box (Min = 0, for either Int. Time)
Write	Stores value to memory in Registers 4-7
Read	Read limit values stored in Registers 4-7
Read/Clear I-Status	Checks the 2 <sup>nd</sup> bit of Register 0 to determine Interrupt status, whether interrupt thresholds have been triggered or not. It then displays the results in the "Status" section. The R0-B2 box displays the status of the interrupt. To clear the interrupt status- click 2 times on "Read/Clear" button. - Green light means, button is on and value from bit 2 from R0 has been read - Square light displays status. If black, then interrupt is off/not triggered yet; if red then interrupt has been triggered
Sample Ext. Interrupt Pin	Samples the external Pin 7 on package of the IC Green light means, button is on and is displaying output of Interrupt pin (7 <sup>th</sup> pin) - Square light displays the status, black means trigger hasn't been triggered yet - Red means interrupt has just been triggered
Poll External Intr.	Allows for checking of External Interrupt Status while sampling data.

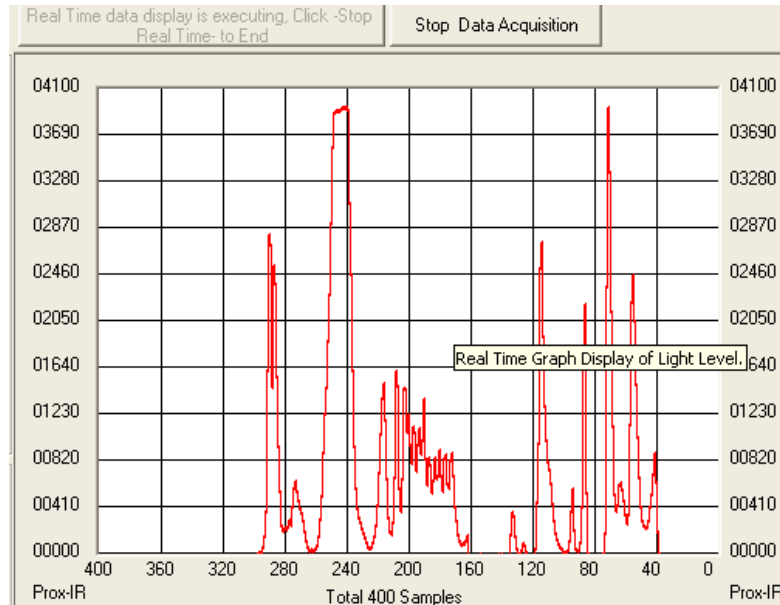


FIGURE 12.

**Collect Data Graphical Real Time Data** - Allows you to sample data (whether ALScont, IRcont, or Proxcont). Samples are now being taken and are being plotted, and appropriate values are displayed on the right in the corresponding box.

- **“Stop Data Acquisition”** To stop sampling of the data.

Here the scale can be adjusted to meet your sampling needs. **“Manual Re-Scale”** allows you to type in the Maximum and Minimum values for the scale (vertical axis) in the appropriate boxes. The **“Automatic Re-Scale”** button is useful if sampled data is out of range of the graph or you need to zoom-in on data. It will rescale the vertical axis to an appropriate field of view.

- The **Exit** button closes the entire program
- The value in the **“ADC Reading”** and/or **“Lux Reading”** fields are the appropriate outputs coming out of the sensor according to which Mode is engaged.
- **Max Count** – This is the maximum value that can be measured based on the resolution chosen (Integration Time). Max count increases with more Integration Time.

**“AD Maximum”**, **“AD Minimum”** displays max ADC reading out and min ADC reading out at certain lighting conditions. Those options help for setting upper and lower interrupt limits. **“Every 25 Rdgs”** means update display readings in Dec and Hex every 25 ADC Readings.

- **“Clear button”** will refresh AD Maximum, AD Minimum and Every 25 Rdgs readings for next condition of light source.

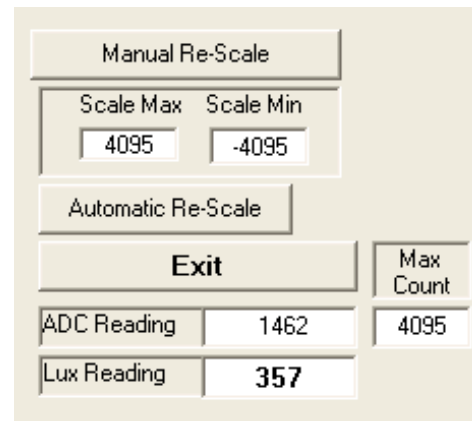


FIGURE 13.

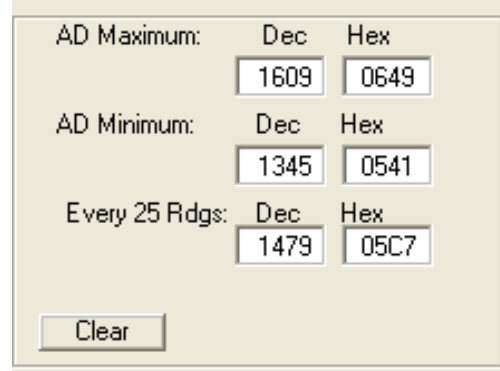


FIGURE 14.

## Trouble Shooting

If suffering from poor USB connection; the USB port may need to be changed.

If the Proximity sensor is unable to measure anything within a certain distance, the sensor is saturated and the Selectivity parameter needs to be increased.

If the program says connection fail and the sensor instantly stops working, then simply unplug it from the computer and plug it back in. If the problem still persists then unplug, close the program, plug it back in, and reopen the program.

If during a measurement, the program crashes or instantly the Evaluation board is no longer detected as being connected, then unplug and plug back in.

If too much noise is being picked up, then increase the Frequency parameter.

If you require better detection of far distances, then increasing the current parameter will help.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.  
Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.  
(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics America Inc.**  
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.  
Tel: +1-408-432-8888, Fax: +1-408-434-5351

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.  
Tel: +44-1628-651-700, Fax: +44-1628-651-804

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852-2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

**Renesas Electronics Korea Co., Ltd.**  
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338