

# RX140 Group

Fast Prototyping Board for RX140 Microcontroller Group  
FPB-RX140 v1 User's Manual

Renesas RX Family  
RX100 Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan

[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:

[www.renesas.com/contact/](http://www.renesas.com/contact/).

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.
2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.
3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.
4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.
5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.
6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).
7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.
8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a Microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system evaluation test for the given product.

## Renesas FPB-RX140 Disclaimer

By using this FPB-RX140, the User accepts the following terms, which are in addition to, and control in the event of disagreement, with Renesas' General Terms and Conditions available at [renesas.com/legal-notices](https://www.renesas.com/legal-notices).

The FPB-RX140 is not guaranteed to be error free, and the entire risk as to the results and performance of the FPB-RX140 is assumed by the User. The FPB-RX140 is provided by Renesas on an "as is" basis without warranty of any kind whether express or implied, including but not limited to the implied warranties of good workmanship, fitness for a particular purpose, title, merchantability, and non-infringement of intellectual property rights. Renesas expressly disclaims any implied warranty.

Renesas does not consider the FPB-RX140 to be a finished product and therefore the FPB-RX140 may not comply with some requirements applicable to finished products, including, but not limited to recycling, restricted substances and electromagnetic compatibility regulations. Refer to Certifications section, for information about certifications and compliance information for the FPB-RX140. It is the kit User's responsibility to make sure the kit meets any local requirements applicable to their region.

Renesas or its affiliates shall in no event be liable for any loss of profit, loss of data, loss of contract, loss of business, damage to reputation or goodwill, any economic loss, any reprogramming or recall costs (whether the foregoing losses are direct or indirect) nor shall Renesas or its affiliates be liable for any other direct or indirect special, incidental or consequential damages arising out of or in relation to the use of this FPB-RX140, even if Renesas or its affiliates have been advised of the possibility of such damages.

Renesas has used reasonable care in preparing the information included in this document, but Renesas does not warrant that such information is error free nor does Renesas guarantee an exact match for every application or parameter to part numbers designated by other vendors listed herein. The information provided in this document is intended solely to enable the use of Renesas products. No express or implied license to any intellectual property right is granted by this document or in connection with the sale of Renesas products. Renesas reserves the right to make changes to specifications and product descriptions at any time without notice. Renesas assumes no liability for any damages incurred by you resulting from errors in or omissions from the information included herein. Renesas cannot verify, and assumes no liability for, the accuracy of information available on another company's website.

## Precautions

This Fast Prototyping Board is only intended for use in a laboratory environment under ambient temperature and humidity conditions. A safe separation distance should be used between this and any sensitive equipment. Its use outside the laboratory, classroom, study area, or similar such area invalidates conformity with the protection requirements of the Electromagnetic Compatibility Directive and could lead to prosecution.

The product generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off or on, you are encouraged to try to correct the interference by one or more of the following measures:

- Ensure attached cables do not lie across the equipment.
- Reorient the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Power down the equipment when not in use.
- Consult the dealer or an experienced radio/TV technician for help.

Note: It is recommended that wherever possible shielded interface cables are used.

The product is potentially susceptible to certain EMC phenomena. To mitigate against them it is recommended that the following measures be undertaken:

- The user is advised that mobile phones should not be used within 10 m of the product when in use.
- The user is advised to take ESD precautions when handling the equipment.

The Evaluation Kit does not represent an ideal reference design for an end product and does not fulfil the regulatory standards for an end product.

## Proprietary Notice

All text, graphics, photographs, trademarks, logos, artwork, and computer code, collectively known as content, contained in this document is owned, controlled, or licensed by or to Renesas, and is protected by trade dress, copyright, patent and trademark laws, and other intellectual property rights and unfair competition laws. Except as expressly provided herein, no part of this document or content may be copied, reproduced, republished, posted, publicly displayed, encoded, translated, transmitted, or distributed in any other medium for publication or distribution or for any commercial enterprise, without prior written consent from Renesas.

"Pmod™" is the trademark of Digilent Inc. The Pmod Interface Specification is the property of Digilent Inc. For more information on the use of the Pmod trademark, please see our [Pmod License Agreement](#) page.

Arduino® is a registered trademark of Arduino SA.

Other brands and names mentioned in this document may be the trademarks or registered trademarks of their respective holders.

---

## Renesas RX Family

### FPB-RX140 v1 User's Manual

---

#### Contents

List of Abbreviations and Acronyms .....	4
1. Board Overview .....	5
1.1 Assumptions and Advisory Notes .....	6
2. Box Contents .....	7
3. Ordering Information .....	7
4. Hardware Architecture and Default Configuration .....	8
4.1 Board Architecture .....	8
4.2 Block Diagram .....	8
4.3 Component Placement Location and Dimension .....	9
4.4 Jumper Settings .....	11
4.4.1 Copper Jumpers .....	11
4.4.2 Traditional Pin Header Jumpers .....	11
4.4.3 Default Jumper Configuration .....	11
5. System Control and Ecosystem Access .....	14
5.1 Power .....	14
5.1.1 USB .....	14
5.1.2 Header Connector J8 .....	14
5.1.3 Power Supply Considerations .....	14
5.1.4 Power-up Behavior .....	14
5.2 Debug and Programming .....	15
5.2.1 E2 OB .....	15
5.2.2 Settings in e <sup>2</sup> studio and Renesas Flash Programmer .....	15
5.3 Ecosystem .....	17
5.3.1 Digilent Pmod™ Connectors .....	18
5.3.2 Arduino® Connector .....	22
5.4 Miscellaneous .....	24
5.4.1 LED .....	24
5.4.2 User and Reset Switches .....	25
6. MCU Native Pin Access .....	26
6.1 Breakout Pin Headers .....	26
6.2 MCU Current Measurement .....	26
7. Recommended Components .....	27

8. Certifications.....	28
8.1 EMC/EMI Standards.....	28
8.2 Material Selection, Waste, Recycling and Disposal Standards .....	29
8.3 Safety Standards .....	29
9. Design and Manufacturing Information .....	30
10. Website and Support .....	30
Revision History .....	31

## Figures

Figure 1. FPB-RX140 v1 Top Side .....	5
Figure 2. FPB-RX140 v1 Bottom Side.....	6
Figure 3. FPB-RX140 v1.....	7
Figure 4. FPB-RX140 v1 Block Diagram .....	8
Figure 5. Reference number for components on the FPB-RX140 v1 (top side) .....	9
Figure 6. Reference number for components on the FPB-RX140 v1 (bottom side) .....	9
Figure 7. Dimension of the FPB-RX140 v1 .....	10
Figure 8. Copper Jumpers .....	11
Figure 9. Power Supply .....	14
Figure 10. Pin header jumper J4 .....	15
Figure 11. e <sup>2</sup> Studio Setting.....	16
Figure 12. Renesas Flash Programmer Settings .....	16
Figure 13. Pmod 1 Connector .....	19
Figure 14. Pmod 1 Copper Jumpers (bottom side) .....	19
Figure 15. Pmod 2 Connector .....	21
Figure 16. Pmod 2 Copper Jumpers (bottom side) .....	21
Figure 17. Arduino Uno Connectors .....	23
Figure 18. Arduino Uno Copper Jumpers (bottom side).....	23
Figure 19. User LEDs (top side) and Copper Jumpers (bottom side) .....	24
Figure 20. Power LED and Debug LED.....	24
Figure 21. User LEDs Copper Jumpers (bottom side) .....	24
Figure 22. Reset (S2) and User Switch (S1) .....	25
Figure 23. User Switch S1 Copper Jumper (bottom side).....	25
Figure 24. Breakout Pin Headers J1 and J2.....	26
Figure 25. RX MCU Current Measurement Circuit.....	26
Figure 26. RX MCU Current Measurement Pin Header J6 and R1 .....	26

## Tables

Table 1. List of Abbreviations and Acronyms .....	4
Table 2. Board Architecture .....	8
Table 3. Default Jumper Settings .....	12

---

Table 4. Operating mode .....	15
Table 5. USB Debug Connector .....	15
Table 6. Pmod 1 Connector .....	18
Table 7. Pmod 2 Connector .....	20
Table 8. Arduino Uno Connections .....	22
Table 9. FPB-RX140 v1 LED Functions .....	24
Table 10. FPB-RX140 v1 Switches .....	25
Table 11. Recommended Components .....	27
Table 12. FPB-RX140 v1 Design Package Contents .....	30

## List of Abbreviations and Acronyms

Table 1. List of Abbreviations and Acronyms

Abbreviation	Full Form
BoM	Bill of Materials
CS	Chip Select
CTS	Clear to Send
EMC	Electro Magnetic Compatibility
EMI	Electro Magnetic Interference
EU	European Union
FPB	Fast Prototyping Board
GPIO	General Purpose Input Output
I <sup>2</sup> C (or IIC)	Inter-Integrated Circuit
IDE	Integrated Development Environment
I/F	Interface
INT	Interrupt
I/O	Input/Output
IRQ	Interrupt Request
LED	Light Emitting Diode
LFQFP	Lead Free Quad Flat Package
MCU	Micro Controller Unit
MISO	Master In Slave Out
MOSI	Master Out Slave In
NC	Not Connected
PWM	Pulse Width Modulation
RIIC	Renesas I <sup>2</sup> C
RSPI	Renesas SPI
RTC	Real Time Clock
RTS	Request to Send
RXD	Receive Data
S12ADE	12-bit Analog to Digital Converter
SCI	Serial Communications Interface
SCK	Serial Clock
SCL	Serial Clock Line
SDA	Serial Data Line
SMD	Surface Mount Device
SPI	Serial Peripheral Interface
TXD	Transmit Data
UART	Universal Asynchronous Receiver Transmitter
USB	Universal Serial Bus



## 1. Board Overview

The FPB-RX140 v1, a Fast Prototyping Board for the RX140 MCU, enables users to seamlessly evaluate the features of the RX140 MCU and develop embedded systems applications using the e<sup>2</sup> studio IDE. Users can use on-board features along with their choice of popular ecosystem add-on modules to bring their big ideas to life.

The key features of the FPB-RX140 v1 are categorized in two groups (consistent with the architecture of the board) as follows:

### MCU Native Pin Access

- R5F51406BGFN \*1 MCU (referred to as RX MCU)
  - Max 48 MHz, 32-bit RX CPU (RXv2)
  - 256 KB Code Flash, 8 KB Data Flash, 64 KB RAM
  - 80-pin, LQFP package
- Native pin access through 2 x 40-pin male headers (not fitted)
- RX MCU current measurement point for precision current consumption measurement
- RX MCU on-chip oscillators as main clock
- Providing 32.768 kHz crystal oscillator as sub clock

### System Control and Ecosystem Access

- Two 5 V input sources
  - USB
  - External power supply (using 2-pin header [not fitted])
- On-board debugger / programmer (E2 emulator On Board (referred as E2OB, FINE Interface))
- User LEDs and switches
  - Two User LEDs (green)
  - Power LED (green) indicating availability of regulated power
  - Debug LED (yellow) indicating the debug connection
  - One User switch
  - One Reset switch
- Two popular ecosystem expansions
  - Two Digilent Pmod™ (Type-2A [expanded SPI], Type-3A [expanded UART] and Type-6A [expanded I<sup>2</sup>C]) connectors
  - Arduino® (Uno R3) connector

\*1: R5F51406BGFN has a built in encryption module.

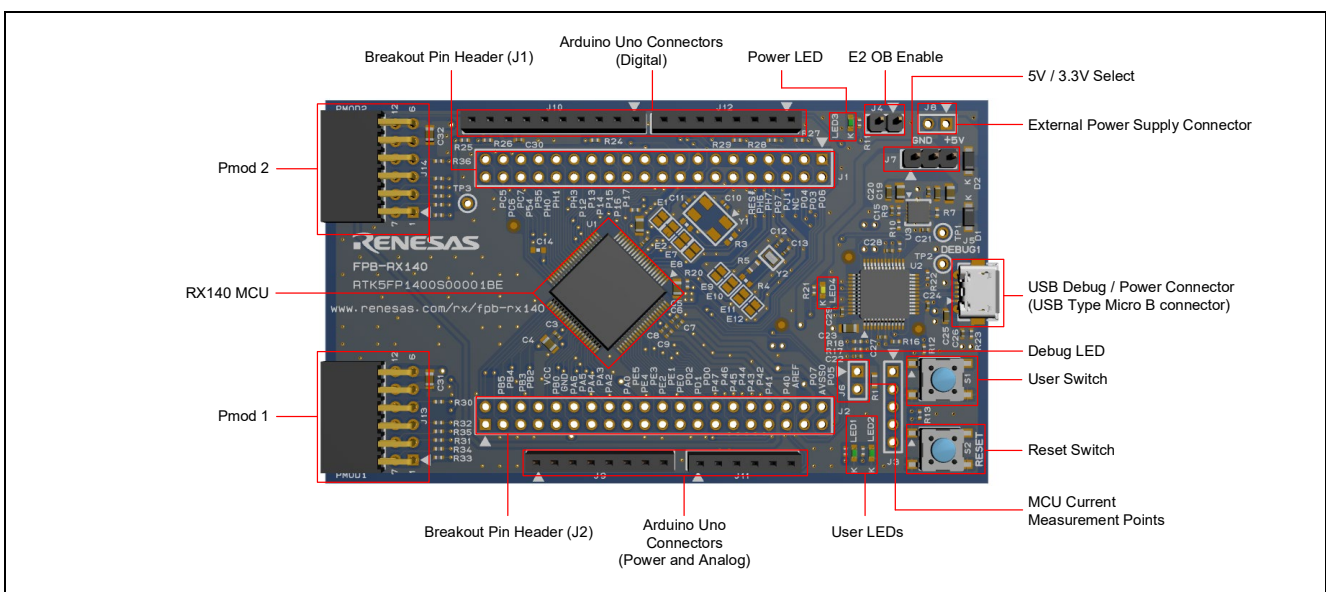


Figure 1. FPB-RX140 v1 Top Side

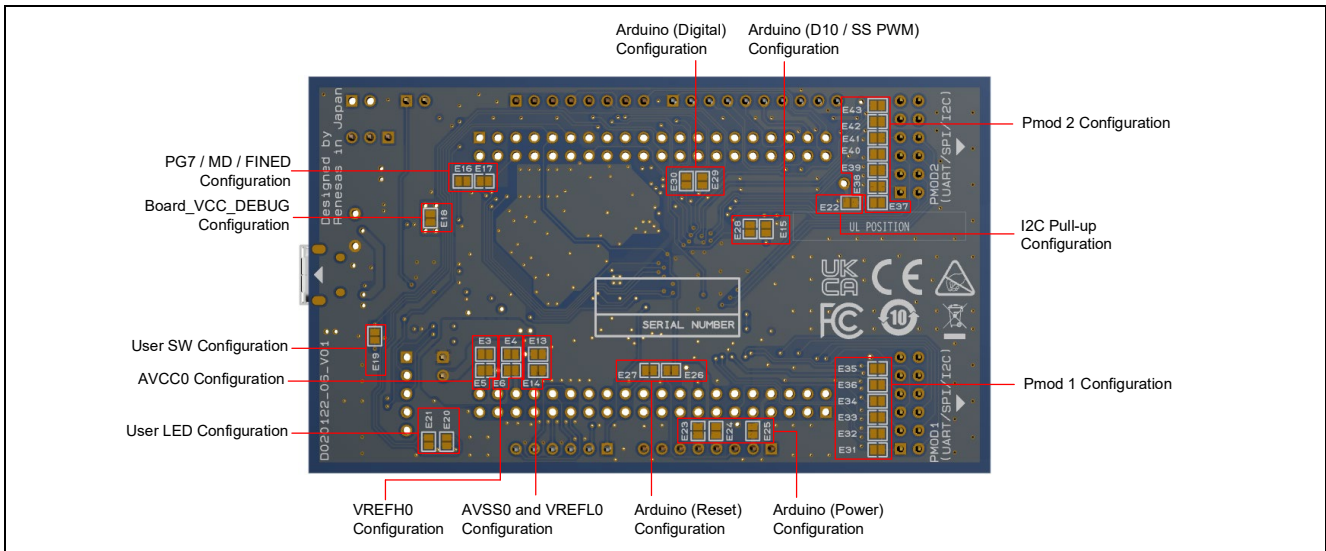


Figure 2. FPB-RX140 v1 Bottom Side

### 1.1 Assumptions and Advisory Notes

1. It is assumed that the user has a basic understanding of microcontrollers and embedded systems hardware.
2. An Integrated Development Environment (IDE) such as e<sup>2</sup> studio is required to develop embedded applications on FPB-RX140 v1.

## 2. Box Contents

The following components are included in the box:

1. FPB-RX140
2. Printed Quick Start Guide

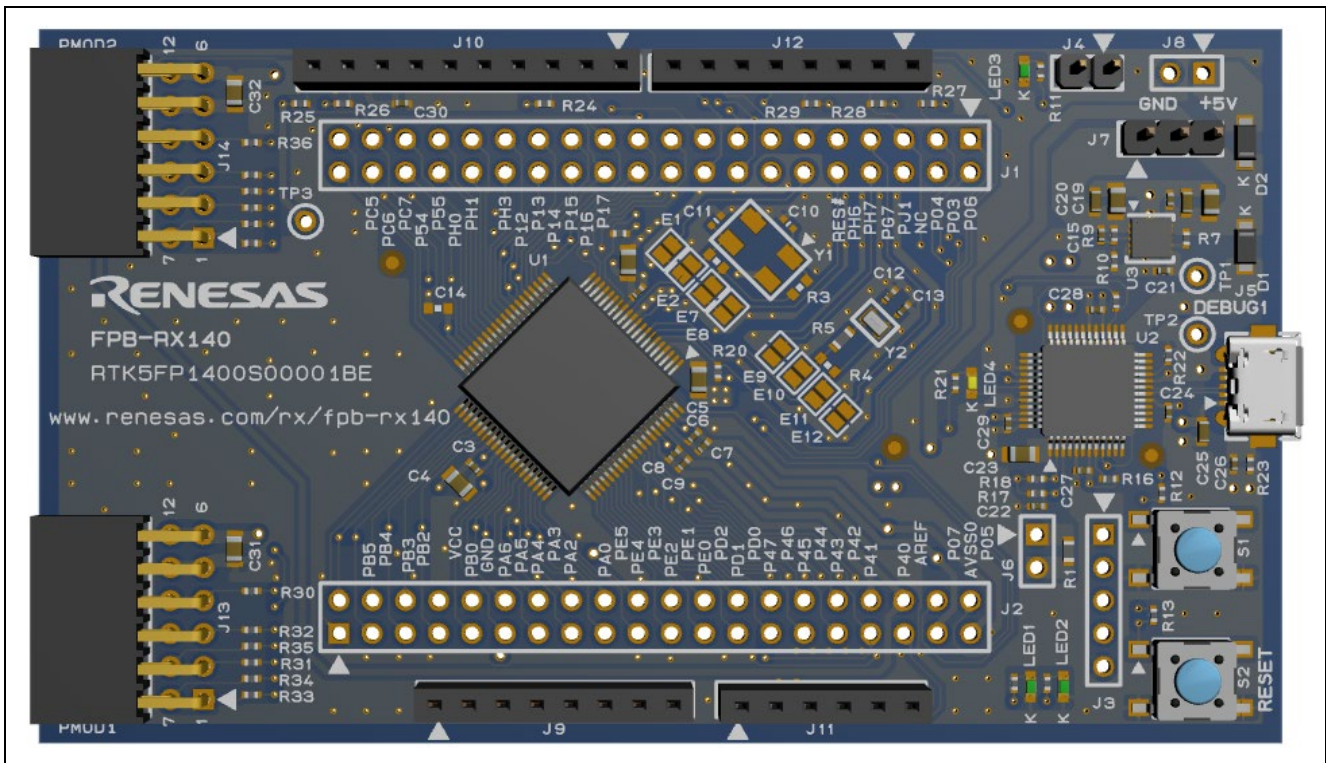


Figure 3. FPB-RX140 v1

## 3. Ordering Information

- FPB-RX140 v1 orderable part number: RTK5FP1400S00001BE

Note: The underlined character in the orderable part number represents the kit version.

## 4. Hardware Architecture and Default Configuration

### 4.1 Board Architecture

The FPB-RX140 v1 is designed with an architecture similar to other boards in the FPB series. Alongside the RX MCU there is an on-board programmer / debugger, pin headers for access to all the pins on the RX MCU, a power supply regulator, some LEDs and switches, and several ecosystem I/O connectors (Pmod and Arduino).

Table 2. Board Architecture

Category	Features	Function present on all similar boards	Functionality is:
MCU Native Pin Access	RX MCU, breakout pin headers for all RX MCU I/O and power, 2-pin header for RX MCU current measurement (not fitted)	Yes	MCU dependent
System Control and Ecosystem Access	Power, debugger, user LEDs and switch, reset switch, ecosystem connectors, boot configuration	Yes	Same or similar across other FPB boards

### 4.2 Block Diagram

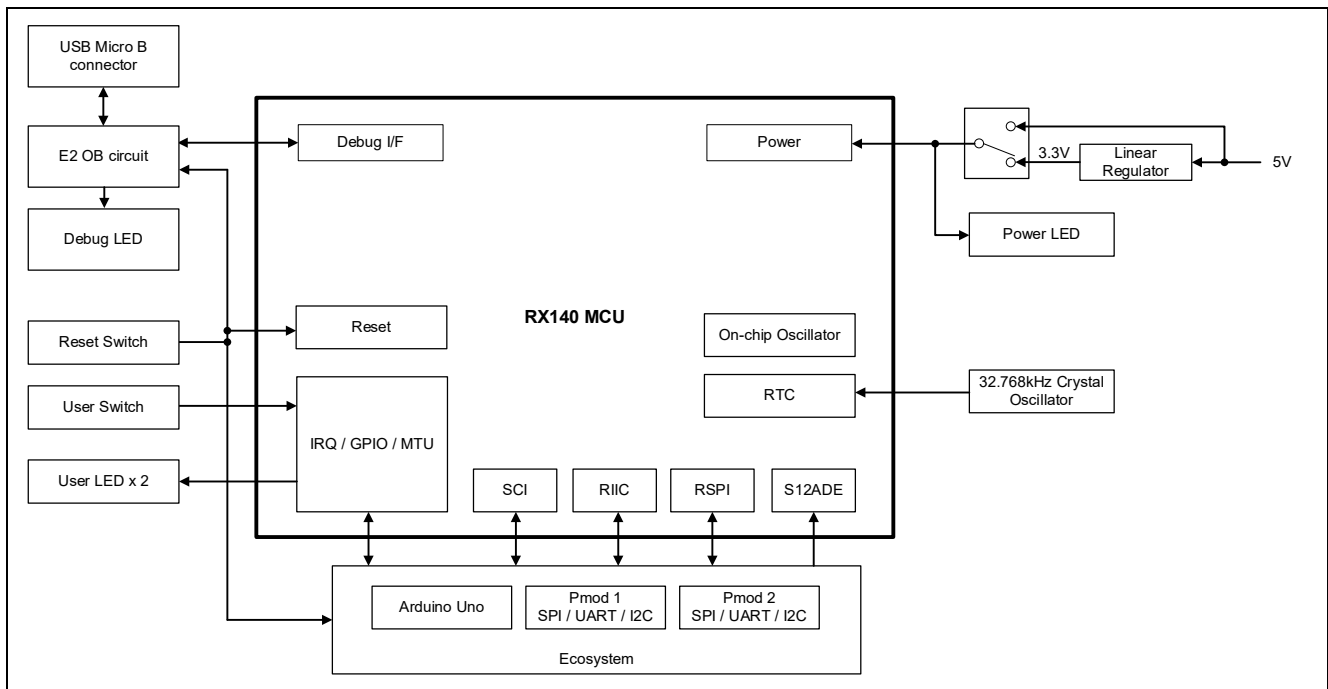


Figure 4. FPB-RX140 v1 Block Diagram

### 4.3 Component Placement Location and Dimension

Reference number for components on the FPB-RX140 v1 is shown below.

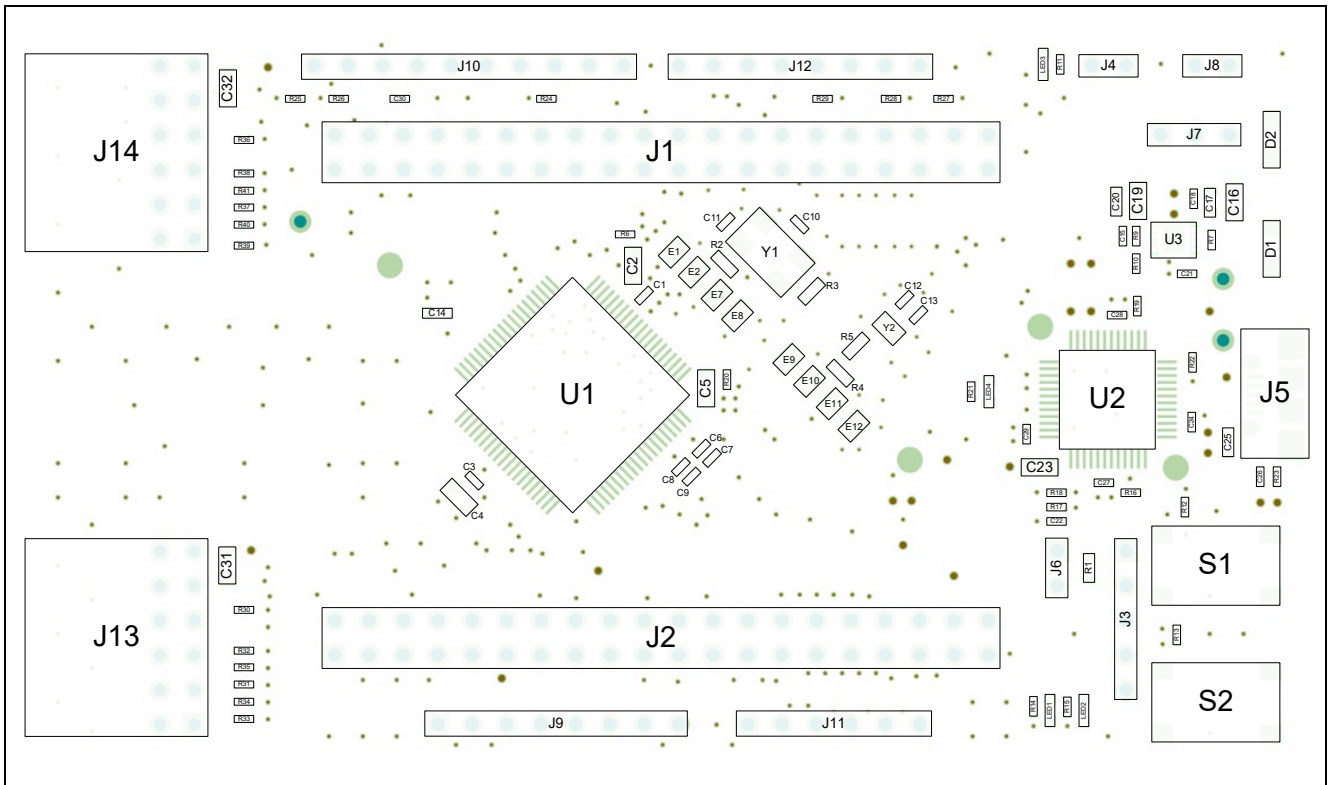


Figure 5. Reference number for components on the FPB-RX140 v1 (top side)

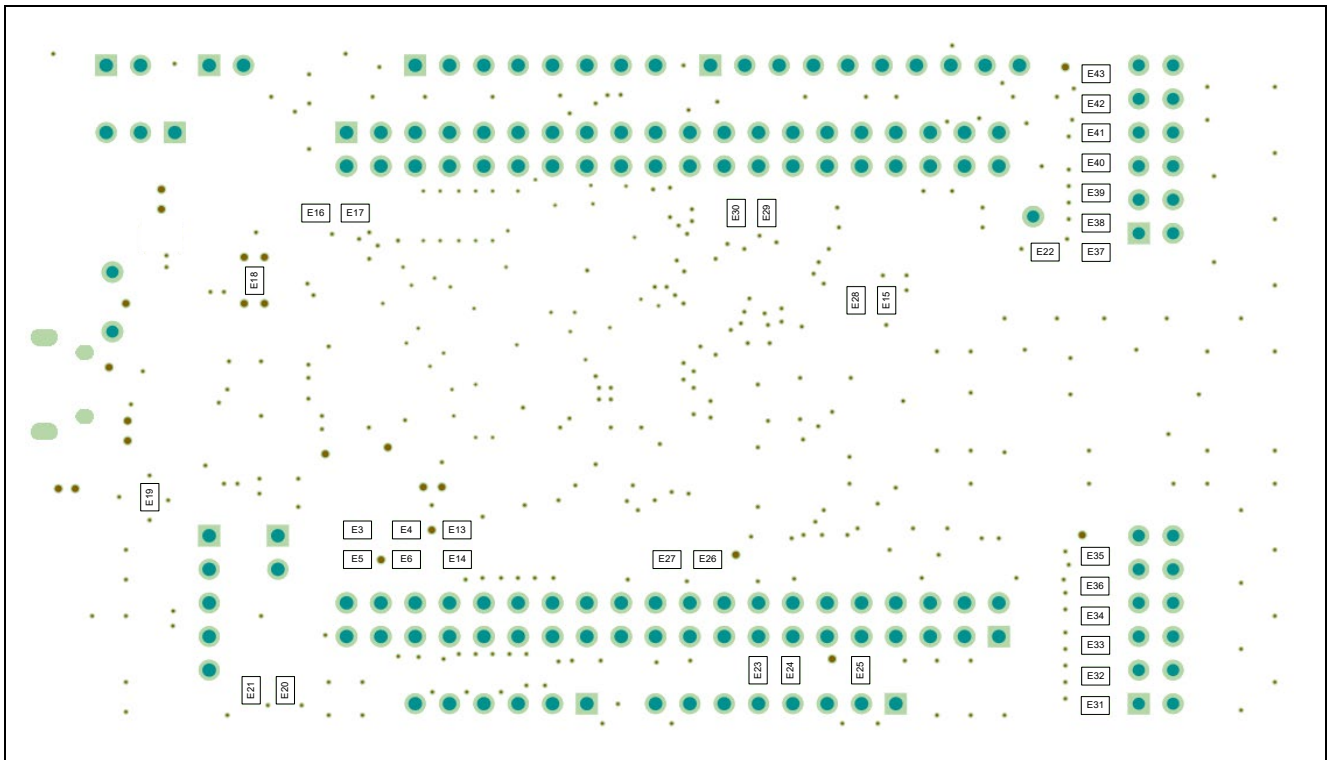


Figure 6. Reference number for components on the FPB-RX140 v1 (bottom side)



Dimension of the FPB-RX140 v1 is shown below.

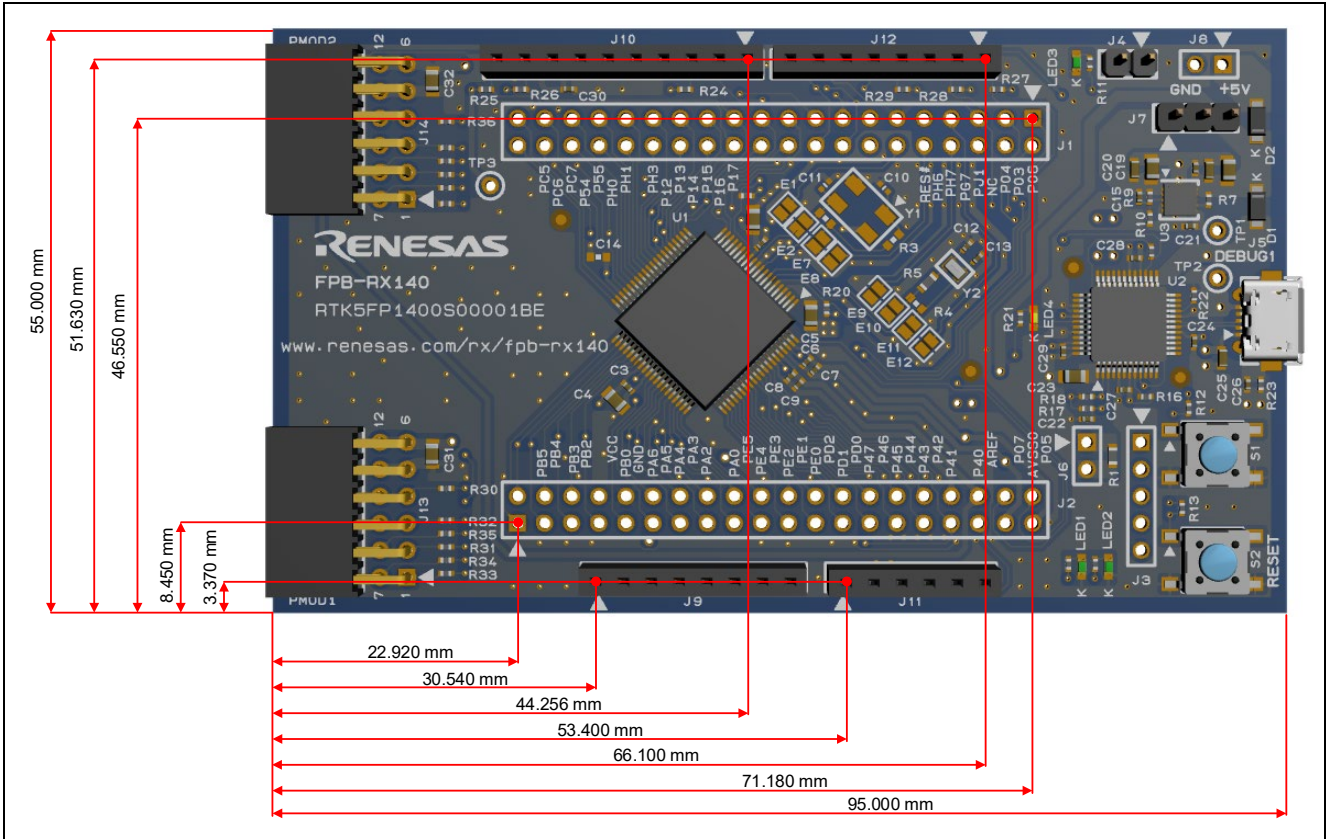


Figure 7. Dimension of the FPB-RX140 v1

## 4.4 Jumper Settings

Two types of jumpers are provided on the FPB-RX140 v1.

1. Copper jumpers (trace-cut type and solder-bridge type)
2. Traditional pin header jumpers

The following sections describe each type and their default configuration.

### 4.4.1 Copper Jumpers

Copper jumpers are of two types, designated **trace-cut** and **solder-bridge**.

A **trace-cut jumper** is provided with a narrow copper trace connecting its pads. The silk screen overlay printing around a trace-cut jumper is a solid box. To isolate the pads, cut the trace between pads adjacent to each pad, then remove the connecting copper foil either mechanically or with the assistance of heat. Once the etched copper trace is removed, the trace-cut jumper is turned into a solder-bridge jumper for any later changes.

A **solder-bridge** jumper is provided with two isolated pads that may be joined together by one of three methods:

- Solder may be applied to both pads to develop a bulge on each and the bulges joined by touching a soldering iron across the two pads.
- A small wire may be placed across the two pads and soldered in place.
- A 0Ω SMD resistor may be placed across the two pads to short the pads together by soldering.

For any copper jumper, the connection is considered **closed** if there is an electrical connection between the pads (default for trace-cut jumpers.) The connection is considered **open** if there is no electrical connection between the pads (default for the solder-bridge jumpers).

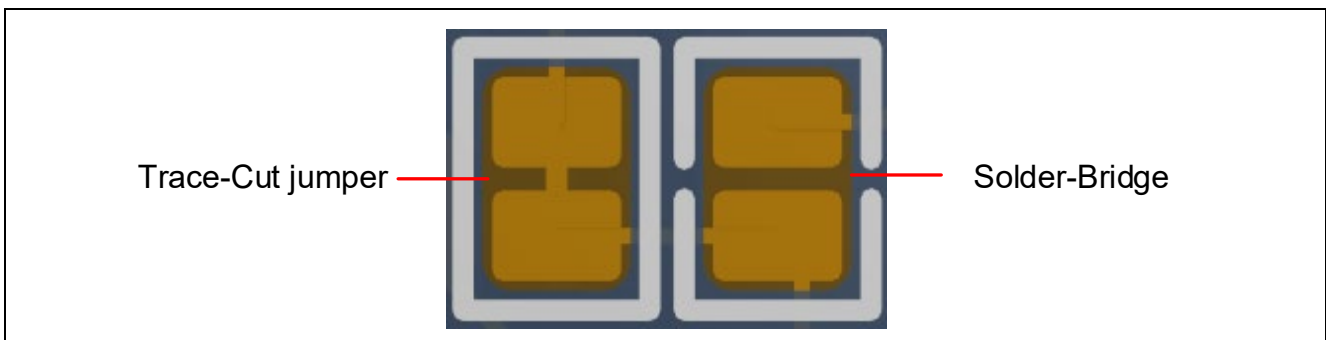


Figure 8. Copper Jumpers

### 4.4.2 Traditional Pin Header Jumpers

These jumpers are traditional small pitch jumpers that require an external shunt to open/close them. The traditional pin header jumpers on the FPB-RX140 v1 are 0.1" (2.54 mm) pitch headers and use compatible 2.54 mm shunt jumpers.

### 4.4.3 Default Jumper Configuration

The following table describes the default settings for each jumper on the FPB-RX140 v1. This includes copper jumpers (reference number Ex) and traditional pin header jumpers (reference number Jx). This also includes some 0Ω resistors (reference number Rx) because the resistors are used as jumper function.

Function for copper jumper Ex in the table describe function at Closed. The circuit group for each jumper is the reference number found in the board schematic (available in the Design Package). Functional details for many of the listed jumpers may be found in sections associated with each functional area of the kits.

Table 3. Default Jumper Settings

Location	Circuit Group	Default (Open / Closed) (Fitted / Not fitted)	Function
J4	E2OB	Closed	At open, E2 OB is enabled (Debug on-board mode)
			At closed, E2 OB is held in reset (Standalone operation mode)
			Refer to section <a href="#">5.2</a>
J7	Power Supply	Jumper on pins 1-2	Connect Board_VCC to 3.3 V
E1	MCU	Closed	At closed, connect P36 (EXTAL) to breakout pin header J1
E2	MCU	Open	At closed, connect P36 (EXTAL) to crystal oscillator Y1
E3	MCU	Closed	At closed, connect AVCC0 to Board_VCC
E4	MCU	Closed	At closed, connect PJ6 (VREFH0) to Board_VCC
E5	MCU	Open	At closed, connect AVCC0 to UC_VCC
E6	MCU	Open	At closed, connect PJ6 (VREFH0) to UC_VCC
E7	MCU	Open	At closed, connect P37 (XTAL) to crystal oscillator Y1
E8	MCU	Closed	At closed, connect P37 (XTAL) to breakout pin header J1
E9	MCU	Open	At closed, connect PH6 (XCOUT) to breakout pin header J1
E10	MCU	Closed	At closed, connect PH6 (XCOUT) to crystal oscillator Y2
E11	MCU	Closed	At closed, connect PH7 (XCIN) to crystal oscillator Y2
E12	MCU	Open	At closed, connect PH7 (XCIN) to breakout pin header J1
E13	MCU	Closed	At closed, connect AVSS0 to GND
E14	MCU	Closed	At closed, connect PJ7 (VREFL0) to GND
E15	MCU	Closed	At closed, connect PC4 (TSCAP / MTIOC0A / SSLA) to breakout pin J1 and Arduino Uno (D10 / SS / PWM)
E16	MCU	Closed	At closed, connect PG7 (MD / FINED) to E2 OB
E17	MCU	Open	At closed, connect PG7 (MD / FINED) to breakout pin J1
E18	Power Supply	Closed	At closed, connect Board_VCC to Board_VCC_DEBUG (Do not open this copper jumper)
E19	User LEDs & Switches	Closed	At closed, connect P30 (IRQ0) to User switch S1
E20	User LEDs & Switches	Closed	At closed, connect P20 (MTIOC1A) to LED1
E21	User LEDs & Switches	Closed	At closed, connect P32 (MTIOC0C) to LED2



Location	Circuit Group	Default (Open / Closed) (Fitted / Not fitted)	Function
E22	Arduino Uno	Closed	At closed, connect P16 (SCL0) and P17 (SDA0) to Board_VCC (pull-up)
E23	Arduino Uno	Open	At closed, connect 5.0 V to Arduino Uno (5V)
E24	Arduino Uno	Closed	At closed, connect 3.3 V to Arduino Uno (3.3V)
E25	Arduino Uno	Closed	At closed, connect Board_VCC to Arduino Uno (IOREF)
E26	Arduino Uno	Closed	At closed, connect RES# to Arduino Uno (RESET)
E27	Arduino Uno	Open	At closed, connect PD2 to Arduino Uno (RESET)
E28	Arduino Uno	Open	At closed, connect P34 (MTIOC0A) to Arduino Uno (D10 / SS / PWM)
E29	Arduino Uno	Closed	At closed, connect P20 (MTIOC1A) to Arduino Uno (D5 / PWM)
E30	Arduino Uno	Closed	At closed, connect P30 (IRQ0) to Arduino Uno (D2 / INT)
E31	Pmod 1	Open	At closed, connect PA6 (CTS5#) to Pmod 1 (CTS / CS / INT)
E32	Pmod 1	Closed	At closed, connect PE5 (IRQ5) to Pmod 1 (CTS / CS / INT)
E33	Pmod 1	Open	At closed, connect PA0 to Pmod 1 (TXD / MOSI)
E34	Pmod 1	Closed	At closed, connect PA4 (TXD5 / SMOSI5 / SSDA5) to Pmod 1 (TXD / MOSI)
E35	Pmod 1	Open	At closed, connect PA4 (TXD5 / SMOSI5 / SSDA5) to Pmod 1 (RTS / SCK / SDA)
E36	Pmod 1	Closed	At closed, connect PA1 (SCK5) to Pmod 1 (RTS / SCK / SDA)
E37	Pmod 2	Closed	At closed, connect P14 (CTS1#) to Pmod 2 (CTS / CS / INT)
E38	Pmod 2	Open	At closed, connect P12 (IRQ2) to Pmod 2 (CTS / CS / INT)
E39	Pmod 2	Open	At closed, connect PA2 to Pmod 2 (TXD / MOSI)
E40	Pmod 2	Closed	At closed, connect P26 (TXD1 / SMOSI1 / SSDA1) to Pmod 2 (TXD / MOSI)
E41	Pmod 2	Open	At closed, connect P26 (TXD1 / SMOSI1 / SSDA1) to Pmod 2 (RTS / SCK / SDA)
E42	Pmod 2	Open	At closed, connect P27 (SCK1) to Pmod 2 (RTS / SCK / SDA)
E43	Pmod 2	Closed	At closed, connect P31 (RTS1#) to Pmod 2 (RTS / SCK / SDA)
R1	MCU CURRENT MEASUREME NT	Fitted  (Refer to section <a href="#">6.2</a> in detail)	At fitted, connect Board_VCC to UC_VCC
			At not fitted, the RX MCU current can be measured over this jumper

## 5. System Control and Ecosystem Access

The FPB-RX140 v1 provides a power supply regulator, an on-board debugger, simple I/O (switches and LEDs), and popular I/O ecosystem connectors. These are all described in detail below.

### 5.1 Power

The FPB-RX140 v1 is designed for 5 V operation. An on-board Linear Regulator is used to convert the 5 V supply to a 3.3 V supply. The 3.3 V supply is used to power the RX MCU and other peripheral features by default.

The 3.3 V supply is used to power the RX MCU and other peripheral features by shorting pin 1 and 2 of the pin header jumper J7. The 5 V supply is used to power the RX MCU and other peripheral features by shorting pin 2 and 3 of the pin header jumper J7.

RX MCU specifies power-on VCC rising gradient. When supplying the 5 V to the RX MCU, the power-on VCC rising gradient depends on capability of the power supply that supplies 5 V to the FPB-RX140 v1 because input 5 V to the FPB-RX140 v1 is supplied to the RX MCU through the reverse protection diode.

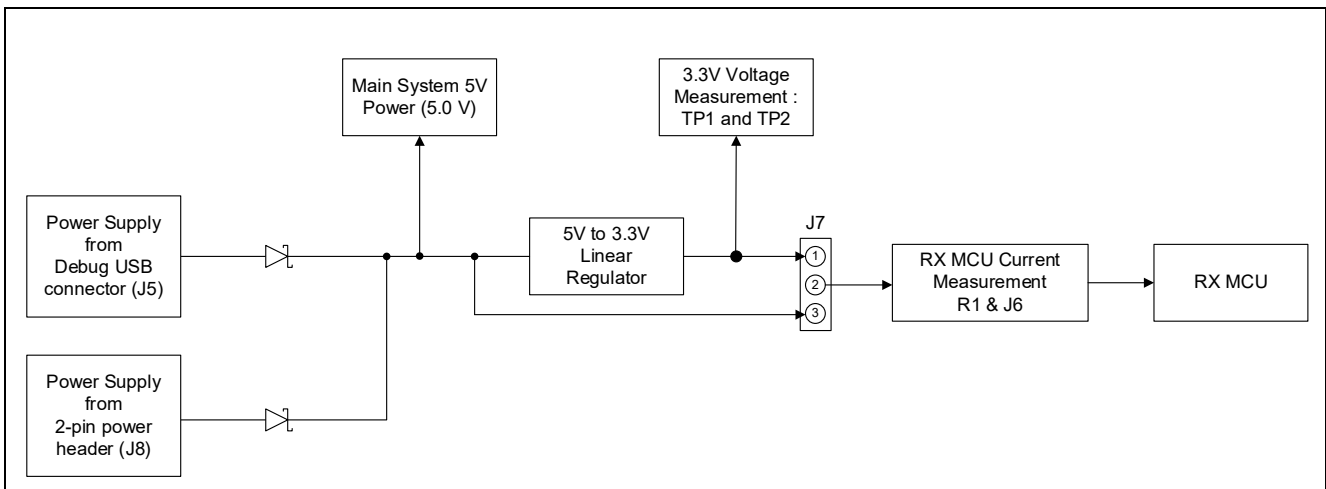


Figure 9. Power Supply

#### 5.1.1 USB

5 V may be supplied from a host PC to the USB connector (J5) labelled DEBUG1 on the board. Power from this source is connected to the main system 5 V power. Reverse current protection is provided between this connector and the main system 5 V power.

#### 5.1.2 Header Connector J8

5 V may be supplied from an external power supply to connector J8. J8 is a standard 2-pin header on a 0.1" (2.54 mm) pitch. Pin 1 is 5 V, and pin 2 is GND. Power from this source is connected to the main system 5 V power. Reverse current protection is provided between J8 and the main system 5 V power.

#### 5.1.3 Power Supply Considerations

Voltage of Main System 5 V Power will be lower than the power supply voltage because of the forward voltage (max 0.55V@1A) of the reverse current protection diode. Main System 5 V Power supplies to external devices connected to Arduino, Pmod 1 and Pmod 2.

The maximum current that could be supplied to the FPB-RX140 v1 is 1 A including current consumption of external boards which are connected to the ecosystem connectors and the breakout pin headers.

#### 5.1.4 Power-up Behavior

When powered, the Power LED (LED3) colored green turns on and blinky example project which is pre-programmed starts and User LED1 and LED2 start blinking.

## 5.2 Debug and Programming

The FPB-RX140 v1 can be debugged and programmed using the E2 OB.

The FPB-RX140 v1 supports Debug on-board mode in which can debug and program by E2 OB circuit and Standalone operation mode in which RX MCU operates as standalone by disabling E2 OB circuit. The mode can be configured by pin header jumper J4.

**Table 4. Operating mode**

J4	Operating mode
Open	Debug on-board mode
Jumper on pins 1-2	Standalone operation



**Figure 10. Pin header jumper J4**

### 5.2.1 E2 OB

USB DEBUG1 (Type Micro B) connector (J5) connects the E2 OB to a host PC, allowing re-programming and debugging of the RX MCU firmware.

The E2 OB connects to the RX MCU using the FINE interface. Please note that connecting the same host PC to multiple FPB-RX140 v1 is not possible.

**Table 5. USB Debug Connector**

USB Debug Connector		FPB-RX140 v1
Pin	Description	Signal
J5-1	+5VDC	+5V_USB_DBG
J5-2	Data-	USBDBG_DM
J5-3	Data+	USBDBG_DP
J5-4	USB ID, jack internal switch, cable inserted	NC
J5-5	Ground	GND

A yellow indicator, LED4, shows the status of the debug interface. When the FPB-RX140 v1 is powered, and LED4 is blinking, it indicates that the E2 OB is not connected to a host PC. When LED4 is on solid, it indicates that it is connected to a host PC.

### 5.2.2 Settings in e<sup>2</sup> studio and Renesas Flash Programmer

FPB-RX140 v1 needs to be configured in Debug on-board shown in [Table 4](#) when the MCU is debugged or re-programmed with e<sup>2</sup> studio. [Figure 11](#) shows the settings for e<sup>2</sup> studio when creating a new project for the FPB-RX140 v1.

[Debug hardware]: Select [E2 Lite (RX)]

[Target Device]: Select [R5F51406]

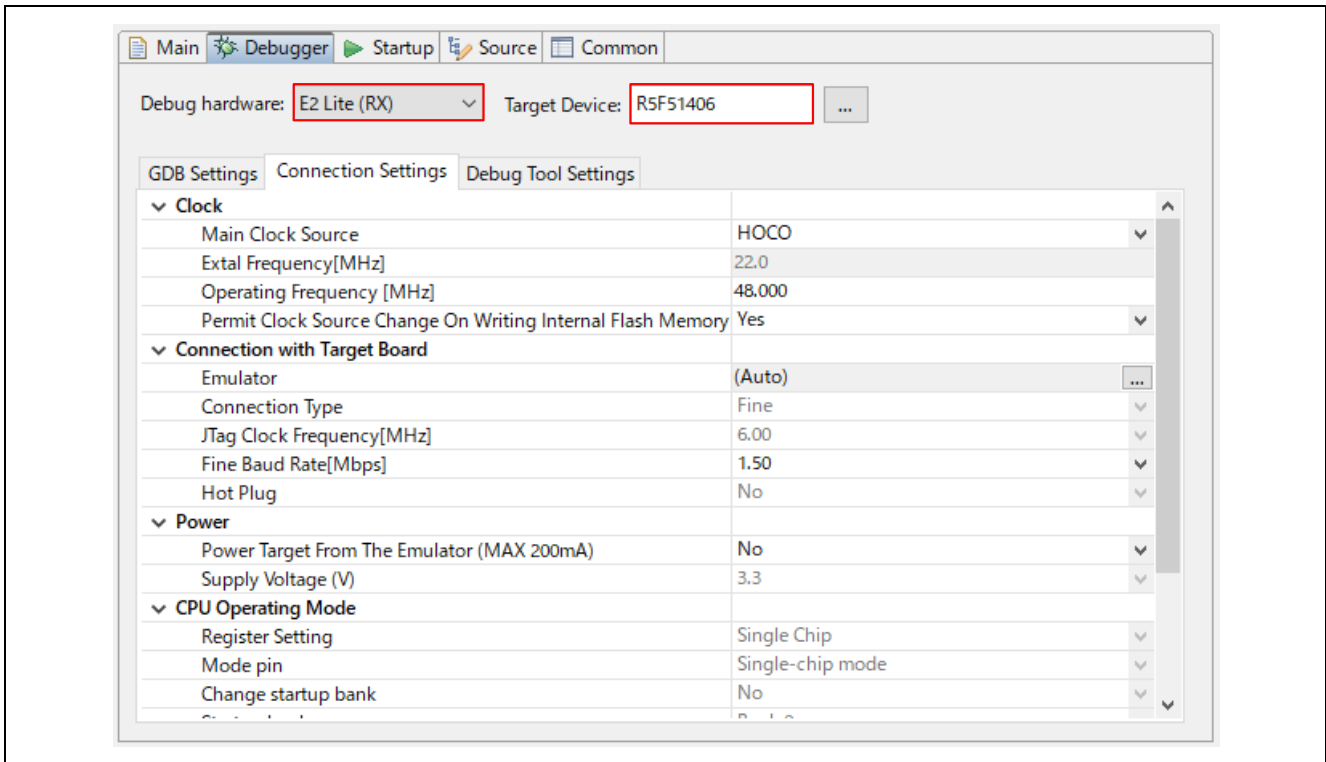


Figure 11. e<sup>2</sup> Studio Setting

FPB-RX140 v1 needs to be configured in Debug on-board shown in [Table 4](#) when the MCU is re-programmed with Renesas Flash Programmer. [Figure 12](#) shows the settings for Renesas Flash Programmer when creating a new project for the FPB-RX140 v1.

Connect an USB cable between the FPB-RX140 v1 and a host PC and create a new project.

- [Microcontroller]: Select [RX100]
- [Project Name]: Define project name
- [Project Name]: Select project folder location
- [Tool]: Select [E2 emulator Lite]
- [Tool Details]: Select [FINE]

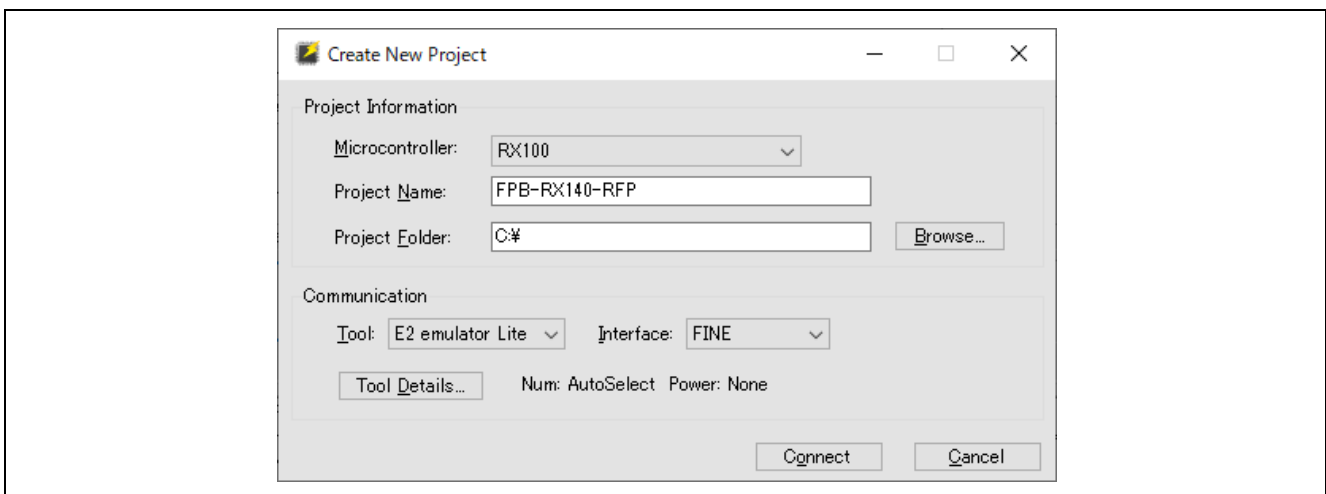


Figure 12. Renesas Flash Programmer Settings

### 5.3 Ecosystem

The Ecosystem connectors provide users the means to connect several third party add-on modules compatible with two popular ecosystems using the following connectors:

1. Two Digilent Pmod™ (UART / SPI / I<sup>2</sup>C) connectors
2. Arduino® (Uno R3) connectors

**Note: We do not guarantee connection to all types of third party add-on modules. Confirm the specifications of this product and any third party add-on modules you intend to use.**

### 5.3.1 Digilent Pmod™ Connectors

#### 5.3.1.1 Pmod 1

A 12-pin Pmod Type-2A (expanded SPI), Type-3A (expanded UART) and Type-6A (expanded I<sup>2</sup>C) connector is provided at connector J13 labelled PMOD1. At Type-2A, the RX MCU acts as the SPI master, and the connected module acts as an SPI slave device. At Type-6A, the RX MCU acts as a two-wire serial master, and a connected module acts as a two-wire serial slave.

**Table 6. Pmod 1 Connector**

Pmod 1 Connector				FPB-RX140 v1	Pmod 1 Configuration	
Pin	Default Type-2A	Default Type-3A	Option Type-6A	Signal	Closed	Open
J13-1	CS			PE5 (IRQ5) or PA6 (CTS5#)	*1	
		CTS / GPIO		PA6 (CTS5#) *2	E31	E32
			INT	PE5 (IRQ5)	E32	E31
J13-2	MOSI	TXD		PA4 (TXD5 / SMOSI5 / SSSDA5)	E34	E33, E35
			RESET	PA0	E33, E35	E34, E36
J13-3	MISO	RXD	SCL	PA3 (RXD5 / SMISO5 / SSCL5)		
J13-4	SCK	RTS / GPIO		PA1 (SCK5)	E36	E35
			SDA	PA4 (TXD5 / SMOSI5 / SSSDA5) *2	E35	E34, E36
J13-5	GND			GND		
J13-6	VCC			Board_VCC		
J13-7	GPIO / INT (slave to master)			PB1 (IRQ4)		
J13-8	GPIO / RESET (master to slave)			PB3		
J13-9	GPIO / CS2			PB5		
J13-10	GPIO / CS3			PB6 / PC0		
J13-11	GND			GND		
J13-12	VCC			Board_VCC		

\*1: Connect PE5 (IRQ5) or PA6 (CTS5#) when using Type-2A (CS). Solder copper jumper E32 and cut copper jumper E31 when connecting PE5 (IRQ5). Cut copper jumper E32 and solder copper jumper E31 when connecting PA6 (CTS5#).

\*2: Open at shipping.

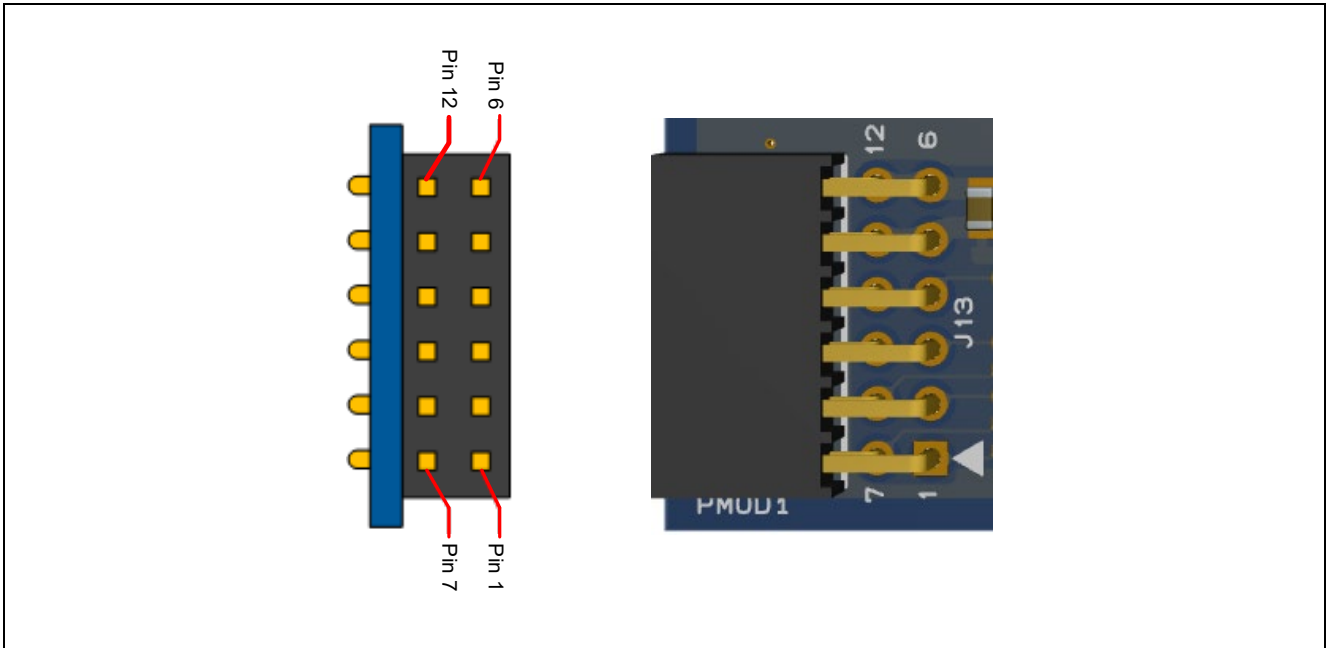


Figure 13. Pmod 1 Connector

**Pmod Type-6A Operation**

The option for Type-6A (I<sup>2</sup>C) can be configured at Pmod 1 and supports 3.3 V / 5 V devices. To configure the FPB-RX140 v1 to use the I<sup>2</sup>C devices with 3.3 V / 5 V operation, configure the copper jumpers using [Table 6](#). Following figure shows the copper jumpers to use the I<sup>2</sup>C devices.

**Note:** VCC power that supplies to J13-Pin6 and Pin12 is Board\_VCC same as RX MCU power. Board\_VCC voltage is selectable either 3.3 V or 5 V by configuring pin header J7.

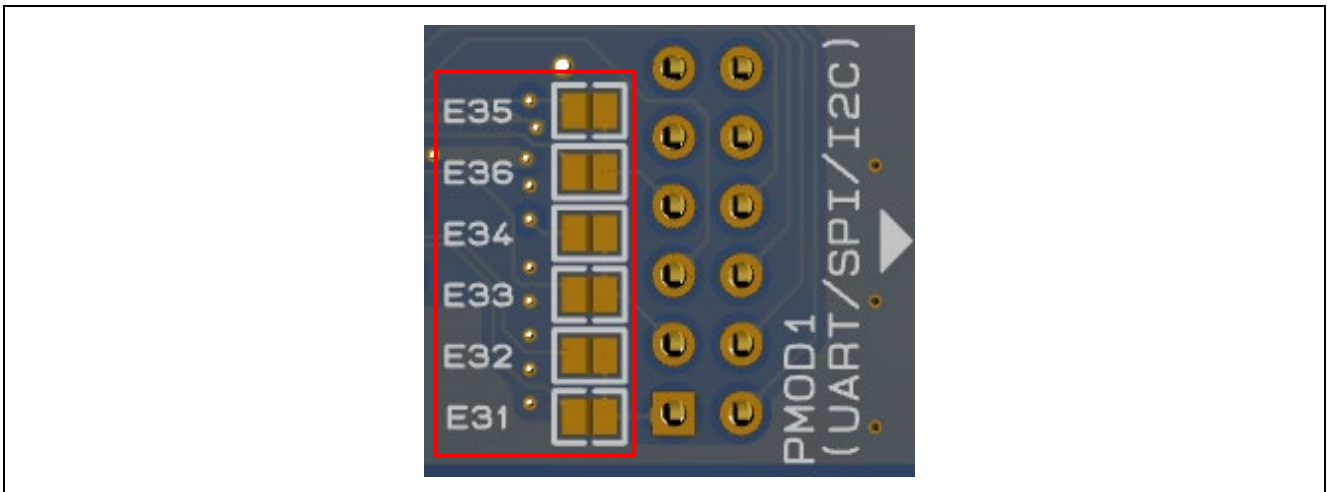


Figure 14. Pmod 1 Copper Jumpers (bottom side)

### 5.3.1.2 Pmod 2

A 12-pin Pmod Type-2A (expanded SPI), Type-3A (expanded UART) and Type-6A (expanded I<sup>2</sup>C) connector is provided at connector J14 labelled PMOD2. At Type-2A, the RX MCU acts as the SPI master, and the connected module acts as an SPI slave device. At Type-6A, the RX MCU acts as a two-wire serial master, and a connected module acts as a two-wire serial slave.

**Table 7. Pmod 2 Connector**

Pmod 2 Connector				FPB-RX140 v1	Pmod 2 Configuration	
Pin	Option Type-2A	Default Type-3A	Option Type-6A	Signal	Closed	Open
J14-1	CS	CTS / GPIO		P14 (CTS1#)	E37	E38
			INT	P12 (IRQ2) <sup>*1</sup>	E38	E37
J14-2	MOSI	TXD		P26 (TXD1 / SMOSI1 / SSDA1)	E40	E39, E41
			RESET	PA2	E39, E41	E40, E42, E43
J14-3	MISO	RXD	SCL	P15 (RXD1 / SMISO1 / SSCL1)		
J14-4	SCK			P27 (SCK1) <sup>*1</sup>	E42	E41, E43
		RTS / GPIO		P31 (RTS1#)	E43	E41, E42
			SDA	P26 (TXD1 / SMOSI1 / SSDA1) <sup>*1</sup>	E41	E40, E42, E43
J14-5	GND			GND		
J14-6	VCC			Board_VCC		
J14-7	GPIO / INT (slave to master)			P13 (IRQ3)		
J14-8	GPIO / RESET (master to slave)			PB2		
J14-9	GPIO			PB0		
J14-10	GPIO			PA5		
J14-11	GND			GND		
J14-12	VCC			Board_VCC		

\*1: Open at shipping.



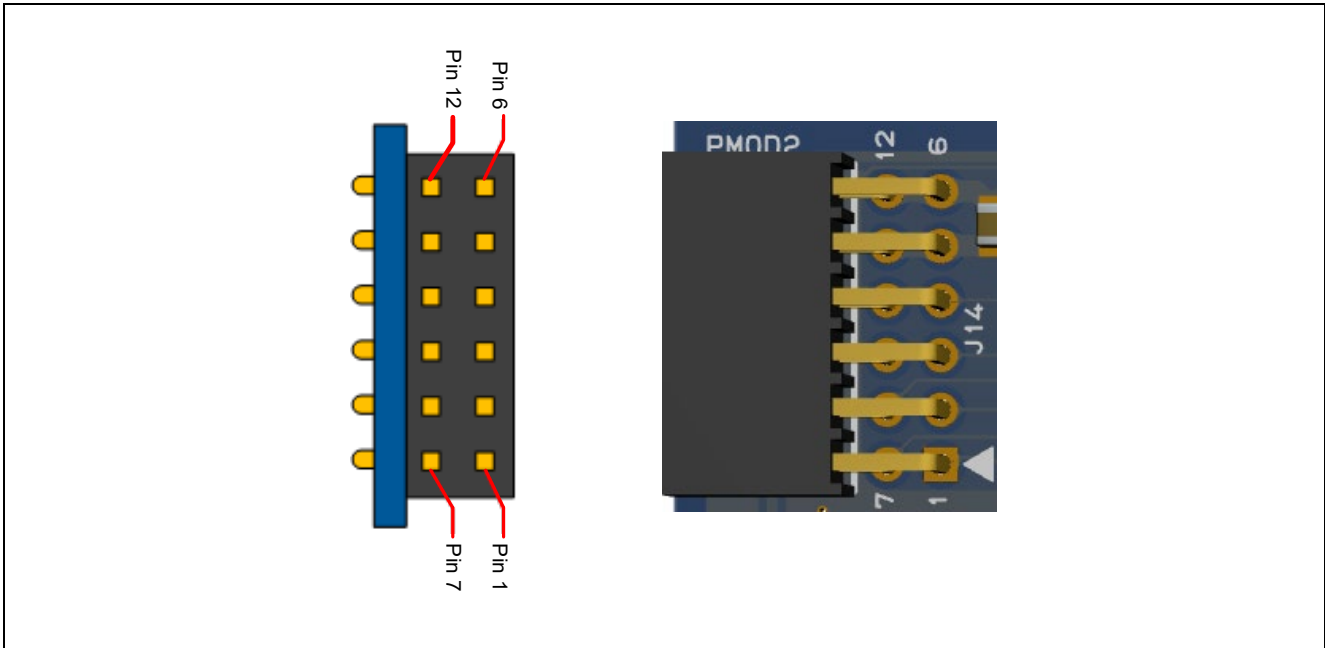


Figure 15. Pmod 2 Connector

**Pmod Type-6A Operation**

The option for Type-6A (I<sup>2</sup>C) can be configured at Pmod 2 and supports 3.3 V / 5 V devices. To configure the FPB-RX140 v1 to use the I<sup>2</sup>C devices with 3.3 V / 5 V operation, configure the copper jumpers using [Table 7](#). Following figure shows the copper jumpers to use the I<sup>2</sup>C devices.

**Note:** VCC power that supplies to J14-Pin6 and Pin12 is Board\_VCC same as RX MCU power. Board\_VCC voltage is selectable either 3.3 V or 5 V by configuring pin header J7.

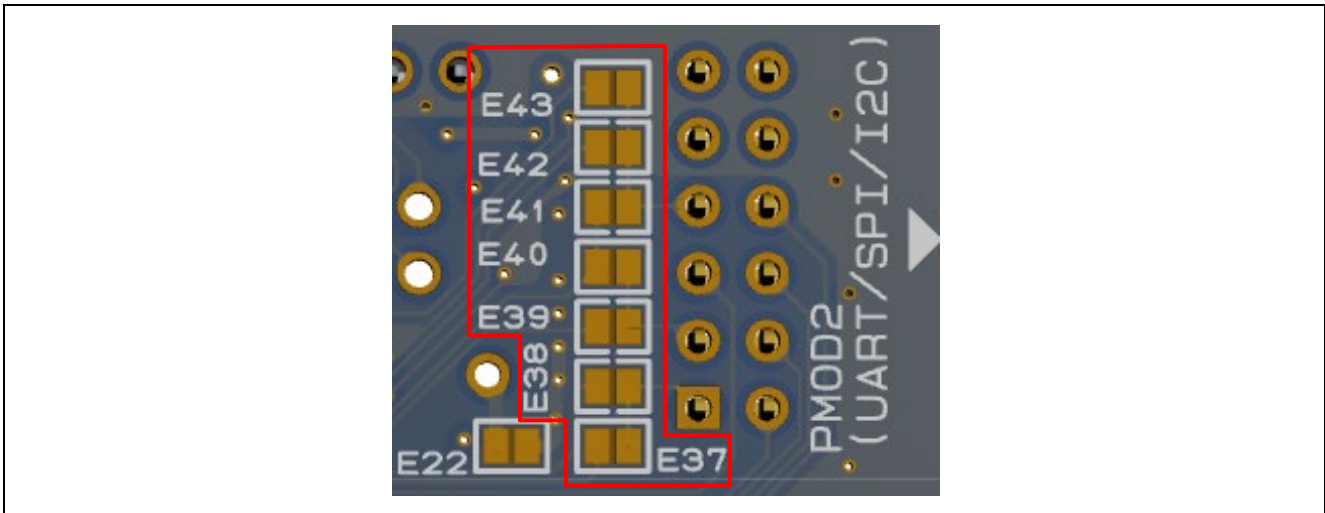


Figure 16. Pmod 2 Copper Jumpers (bottom side)

### 5.3.2 Arduino® Connector

Arduino Uno R3 compatible connector interface is provided at connector J9, J10, J11 and J12.

**Table 8. Arduino Uno Connections**

Arduino Compatible Connector		FPB-RX140 v1	Arduino Configuration	
Pin	Description	Signal	Closed	Open
J9-1	NC	NC		
J9-2	IOREF	Board_VCC	E25	
J9-3	RESET	RES#	E26	E27
		PD2 *5	E27	E26
J9-4	3.3V	3.3 V	E24	
J9-5	5 V	5 V *5	E23	
J9-6	GND	GND		
J9-7	GND	GND		
J9-8	VIN	NC		
J11-1	A0	P40 (AN000)		
J11-2	A1	P41 (AN001)		
J11-3	A2	P42 (AN002)		
J11-4	A3	P43 (AN003)		
J11-5	A4	P44 (AN004)		
J11-6	A5	P45 (AN005)		
J12-1	D0 / RX	PD1 (RXD6)		
J12-2	D1 / TX	PD0 (TXD6)		
J12-3	D2 / INT	P30 (IRQ0) *1	E30	
J12-4	D3 / INT / PWM	PH2 (MTIOC4C / IRQ1)		
J12-5	D4	P21		
J12-6	D5 / PWM	P20 (MTIOC1A) *2	E29	
J12-7	D6 / PWM	PJ1 (MTIOC3A)		
J12-8	D7	PC3		
J10-1	D8	PC2		
J10-2	D9 / PWM	PE4 (MTIOC4A)		
J10-3	D10 / SS / PWM	PC4 (MTIOC0A / SSLA0) *4	E15	E28
		P34 (MTIOC0A) *5	E28	E15
J10-4	D11 / MOSI / PWM	PC6 (MTIOC3C / MOSIA)		
J10-5	D12 / MISO	PC7 (MISOA)		
J10-6	D13 / SCK	PC5 (RSPCKA)		
J10-7	GND	GND		
J10-8	AREF	AREF *6		
J10-9	SDA	P17 (SDA0) *3		
J10-10	SCL	P16 (SCL0) *3		

\*1: The signal is shared with User switch S1.

\*2: The signal is shared with user LED1.

\*3: I<sup>2</sup>C pull up can be disconnected by cutting copper jumper E22.

\*4: The signal is shared with TSCAP. Cut copper jumper E15 when a capacitor is fitted on C14.

\*5: Open at shipping.

\*6: The signal is connected to VREFH0 pin of the RX140 MCU.

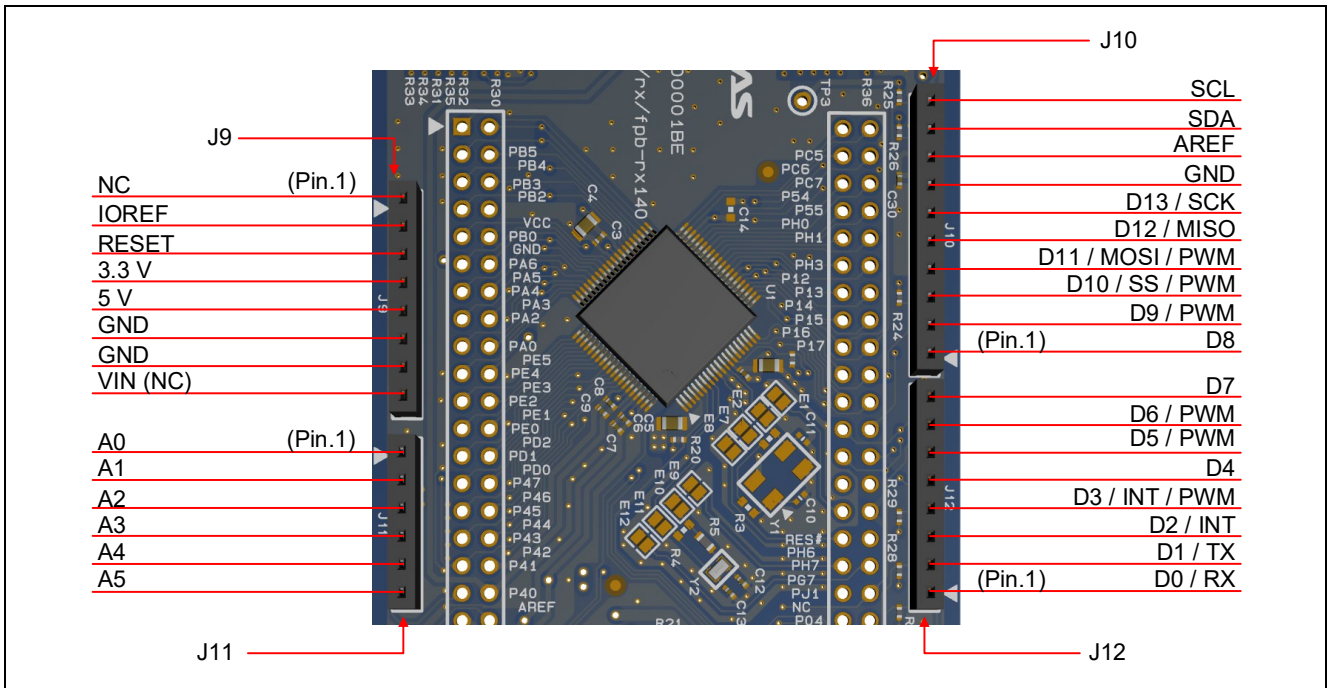


Figure 17. Arduino Uno Connectors

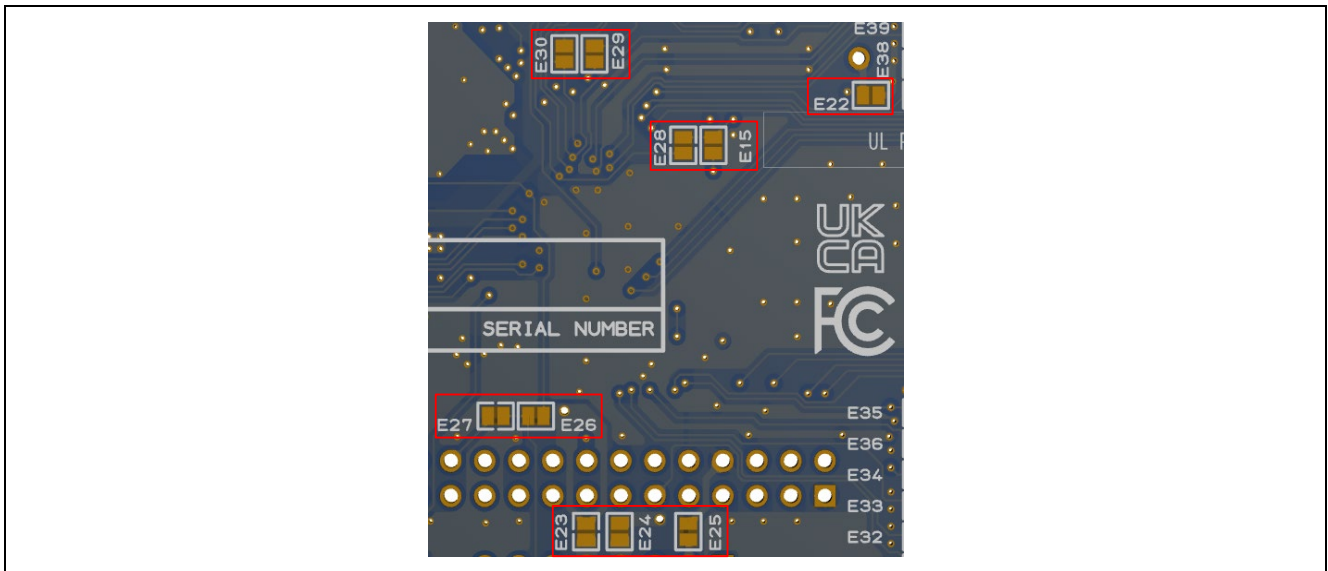


Figure 18. Arduino Uno Copper Jumpers (bottom side)

**Arduino Shield Considerations**

AREF (J10-Pin8) output from Arduino Shield is connected to VREFH0 (Analog reference voltage supply pin for the 12-bit A/D converter) of RX MCU, however, Board\_VCC is connected to VREFH0 at default condition. When Arduino AREF supplies power to VREFH0, the user must disconnect VREFH0 from Board\_VCC power. Copper jumper E4 is provided on the FPB-RX140 v1 to disconnect VREFH0 from on-board Board\_VCC power.

The FPB-RX140 v1 can supply 5 V power to J9-Pin5 of Arduino Shield by soldering copper jumper E23, however, some of the RX MCU pins which are connected to Arduino Shield are not 5 V tolerant. When the FPB-RX140 v1 supplies 5 V power to Arduino Shield, however Board\_VCC = 3.3 V, the user must confirm the RX140 Group User's Manual: Hardware and the specification of Arduino Shield you intend to use.

## 5.4 Miscellaneous

### 5.4.1 LED

Four LEDs are provided on the FPB-RX140 v1.


Functions of the LEDs on the FPB-RX140 v1 is described in the following table. User LEDs turn on when RX MCU ports output high level.

**Table 9. FPB-RX140 v1 LED Functions**


LED			FPB-RX140 v1	Configuration	
Designator	Color	Function	Signal	Closed	Open
LED1	Green	User LED	P20 (MTIOC1A) <sup>*1</sup>	E20	
LED2	Green	User LED	P32 (MTIOC0C)	E21	
LED3	Green	Power LED	Board_VCC		
LED4	Yellow	Debug LED	E2 OB circuit		

\*1: The signal is shared with Arduino (D5 / PWM).


The User LEDs may be isolated from the RX MCU so that the associated ports can be used for other purposes. To disconnect LED1 from P20 (MTIOC1A), copper jumper E20 must be open. To disconnect LED2 from P32 (MTIOC0C), copper jumper E21 must be open.

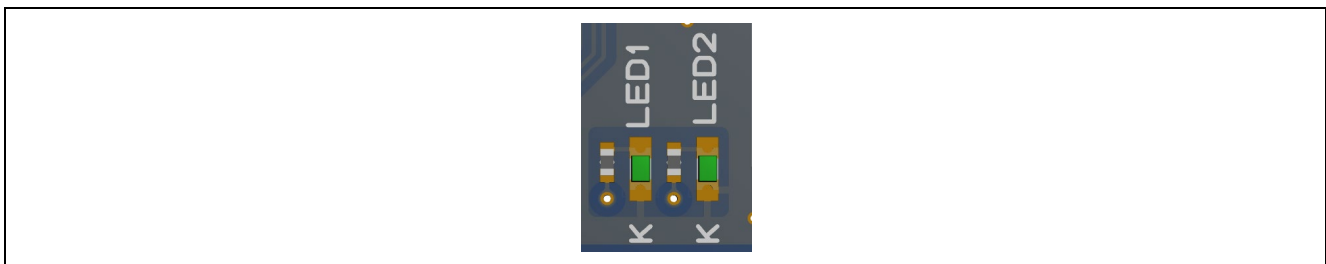

**Figure 19. User LEDs (top side) and Copper Jumpers (bottom side)**

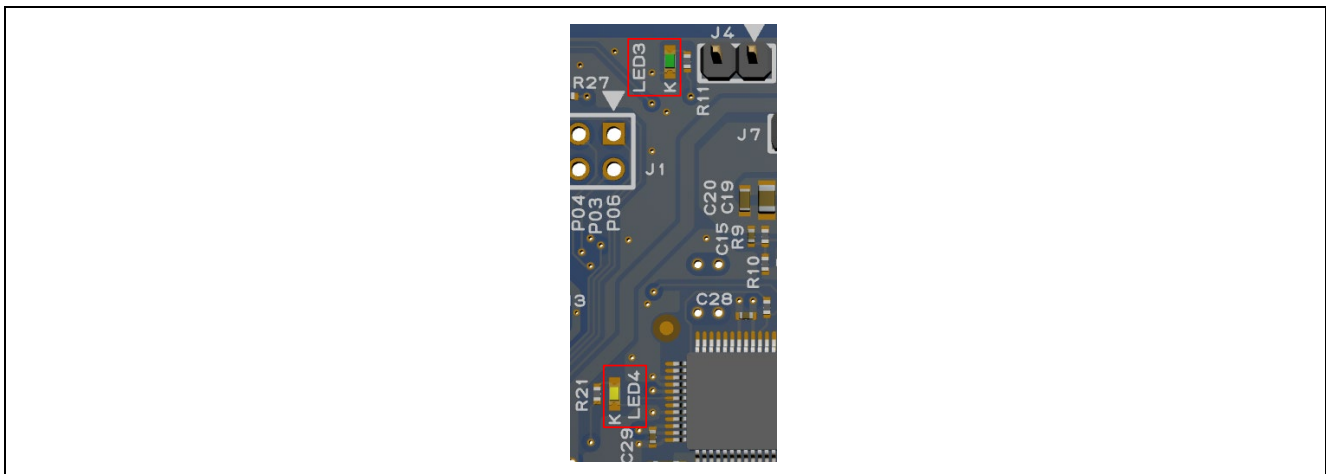

**Figure 20. Power LED and Debug LED**

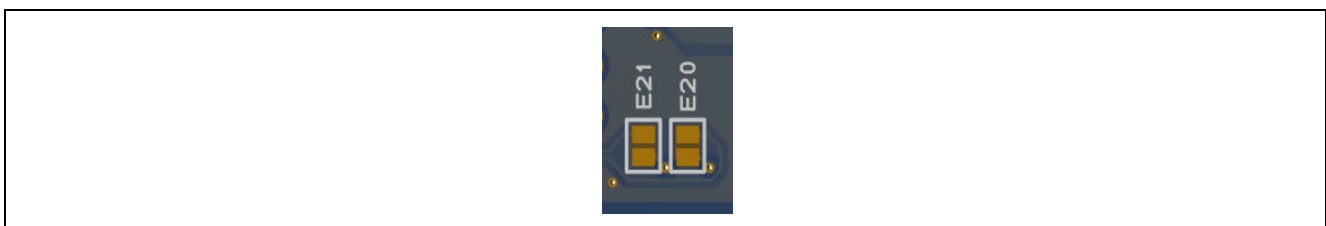

**Figure 21. User LEDs Copper Jumpers (bottom side)**

### 5.4.2 User and Reset Switches


Two miniature, momentary, mechanical push-button type SMD switches are mounted on the FPB-RX140 v1. Pressing the reset switch (S2) generates a reset signal to reset the RX MCU.

**Table 10. FPB-RX140 v1 Switches**


Switch			FPB-RX140 v1	Configuration	
Designator	Function	Button Color	Signal	Closed	Open
S1	User switch	Blue	P30 (IRQ0) *1	E19	
S2	Reset Switch	Blue	RES#		

\*1: The signal is shared with Arduino (D2 / INT).

The User switch S1 may be isolated from the RX MCU, so that the associated port can be used for other purposes. To disconnect S1 from P30 (IRQ0), trace cut jumper E19 must be open.

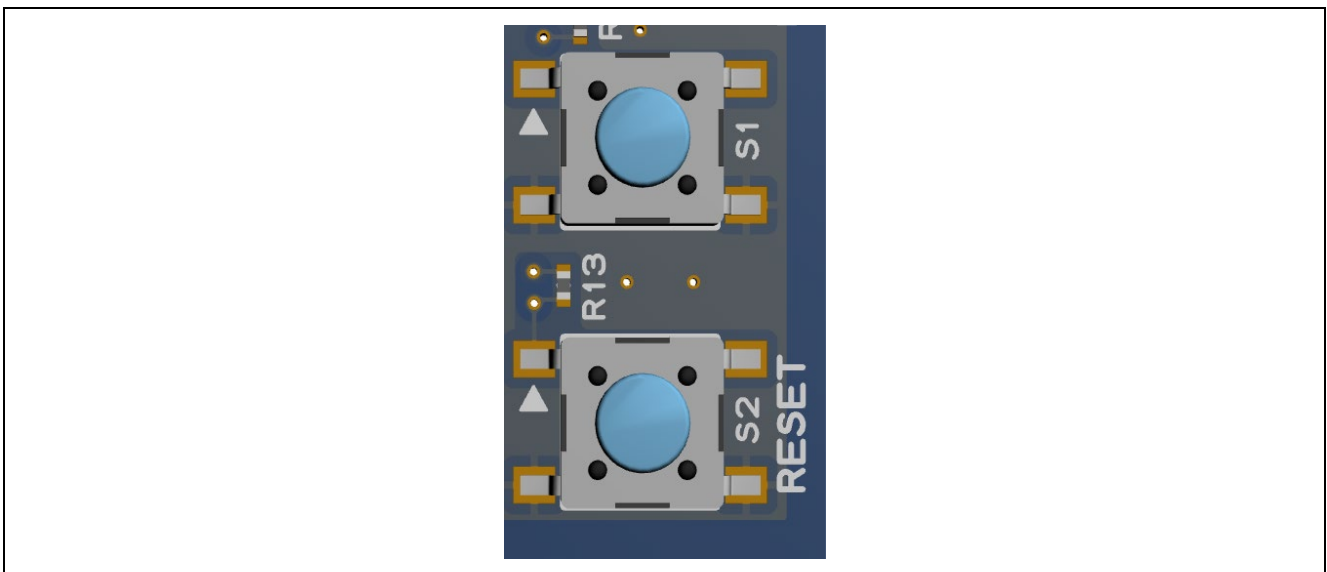

**Figure 22. Reset (S2) and User Switch (S1)**

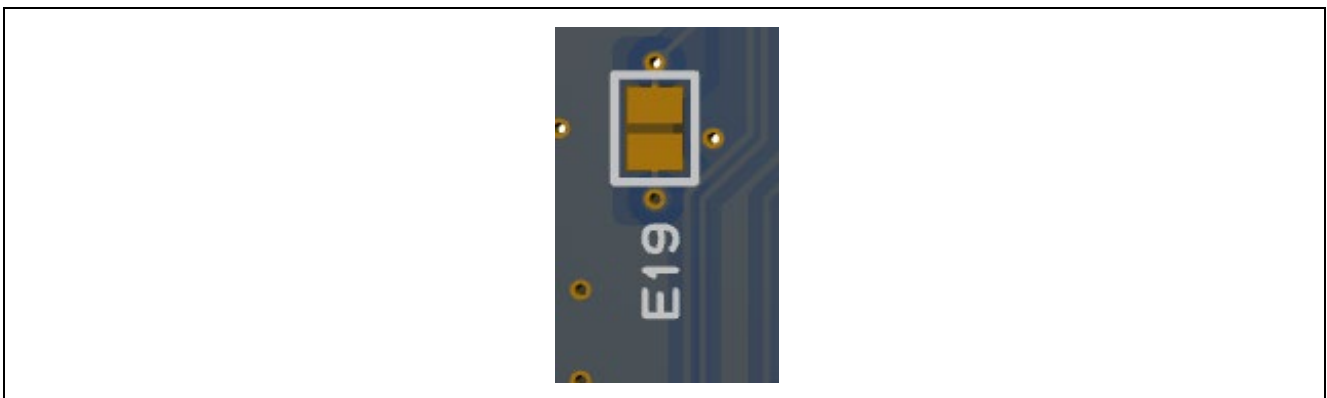

**Figure 23. User Switch S1 Copper Jumper (bottom side)**

## 6. MCU Native Pin Access

### 6.1 Breakout Pin Headers

The FPB-RX140 v1 pin headers (not fitted), J1 and J2, provide access to RX MCU interface signals. Each header pin is labelled with the power or port connected to that pin (Some header pins aren't labelled because of not enough space.). Refer to the RX140 MCU User's Manual: Hardware for details of each port function, and the FPB-RX140 v1 schematic for pin header port assignments.

The placement of the breakout pin headers allows for a standard 2.54 mm (0.100") breadboard to be placed on both pin headers. This can be used for prototyping and testing of custom circuitry for use with the RX MCU.

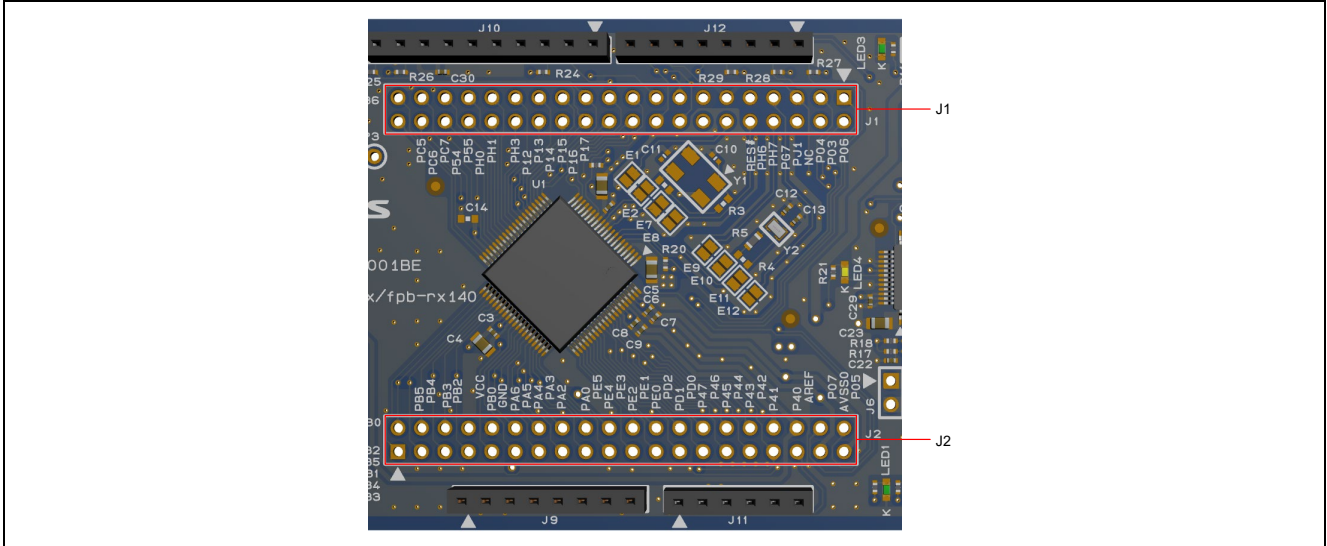


Figure 24. Breakout Pin Headers J1 and J2

### 6.2 MCU Current Measurement

Two pin header J6 (not fitted) is provided on the FPB-RX140 v1 to measure the RX MCU current.

Resistor R1 is 0Ω (SMD 0603). It should be removed in order to measure the current consumption using an ammeter connected between the pin header pins.

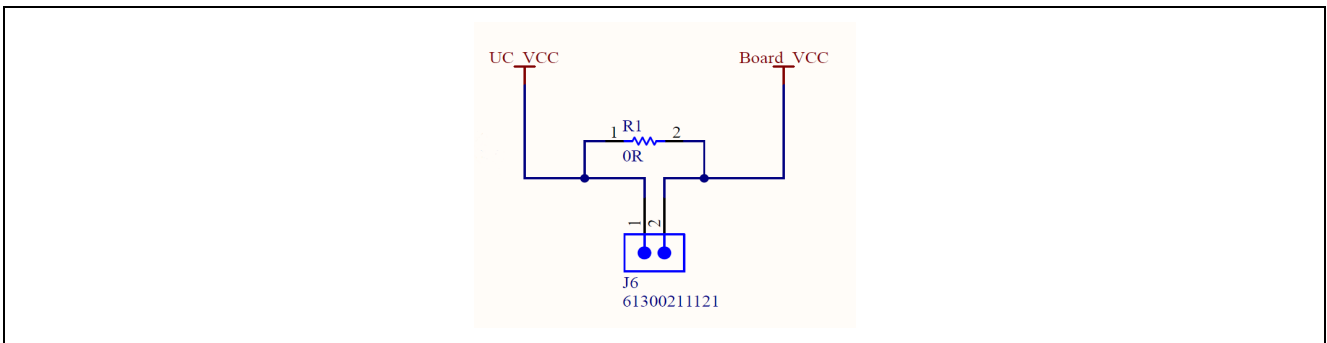


Figure 25. RX MCU Current Measurement Circuit

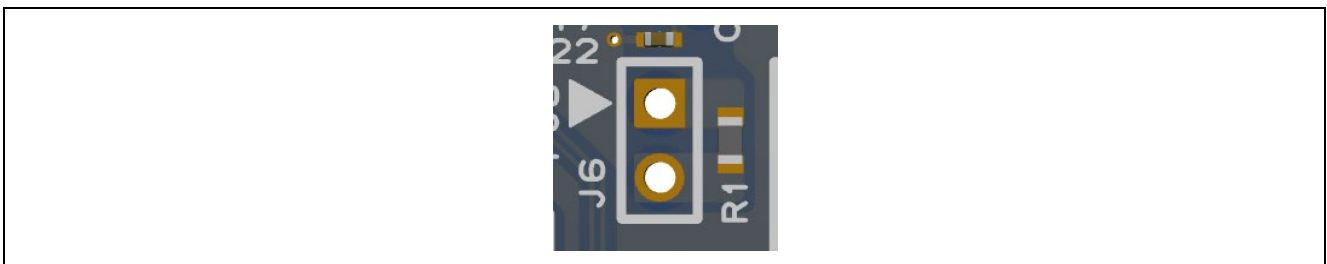


Figure 26. RX MCU Current Measurement Pin Header J6 and R1

## 7. Recommended Components

[Table 11](#) lists recommended part numbers for the components that can be fitted as required.

**Table 11. Recommended Components**

Designator(s)	Description	Manufacturer	Part Number
Y1	8 MHz Crystal	Abracon	ABM3B-8.000MHZ-10-1-U
J1, J2	40-way male header	Würth Elektronik	61304021121
J6, J8	2-way male header	Würth Elektronik	61300211121
R2, R4	1 M $\Omega$ Resistor	Yageo	RC0603FR-071ML
R3	0 $\Omega$ Resistor	Yageo	RC0603JR-070RL
C10, C11	10 pF Capacitor	Yageo	CC0402JRNPO9BN100
C14	10 nF Capacitor	Yageo	CC0603KRX7R9BB103



## 8. Certifications

The FPB-RX140 v1 meets the following certifications/standards. See page 4 of this user's manual for the disclaimer and precautions.

### 8.1 EMC/EMI Standards

- FCC Notice (Class A)



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

- Innovation, Science and Economic Development Canada ICES-003 Compliance:

CAN ICES-3 (A)/NMB-3(A)

- CE Class A (EMC)



This product is herewith confirmed to comply with the requirements set out in the Council Directives on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility Directive 2014/30/EU.

**Warning** – This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures to correct this interference.

- UKCA Class A (EMC)



This product is in conformity with the following relevant UK Statutory Instrument(s) (and its amendments): 2016 No. 1091 Electromagnetic Compatibility Regulations 2016.

**Warning** – This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures to correct this interference.

- Taiwan: Chinese National Standard 13438, C6357 compliance, Class A limits
- Australia/New Zealand AS/NZS CISPR 32:2015, Class A



## 8.2 Material Selection, Waste, Recycling and Disposal Standards

- EU RoHS
- China SJ/T 113642014, 10-year environmental protection use period.
- WEEE Directive (2012/19/EU) & The Waste Electrical and Electronic Equipment Regulations 2013



The WEEE (Waste Electrical and Electronic Equipment) regulations put responsibilities on producers for the collection and recycling or disposal of electrical and electronic waste. Return of WEEE under these regulations is applicable in the UK and European Union.

This equipment (including all accessories) is not intended for household use. After use the equipment cannot be disposed of as household waste, and the WEEE must be treated, recycled and disposed of in an environmentally sound manner.

Renesas Electronics Europe GmbH can take back end of life equipment. Register for this service at; <https://www.renesas.com/eu/en/support/regional-customer-support/weee>

## 8.3 Safety Standards

- UL 94V-0

## 9. Design and Manufacturing Information

The design and manufacturing information for the FPB-RX140 v1 is available in the “FPB-RX140 v1 Design Package” available on [renesas.com/rx/fpb-rx140](https://renesas.com/rx/fpb-rx140).

- Design package file name: fpb-rx140-v1-designpackage.zip
- Design package contents

**Table 12. FPB-RX140 v1 Design Package Contents**

File Type	Content	File / Folder Name
File (PDF)	Schematics	fpb-rx140-v1-schematics
File (PDF)	Mechanical Drawing	fpb-rx140-v1-mechdwg
File (PDF)	3D Drawing	fpb-rx140-v1-3d
File (PDF)	BoM	fpb-rx140-v1-bom
Folder	Manufacturing Files	Manufacturing Files
Folder	Design Files	Design Files-Altium

## 10. Website and Support

Visit the following URLs to learn about the kit and the RX family of microcontrollers, download tools and documentation, and get support.

FPB-RX140 Resources	<a href="https://renesas.com/rx/fpb-rx140">renesas.com/rx/fpb-rx140</a>
RX Kit Information	<a href="https://renesas.com/rx/kits">renesas.com/rx/kits</a>
RX Product Information	<a href="https://renesas.com/rx">renesas.com/rx</a>
RX Product Support Forum	<a href="https://renesas.com/rx/forum">renesas.com/rx/forum</a>
RX Videos	<a href="https://renesas.com/rx/videos">renesas.com/rx/videos</a>
RX Kit Feedback and Feature Request	<a href="https://renesas.com/rx/kitfeedback">renesas.com/rx/kitfeedback</a>
Renesas Support	<a href="https://renesas.com/support">renesas.com/support</a>

**Revision History**

Rev.	Date	Description	
		Page	Summary
1.00	Feb.2.24	—	Initial release

## ● 有害物質の含有表

### Table of Hazardous Substance

部品名称 Part Name 	有害物質 Hazardous Substance					
	鉛 Lead (Pb)	水銀 Mercury (Hg)	カドミウム Cadmium (Cd)	六価クロム Hexavalent Chromium (Cr(VI))	ポリ臭化ビフェニル Polybrominated biphenyls (PBB)	ポリ臭化ジフェニルエーテル Polybrominated diphenyl ethers (PBDE)
筐体 Case	O	O	O	O	O	O
ボード Board	X	O	O	O	O	O
ケーブル Cable	X	O	O	O	O	O
ソケット Socket	X	O	O	O	O	O
ACアダプタ AC-Adapter	X	O	O	O	O	O

本表は SJ/T 11364 の規定により作成したものである。  
This form is based on the provisions of the SJ/T 11364.

O: 当該部材の全ての均質材料中における該当有害な物質の含有量がいずれも GB/T 26572 基準に規定する限量の要求以下であることを表します。  
If certain hazardous substances do not exist in this part, then mark "O" for the corresponding column, which indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572

X: 少なくとも当該部材のある均質材料中における当該有害な物質の含有量が GB/T 26572 基準に規定する限量の要求を上回ることを表します。  
If certain hazardous substance is contained in this part, then "X" for the corresponding column, which indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

このマークは、中華人民共和国で販売される電子情報製品に適用され、マーク中央の数字は環境保護使用期限の年数です。なお、本製品の年数は、通常に使用された場合の年数です。  
 This mark is applied to EIPs sold in People's Republic of China, and the number in the center indicates the years of the environment-friendly use period. The years for this product is applicable when the product is used normally.

注) この表には電子情報製品全ての添付品を記載しており、製品によっては同梱されていないものがございますのでご了承ください。

Notice) All of the attached items relating to 'Electronic Information Products' are listed in this table.  
Please understand that there is not always bundled all of the items because it depends on the product.

## ● 製造年の確認方法に関して About Confirmation method of produced year

製品或いは梱包箱に表記された銘板ラベル等から製造年をご確認頂けます。  
Please confirm the produced year from nameplate label etc on product body or outer box.

Ex) 2016 年の場合

Produced 2016

## ● 有害物质含有情况表

### Table of Hazardous Substance

部件名称 Part Name 	有害物质 Hazardous Substance					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
外壳 Case	O	O	O	O	O	O
电路板 Board	X	O	O	O	O	O
连接线 Cable	X	O	O	O	O	O
插座 Socket	X	O	O	O	O	O
AC 适配器 AC-Adapter	X	O	O	O	O	O

本表格依据 SJ/T 11364 的规定编制。  
This form is based on the provisions of the SJ/T 11364.

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。  
If certain hazardous substances do not exist in this part, then mark "O" for the corresponding column, which indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 标准规定的限量要求。  
If certain hazardous substance is contained in this part, then "X" for the corresponding column, which indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

该标识适用于在中华人民共和国境内销售的电子信息产品。本产品的使用年限是组装到整机中, 通常情况下能使用的年限。  
This mark is applied to EIPs sold in People's Republic of China, and the number in the center indicates the years of the environment-friendly use period. The years for this product is applicable when the product is used normally.

特别提示) 该表中包括在电子情报产品系列产品所有的附件。产品不同时, 包装内的附件会有所不同。

Notice) All of the attached items relating to 'Electronic Information Products' are listed in this table.

Please understand that there is not always bundled all of the items because it is depends on a product.

## ● 识别生产日期的方法 About Confirmation method of produced year

请通过产品或产品外包装箱上的序列号识别生产日期。

Please confirm the produced year from nameplate label etc on product body or outer box.

如) 生产日期为2016 年

Produced 2016

---

FPB-RX140 v1 User's Manual

Publication Date: Feb.2.24 Rev.1.0

Published by: Renesas Electronics Corporation

---

# FPB-RX140 v1 User's Manual