

# RX26T Group

## MCB-RX26T Type C User's Manual

Renesas RX Family  
RX200 Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

### 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

### 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

### 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

### 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

### 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

### 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

### 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan

[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/).

Renesas RX Family

# MCB-RX26T Type C User's Manual

## Contents

1. Overview .....	3
1.1 Presupposition and precautions of this document .....	3
2. Product Contents .....	4
3. Product Order Information .....	4
4. Hardware Configuration and Default Setting .....	5
4.1 Hardware configuration .....	5
4.2 Block diagram .....	6
4.3 Board Layout .....	7
4.4 Standoffs and Screws .....	7
4.5 Jumper pin setting .....	8
4.6 Hardware Setup .....	11
5. CPU Board Specification .....	12
5.1 Functions .....	12
5.1.1 Power supply .....	12
5.1.2 On-board debugger .....	12
5.1.3 Inverter board connector .....	13
5.1.4 Serial communication .....	15
5.1.5 Reset circuit .....	15
5.1.6 LED .....	16
5.1.7 CAN Communication .....	16
5.1.8 SPI Communication .....	16
5.1.9 Pmod .....	17
5.2 RX26T pin function list .....	18
6. Design and Manufacture Information .....	20
7. Website and Support .....	20
Revision History .....	21

**Figure of contents**

Figure 2-1 Product contents .....	4
Figure 4-1 CPU board block diagram .....	6
Figure 4-2 CPU Board Layout .....	7
Figure 4-3 Standoffs and Screws assembly .....	7
Figure 4-4 Default jumper pin and jumper resistor, LPF setting.....	10
Figure 4-5 Board connection example.....	11
Figure 5-1 JP2 setting.....	12
Figure 5-2 Board connection of CPU board, INV board and COM board .....	15

**Table of contents**

Table 4-1 CPU board specification .....	5
Table 4-2 Jumper pin setting of CPU board .....	8
Table 4-3 Jumper resistor and LPF setting of CPU board .....	9
Table 5-1 1st inverter board connector (CN1) pin assignment.....	13
Table 5-2 1st inverter board connector (CN2) pin assignment.....	13
Table 5-3 2nd inverter board connector (CN3) pin assignment .....	14
Table 5-4 2nd inverter board connector (CN4) pin assignment .....	14
Table 5-5 SCI connector (CN9) pin assignment.....	15
Table 5-6 LED pin assignment .....	16
Table 5-7 CAN communication pin assignment (CN8).....	16
Table 5-8 SPI communication pin assignment (CN7) .....	16
Table 5-9 Pmod Type 3A connector pin assignment (CN6).....	17
Table 5-10 Pmod Type 6A connector pin assignment (CN5).....	17
Table 5-11 RX26T pin function list .....	18

## 1. Overview

MCB-RX26T Type C is a CPU board for motor control evaluation. By using this product in combination with an inverter board, motor control using RX26T can be easily performed.

### 1.1 Presupposition and precautions of this document

1. Experience of using tools: This document assumes that the user has used terminal emulation program of Integrated Development Environment (IDE) such as e2 studio before.
2. Knowledge about the development subject: This document assumes that the user has a basic knowledge to modify the sample project regarding MCU and embedded system.
3. Before using this product, wear an antistatic wrist strap. If you touch this product with static charge on your body, a device failure may occur, or operation may become unstable.
4. All screen shots provided in this document is for reference. Actual screen displays may differ depending on the software and development tool version which you use.

## 2. Product Contents

This kit consists of the following parts.

1. CPU Board (RTK0EMXE30C00000BJ) x1
2. USB Cable x1
3. Screw x4
4. Standoff x4



(1) CPU Board



(2) USB Cable



(3) Screw  
(4) Standoff

Figure 2-1 Product contents

## 3. Product Order Information


Product number to order MCB-RX26T Type C : RTK0EMXE30C00000BJ

## 4. Hardware Configuration and Default Setting

### 4.1 Hardware configuration

The specifications of the CPU board are shown below.

Table 4-1 CPU board specification

item		Specification
Product name		CPU Board
Board part No.		RTK0EMXE30C00000BJ
Compatible inverter board		RTK0EM0000B12020BJ
External view		 <p>Note: The actual product may differ from this photo.</p>
Mounted MCU	Product group	RX26T group
	Product No.	R5F526TACDFM
	CPU maximum operating frequency	120MHz
	Bit count	32 bit
	Package / Pin count	LFQFP / 64 pin
	ROM	256KB
MCU input clock		10MHz (Generate with external crystal oscillator)
Power supply		DC 5V,3.3V (selectable with jumper switch) Select one way automatically from the below <ul style="list-style-type: none"> <li>• Power is supplied from compatible inverter board</li> <li>• Power is supplied from USB connector</li> </ul>
Debugger		E2OB (Onboard debugger circuit)
Connector		<ul style="list-style-type: none"> <li>• Inverter board connector</li> <li>• USB connector for E2 OB</li> <li>• SCI connector for Renesas Motor Workbench communication</li> <li>• Through hole for CAN communication</li> <li>• Through hole for SPI communication</li> <li>• Pmod connectors</li> </ul>
Switch		MCU reset switch
LED		User-controllable LED x2, Power LED x1
Board size		109 mm (W) x 109 mm (L)
Operating temperature		Room temperature
Operating humidity		No condensation allowed
EMC Directive		EN61326-1:2021 EMI : Class A EMS : Basic Electromagnetic environment



4.2 Block diagram

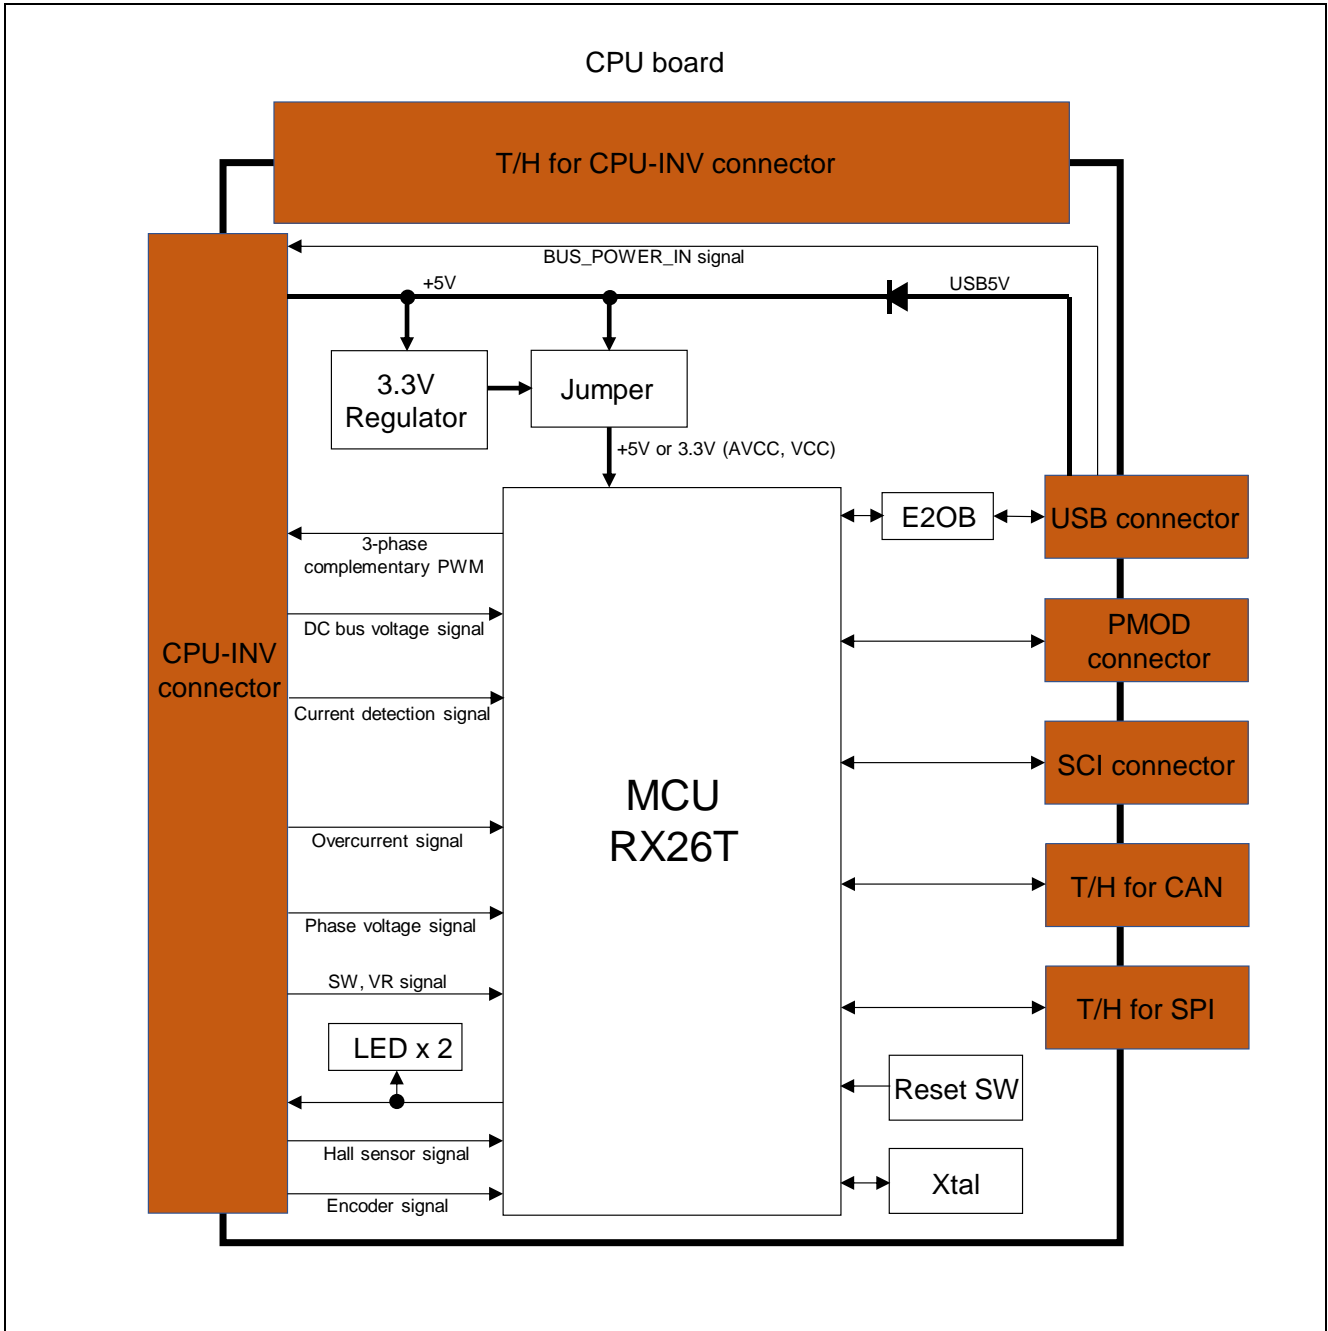


Figure 4-1 CPU board block diagram

### 4.3 Board Layout

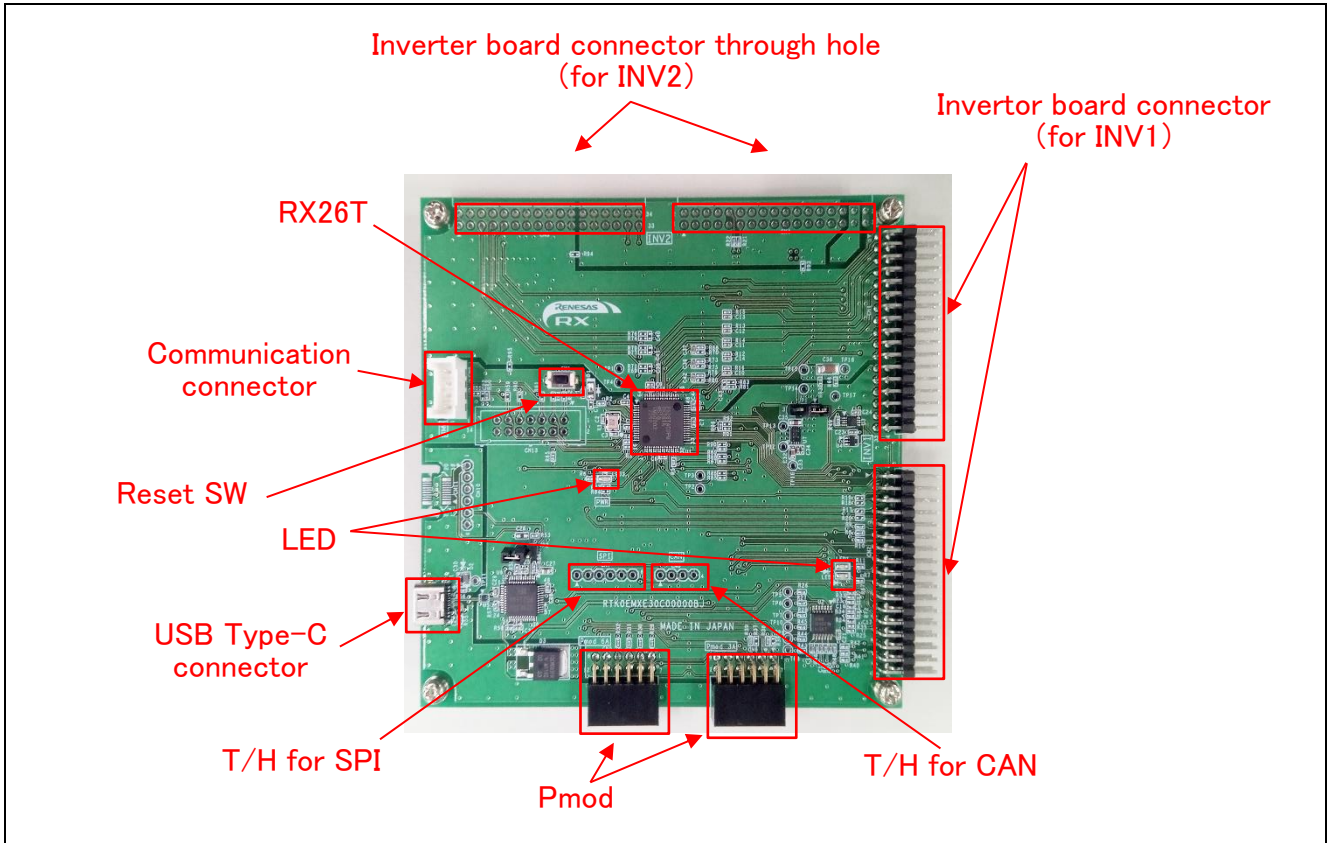


Figure 4-2 CPU Board Layout

### 4.4 Standoffs and Screws

Before using this product, assemble the included standoffs and screws as shown below.

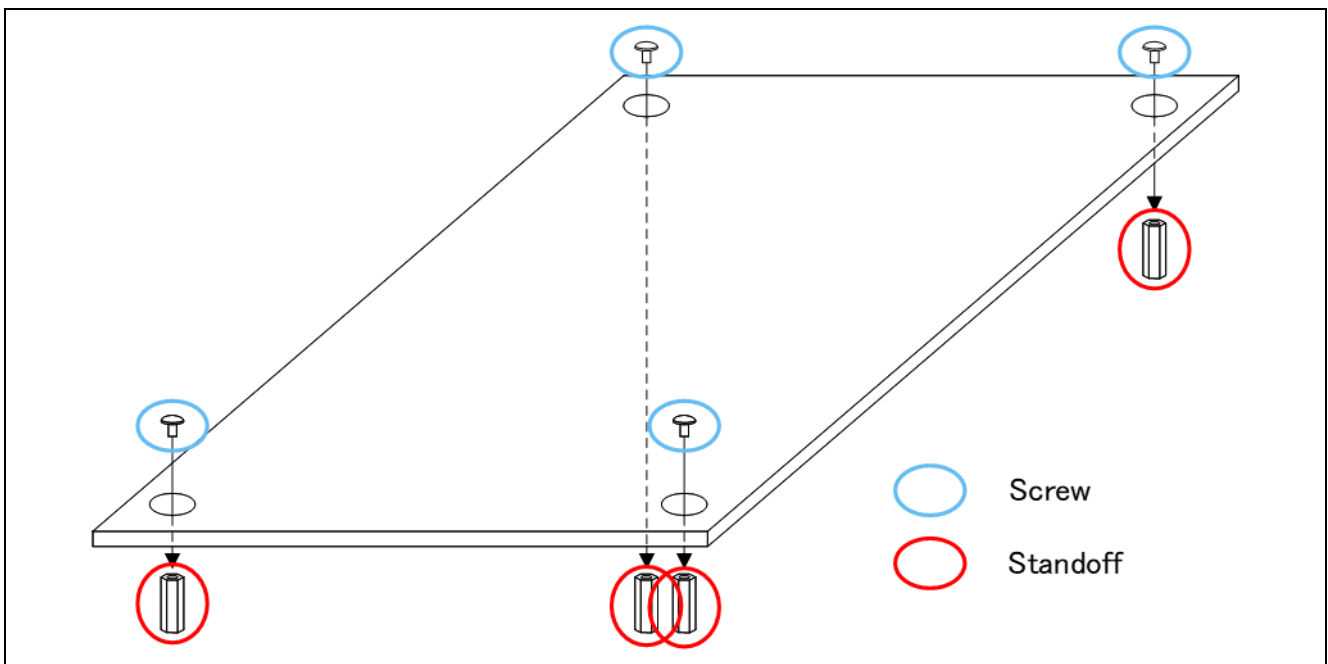


Figure 4-3 Standoffs and Screws assembly

## 4.5 Jumper pin setting

Default settings and functions of the jumper pins (JP1,JP2) and jumper resistor, LPF are as follows.

**Table 4-2 Jumper pin setting of CPU board**

JP No.	Function	Setting (function in use)			Default setting
		open	1-2 short	2-3 short	
1	MCU operation voltage	N/A	5V	3.3V	1-2 short
2	On board debugger	Enabled	Disabled	N/A	1-2 short

Table 4-3 Jumper resistor and LPF setting of CPU board

resistors & capacitors	Function in use							Default setting *3
	INV1	INV2	HV INV	IPS *1	Encoder	Pmod	Smart driver *2	
R67	-	-	-	-	short	-	-	short
R69	-	open	-	short	-	-	-	open
R71	-	short	-	open	-	-	-	open
C38	-	220pF	-	DNF	-	-	-	DNF
R72	-	-	-	-	short	-	-	short
R74	-	open	-	short	-	-	-	open
R76	-	short	-	open	-	-	-	open
C40	-	220pF	-	DNF	-	-	-	DNF
R77	-	open	-	short	-	-	-	short
R79	-	short	-	open	-	-	-	open
C41	-	220pF	-	DNF	-	-	-	DNF
R81	-	open	-	short	-	-	-	short
R83	-	short	-	open	-	-	-	open
C43	-	220pF	-	DNF	-	-	-	DNF
R85	-	open	-	-	short	-	-	short
R86	-	short	-	-	open	-	-	open
R87	-	open	-	-	short	-	-	short
R88	-	short	-	-	open	-	-	open
R89	-	open	short	-	-	-	short	short
R90	-	short	open	-	-	-	open	open
R91	-	open	short	-	-	-	short	short
R92	-	short	open	-	-	-	open	open
R68	680Ω	-	open	-	-	-	-	680Ω
R70	open	-	680Ω	-	-	-	-	open
R73	680Ω	-	open	-	-	-	-	680Ω
R75	open	-	680Ω	-	-	-	-	open
R78	680Ω	-	open	-	-	-	-	680Ω
R80	open	-	680Ω	-	-	-	-	open
R82	-	-	-	-	-	open	-	short
R84	-	-	-	-	-	short	-	open

- : Can be either open (DNF) or short

DNF : Unmounted

INV1 : an inverter board connected to CN1 and CN2

INV2 : an inverter board connected to CN3 and CN4

HV INV : a high voltage inverter board with PFC connected to CN1 and CN2

\*1 Inductive position sensor.

\*2 3-phase smart gate driver.

\*3 INV1, Encoder and Smart driver are available

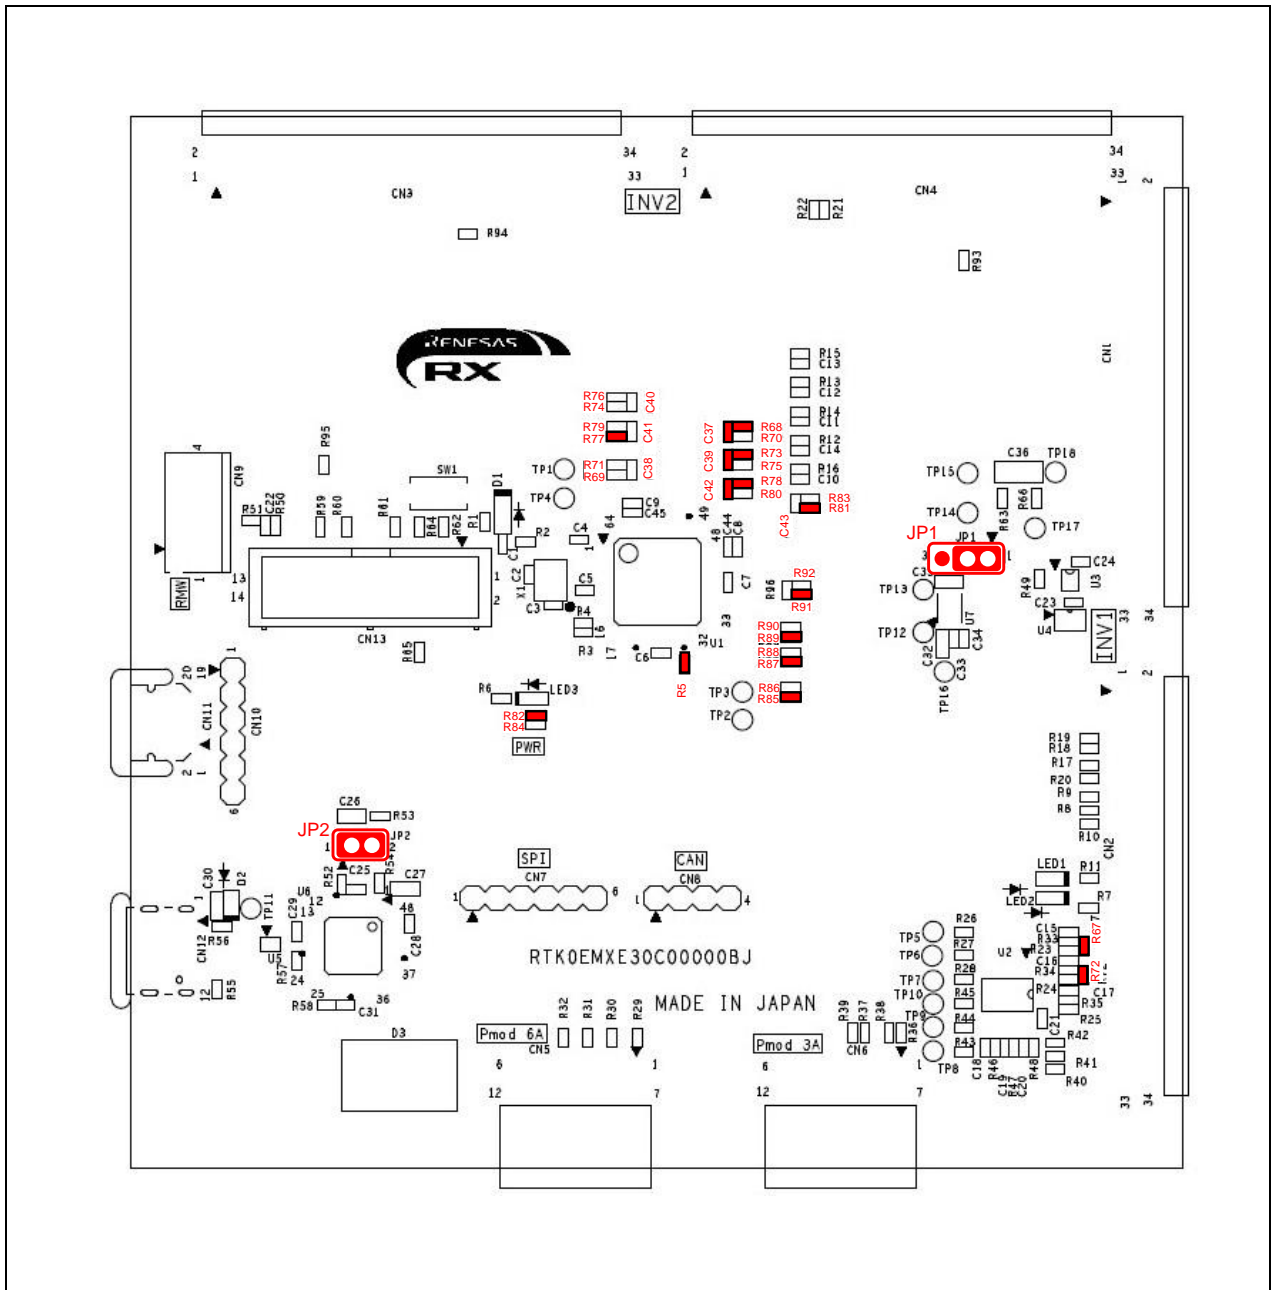


Figure 4-4 Default jumper pin and jumper resistor, LPF setting

### 4.6 Hardware Setup

Figure 4-5 show a connection example when using this product with the inverter board kit (product name: MCI-LV-1, model name: RTK0EM0000S04020BJ) and the communication board (product name: MC-COM, model name: RTK0EMXC90S00000BJ).

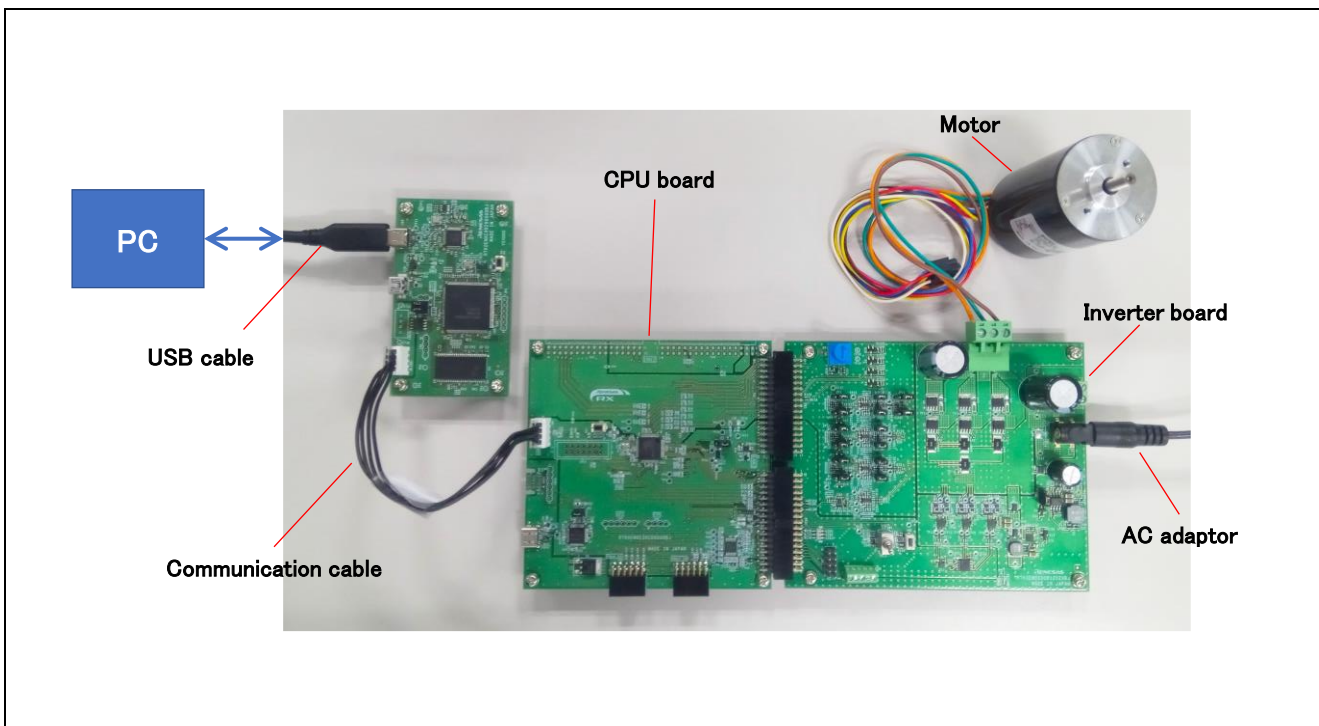


Figure 4-5 Board connection example

## 5. CPU Board Specification

This section describes the specification of the CPU Board.

### 5.1 Functions

#### 5.1.1 Power supply

When not connected to the inverter board, power should be supplied from the USB connector. When connecting to the inverter board, power supply from the USB connector or from the inverter board will be automatically selected. USB power supply has priority. The MCU operation voltage can be selected at either 5 V or 3.3 V for this product. The operation voltage is switched with JP1 as shown in Table 4-2.

#### 5.1.2 On-board debugger

This product has the on-board debugger circuit, E2 On-Board (hereinafter called “E2OB”). You can write a program (firmware) of RX26T with it. When you write a program, open (remove) JP2 and connect the CPU board to PC with USB cable. E2OB operates as debugger equivalent to E2 emulator Lite. If connecting from Integrated Development Environment or flash programming tool (e.g. Renesas Flash Programmer), set the type of debugger (tool) to “E2 emulator Lite”.

After writing a program, short JP2 for CPU board operation.

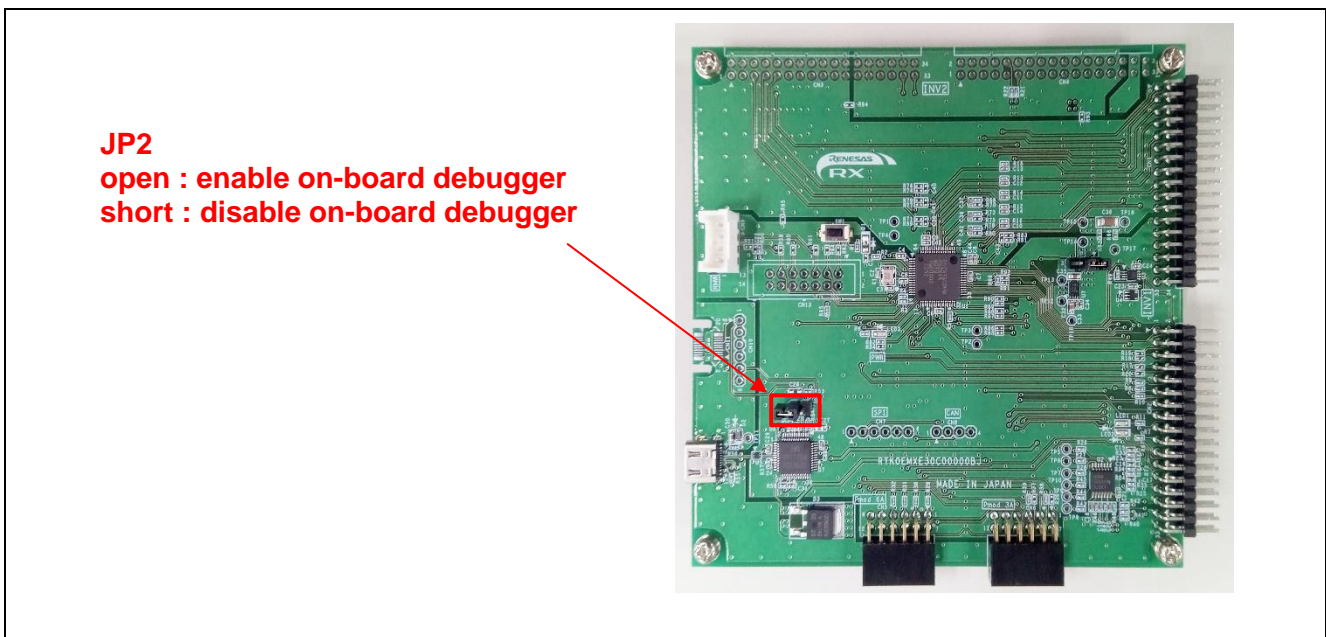


Figure 5-1 JP2 setting

### 5.1.3 Inverter board connector

Max 2 inverter boards can be connected to this product. This product has connector for 1st inverter board, and through holes for 2nd inverter board. 1st inverter board is connected with CN1 and CN2, and 2nd inverter board is connected with CN3 and CN4. The pin assignments of the connectors are shown in Table 5-1, Table 5-2, Table 5-3, Table 5-4.

**Table 5-1 1st inverter board connector (CN1) pin assignment**

Pin No.	Pin Function	RX26T Pin	Pin No.	Pin Function	RX26T Pin
1	HV Temperature	P46/AN006 (*)	2	AGND	- (AVSS)
3	VPN	P43/AN003	4	AGND	- (AVSS)
5	IU	P40/AN000	6	NC	-
7	IV	P41/AN001	8	NC	-
9	IW	P42/AN002	10	NC	-
11	VU	P44/AN004 (*)	12	VV	P45/AN005 (*)
13	VW	P46/AN006 (*)	14	AGND	- (AVSS)
15	VPFC	P44/AN004 (*)	16	NC	-
17	VR / IPFC2	P47/AN206	18	AGND	- (AVSS)
19	AVCC	- (AVCC)	20	AVCC	- (AVCC)
21	AGND	- (AVSS)	22	AGND	- (AVSS)
23	VCC	- (VCC)	24	VCC	- (VCC)
25	GND	- (VSS)	26	GND	- (VSS)
27	UN	P74/GTIOC0B	28	GND	- (VSS)
29	UP	P71/GTIOC0A	30	GND	- (VSS)
31	VN	P75/GTIOC1B	32	GND	- (VSS)
33	VP	P72/GTIOC1A	34	GND	- (VSS)

(\*) selected with jumper resistor

**Table 5-2 1st inverter board connector (CN2) pin assignment**

Pin No.	Pin Function	RX26T Pin	Pin No.	Pin Function	RX26T Pin
1	WN	P76/GTIOC2B	2	GND	- (VSS)
3	WP	P73/GTIOC2A	4	GND	- (VSS)
5	DRV_SCK	PB3/RSPCKA	6	DRV_RXD	PB0/MOSIA
7	DRV_TXD	PB4/MISOA	8	DRV_CS	PD6/SSLA0
9	BUS_POWER_IN	-	10	INV_CONNECTED	-
11	SAFE_LOCK	-	12	OC#	P96/GTETRGB
13	DRV_nFault	P70/GTETRGA (*)	14	DRV_EN	P22
15	CON_MOT_SEL	P90 (*)	16	SW1	P21
17	SW2	P20	18	LED1	P65
19	LED2	PB5 (*)	20	NC	-
21	HALL_U	P11/IRQ1	22	HALL_V	P00/IRQ2
23	HALL_W	PE2/IRQ0	24	SIO_SDA	PB2/SDA
25	SCK_SCL	PB1/SCL	26	CSN_IRQN/ENC_Z	P01/GTETRGC
27	IPS_A ENC_A	P52/AN200 (*) P94/GTIOC5A (*)	28	IPS_A#	P53/AN201 (*)
29	IPS_B ENC_B	P54/AN202 (*) P91/GTIOC5B (*)	30	IPS_B#	P64/AN210 (*)
31	GND	- (VSS)	32	GND	- (VSS)
33	+5V	-	34	+5V	-

(\*) selected with jumper resistor



Table 5-3 2nd inverter board connector (CN3) pin assignment

Pin No.	Pin Function	RX26T Pin	Pin No.	Pin Function	RX26T Pin
1	NC	-	2	AGND	- (AVSS)
3	VPN	P64/AN210 (*)	4	AGND	- (AVSS)
5	IU	P52/AN200 (*)	6	NC	-
7	IV	P53/AN201 (*)	8	NC	-
9	IW	P54/AN202 (*)	10	NC	-
11	NC	-	12	NC	-
13	NC	-	14	AGND	- (AVSS)
15	NC	-	16	NC	-
17	NC	-	18	AGND	- (AVSS)
19	AVCC	- (AVCC)	20	AVCC	- (AVCC)
21	AGND	- (AVSS)	22	AGND	- (AVSS)
23	VCC	- (VCC)	24	VCC	- (VCC)
25	GND	- (VSS)	26	GND	- (VSS)
27	UN	P90/GTIOC6B (*)	28	GND	- (VSS)
29	UP	P93/GTIOC6A	30	GND	- (VSS)
31	VN	P91/GTIOC5B (*)	32	GND	- (VSS)
33	VP	P94/GTIOC5A (*)	34	GND	- (VSS)

(\*) selected with jumper resistor

Table 5-4 2nd inverter board connector (CN4) pin assignment

Pin No.	Pin Function	RX26T Pin	Pin No.	Pin Function	RX26T Pin
1	WN	P92/GTIOC4B	2	GND	- (VSS)
3	WP	P95/GTIOC4A	4	GND	- (VSS)
5	NC	-	6	NC	-
7	NC	-	8	NC	-
9	BUS_POWER_IN	-	10	INV_CONNECTED	-
11	SAFE_LOCK	-	12	OC#	P70/GTETRGA (*)
13	NC	-	14	NC	-
15	NC	-	16	NC	-
17	NC	-	18	NC	-
19	NC	-	20	NC	-
21	NC	-	22	NC	-
23	NC	-	24	NC	-
25	NC	-	26	NC	-
27	NC	-	28	NC	-
29	NC	-	30	NC	-
31	GND	- (VSS)	32	GND	- (VSS)
33	+5V	-	34	+5V	-

(\*) selected with jumper resistor

Figure 5-2 show a connection example when using this product with the inverter board and the communication board. When using INV2, mount CN3 and CN4, and mount jumper resistors and LPF according to "4.5 Jumper Settings".

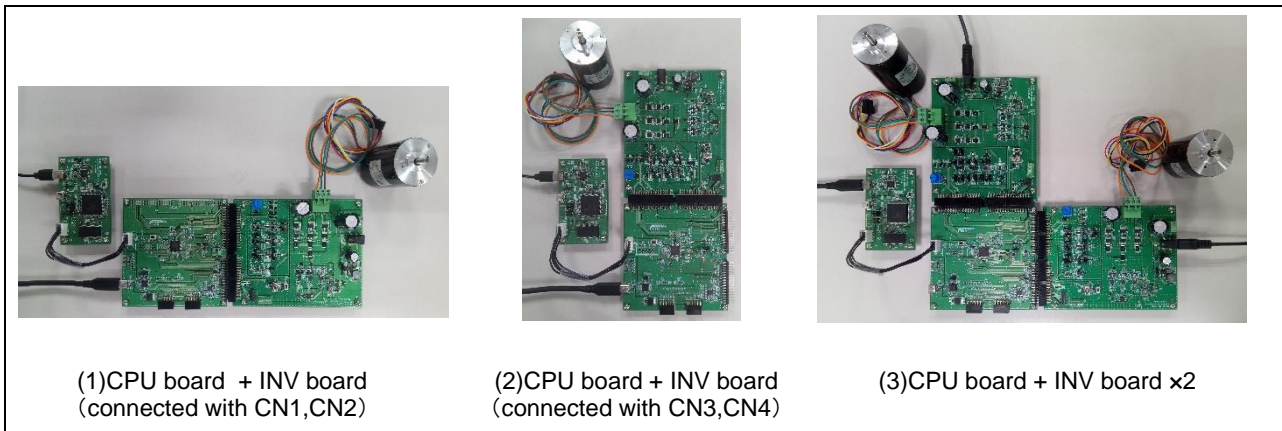


Figure 5-2 Board connection of CPU board, INV board and COM board

5.1.4 Serial communication

For serial communication using Renesas Motor Workbench, the CPU board has SCI connector. Pin assignment for SCI connector is listed in Table 5-5.

Table 5-5 SCI connector (CN9) pin assignment

Pin No.	Pin Function	RX26T Connection Pin
1	GND	-
2	MCU RXD	PD5/RXD1
3	MCU TXD	PD3/TXD1
4	VCC	-

5.1.5 Reset circuit

This product has a reset circuit to enable power-on reset or external reset on MCU. Push the tact switch (SW1) to externally reset MCU.

### 5.1.6 LED

This product has 2 controllable LEDs, so that they can be used for program debug and the system. LED switches ON when output from the corresponding port is "LOW" and switches OFF when output is "HIGH". Pin assignment for corresponding LEDs is listed in Table 5-6.

**Table 5-6 LED pin assignment**

RX26T pin output		LED1	LED2
P65	HIGH	OFF	-
	LOW	ON	-
PB5	HIGH	-	OFF
	LOW	-	ON

### 5.1.7 CAN Communication

This product has through holes for CAN communication. Note that CAN driver is not equipped. Pin assignment for CAN communication connector is listed in Table 5-7.

**Table 5-7 CAN communication pin assignment (CN8)**

Pin No.	RX26T pin
1	VCC
2	P92/CTX0
3	P93/CRX0
4	VSS

### 5.1.8 SPI Communication

This product has through holes for SPI communication. Pin assignment for SPI communication connector is listed in Table 5-8.

**Table 5-8 SPI communication pin assignment (CN7)**

Pin No.	RX26T pin
1	PD6/SSLA0
2	PB0/MOSIA
3	PB4/MISOA
4	PB3/RSPCKA
5	VSS
6	VCC

## 5.1.9 Pmod

This product has two connectors for Pmod module connection. Pin assignments are shown in Table 5-9 and Table 5-10.

**Table 5-9 Pmod Type 3A connector pin assignment (CN6)**

No.	RX26T port	No.	RX26T port
1	PD6_CTS1#	7	PD7_IRQ8
2	PD4_TXD12	8	PB5
3	PB6_RXD12	9	P95
4	PB4_MISOA	10	P93
5	VSS	11	VSS
6	VCC	12	VCC

**Table 5-10 Pmod Type 6A connector pin assignment (CN5)**

No.	RX26T port	No.	RX26T port
1	PD7_IRQ8	7	PD4
2	PB5	8	PB6
3	PB1_SCL	9	P95
4	PB2_SDA	10	P93
5	VSS	11	VSS
6	VCC	12	VCC

## 5.2 RX26T pin function list

Table 5-11 RX26T pin function list

Pin number	RX26T pin function	Signal function
1	EMLE	Emulator
2	IRQ2	HALL_V
3	VCL	-
4	MD	Emulator
5	GTETRGC/(IRQ4)	ENC_Z / CSN_IRQN
6	RES#	Emulator
7	XTAL	Crystal
8	VSS	-
9	EXTAL	Crystal
10	VCC	-
11	IRQ0	HALL_W
12	TRST#/PD7/IRQ8	Emulator / INT
13	TMS/SSLA0/CTS1#	Emulator / UART / SPI
14	TDI/RXD1	Emulator / UART
15	TCK/TXD12/PD4	Emulator / UART
16	TDO/TXD1	Emulator / UART
17	RXD12/PB6	UART
18	PB5	RESET/LED2
19	PB4/MISOA	UART / SPI
20	RSPCKA	SPI
21	SDA	I2C
22	SCL	I2C
23	MOSIA/TMO0	SPI
24	VCC	-
25	GTETRGB/POE4#	OC#
26	VSS	-
27	P95/GTIOC4A	GPIO
28	GTIOC5A	ENC_A
29	P93/CRX0/GTIOC6A	GPIO / CRX
30	CTX0/GTIOC4B	CTX
31	GTIOC5B	ENC_B
32	P90/GTIOC6B	CON_MOT_SEL
33	GTIOC2B/MTIOC4D	WN
34	GTIOC1B/MTIOC4C	VN
35	GTIOC0B/MTIOC3D	UN
36	GTIOC2A/MTIOC4B	WP
37	GTIOC1A/MTIOC4A	VP
38	GTIOC0A/MTIOC3B	UP
39	GTERTGA/POE0#/IRQ5	nFault
40	VCC	-
41	VSS	-
42	P22/TMO4	DRV_EN
43	P21	SW1
44	P20/IRQ7	SW2
45	P65	LED1
46	AN210	IPS_B#
47	AVCC	-
48	AVSS	-
49	AN202	IPS_B
50	AN201	IPS_A#
51	AN200	IPS_A
52	AN206	VR
53	AN006	VW
54	AN005	VV
55	AN004	VU
56	AN003	VDC

Pin number	RX26T pin function	Signal function
57	AN002	IW
58	AN001	IV
59	AN000	IU
60	NC	-
61	AVCC	-
62	AVSS	-
63	NC	-
64	IRQ1	HALL_U

## 6. Design and Manufacture Information

You can obtain information on the design and manufacture of this product from [renesas.com](https://www.renesas.com).

## 7. Website and Support

In order to learn, download tools and documents, apply technical support for RX family MCU and its kit, visit the below Web site.

- RX Product Information [renesas.com/rx](https://www.renesas.com/rx)
- Renesas Support [renesas.com/support](https://www.renesas.com/support)

**Revision History**

Rev.	Date	Description	
		Page	Summary
1.00	August 25, 2023	-	First edition



---

MCB-RX26T Type C User's Manual

Publication Date: Rev 1.00 August 25, 2023

Published by: Renesas Electronics Corporation

---

# MCB-RX26T Type C User's Manual



Renesas Electronics Corporation

R12UZ0127EJ0100